

	Function	Page
⑪	Accepts a call	119
	Makes a call	119
	Redial	119
	Accepts a new call when a call is being made (call waiting)	122
⑫	Rejects a call	119
	Ends an active call	123
⑬	Switches the sound on or off	31
	Switches off navigation announcements	31


	Function	Page
⑭	Switches to navigation mode	65
	Calls up the navigation system menu	107
⑮	Calls up the telephone menu	113
⑯	Calls up vehicle settings	54

## Buttons and controller

### Overview



- ① Clear button
- ② Switches the display on/off
- ③ Favorites button
- ④ Back button
- ⑤ Controller

The vehicle may be equipped with the  button for seat settings instead of the display on/off button.



 


For AMG vehicles: the controller is equipped with buttons ① and ④.

### Controller

 
The controller in the center console lets you:



- select menu items on the display
- enter characters
- select a destination on the map
- save entries

The controller can be:


- turned 
- slid left or right 
- slid forwards or back 
- slid diagonally 
- pressed briefly or pressed and held 

### Back button

 
You can use the  button to exit a menu or to call up the basic display of the current operating mode.


- ▶ **To exit the menu:** briefly press the  button.  
COMAND changes to the next higher menu level in the current operating mode.
- ▶ **To call up the basic display:** press the  button for longer than two seconds.  
COMAND changes to the basic display of the current operating mode.


### Clear button

► **To delete individual characters:** briefly press the  button on the control panel.

or


► Briefly press the  clear button on the controller.


► **To delete individual characters:** briefly press the  button on the control panel.


► **To delete an entire entry:** press and hold the  button on the control panel.

or


► Press and hold the  clear button on the controller.

► **To delete an entire entry:** press and hold the  button on the control panel.


► **To delete individual characters:** briefly press the  button on the control panel.

► **To delete an entire entry:** press and hold the  button on the control panel.


### Favorites button

You can assign predefined functions using the  favorites button and call them up by pressing the button (▷ page 49).

### Display off button

You can switch the display off/on using the  button (▷ page 41).

### Seat button

If the controller is equipped with the  button, you can call up the menu for the seat settings (▷ page 56).

## Touchpad

### Touchpad overview

! Do not use any sharp objects on the touchpad. This could damage the touchpad.



- ① Touch-sensitive surface
- ② Favorites button
- ③ Calls up quick access for audio and telephone
- ④ Back button

### Using the touchpad, you can:

- select menu items in the display (▷ page 25).
- enter characters (handwriting recognition) (▷ page 27).
- control the active audio source (▷ page 30).
- create, manage and call up favorites (▷ page 35).
- enter destinations in navigation
- save entries

Further information on operating the touchpad (▷ page 25).

Do not press your fingers too hard on the touchpad. This could cause malfunctions.

### Operating the touchpad

#### Selecting a menu item

