



Illustrated on model 207.3

- 1 Trunk lid
- 2 Trunk lid paneling
- 3 Screw
- 4 Cover
- 5 Clip
- 6 Clip

E40 Trunk lid ambient lamp

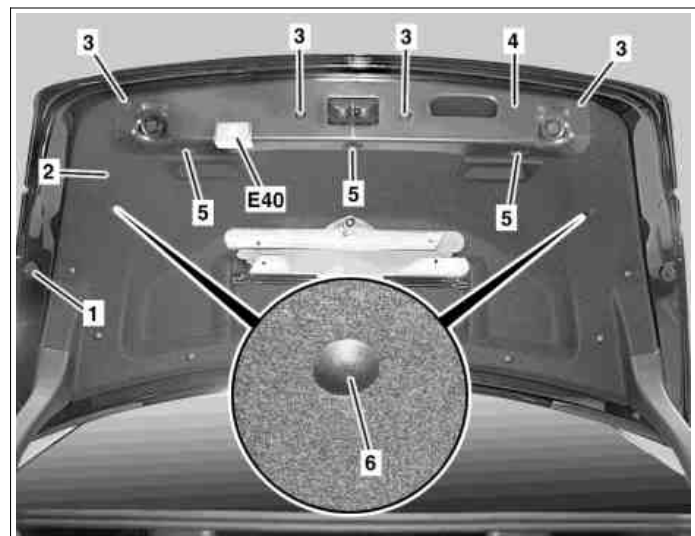

P88.50-2831-11

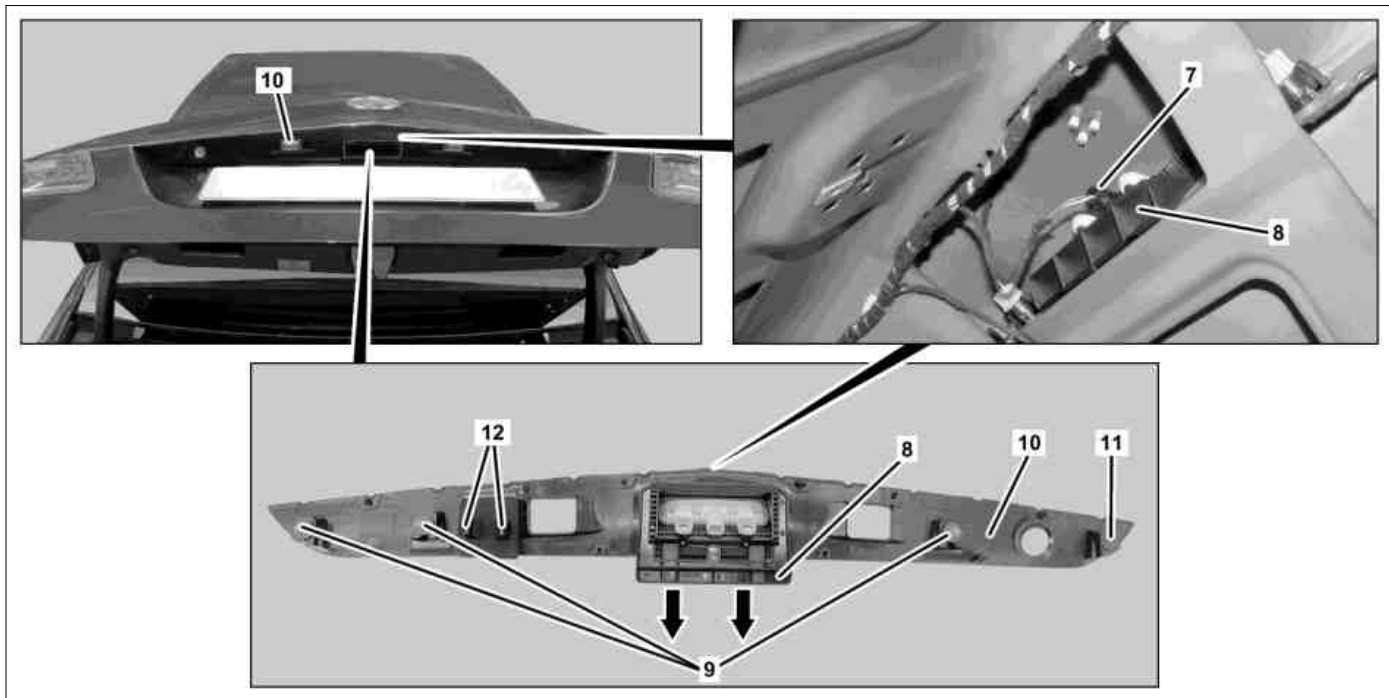



P88.50-2941-09

Shown on model 212.0 remove removed trunk lid paneling

- 7 Electrical connector
- 8 Bow
- 9 Clip
- 10 Trunk lid grab rail
- 11 Adhesive pad
- 12 Catch hook (model 212.0/1)


☒ ☒	Remove/install		
<p>⚠ Danger!</p>	<p>Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof</p>	<p>Keep body parts and limbs well clear of moving parts.</p>	<p>AS00.00-Z-0011-01A</p>
1	Remove screws (3) at cover (4)	Model 207	
2	Unclip clips (5)	☒	*452589016300
3	Loosen cover (4) until electrical connector on trunk lid ambient lamp (E40) is accessible		
4	Disconnect electrical connector from trunk lid ambient lamp (E40) and remove cover (4)		
5	Remove clips (6) from trunk lid paneling (2)		
6	Guide trunk lid paneling (2) out of trunk lid (1) and pivot downward	<p>i Hazard warning triangle remains in bracket.</p>	
7	Disconnect electrical connector (7)		

 8	Pull bow (8) toward rear (arrows) and remove		
9	Unclip catch hook (12)	Model 212.0/1	
10	Unclip clips (9)	i Installation: Check clips (9) for damage, replace if necessary.	
11	Pull trunk lid handle (10) out of extraction hook and remove	i Installation: Replace adhesive pad (11) on trunk lid handle strip (10) 	*140589023300
12	Install in the reverse order		

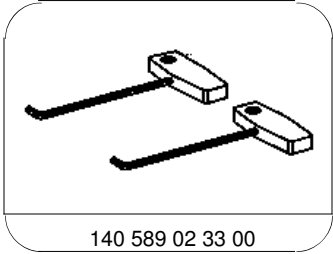

140 589 02 33 00

Pulling hook

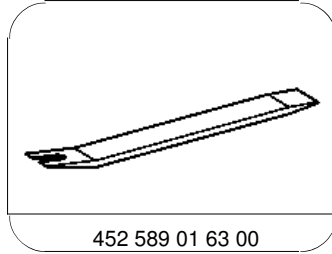

452 589 01 63 00

Snap-release tool