
AR88.50-P-5000EW Remove/install trunk lid 9.9.13

MODEL 212.0/1, 218.3

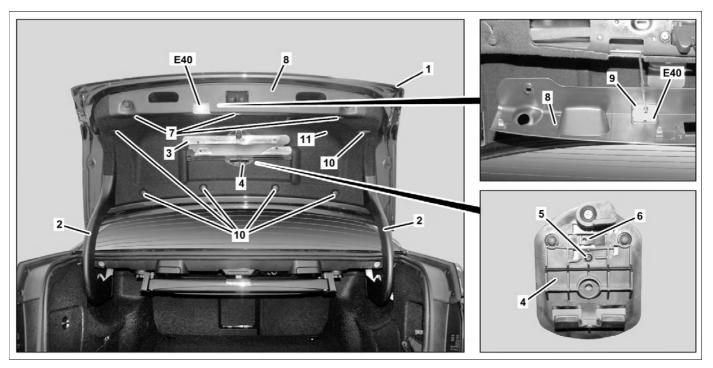


P88.50-2940-09


Shown on model 212.0/1


- Trunk lid
 Hinge bracket trim pie
- 2 Hinge bracket trim piece3 Hazard warning triangle
- 4 Bracket

- 5 Screw
- 6 Catch hook
- 7 Clips
- 8 Cover

- 9 Electrical connector
- 10 Clips
- 11 Trunk lid paneling
- E40 Trunk lid ambient lamp

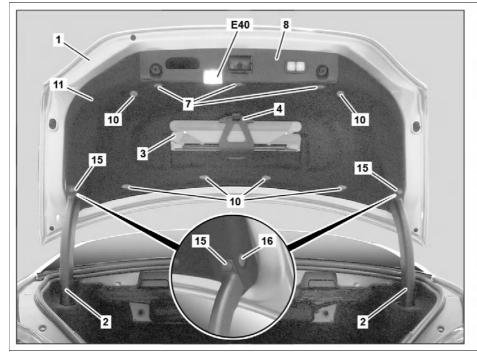

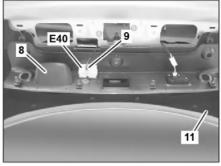

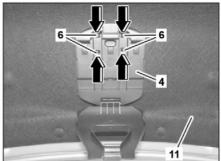

P88.50-3027-09

Illustrated on model 218.3

- Trunk lid 1
- Hinge bracket trim piece
- 2 3 Hazard warning triangle
- 4 Bracket
- 6 Catch hook

- 7 Clips
- 8 Cover
- 9 Electrical connector
- 10 Clips
- 11 Trunk lid paneling

15 Clip

16 Expansion clip

Trunk lid/liftgate ambient lamp E40




P88.50-2939-08


Shown on model 212.0/1

Trunk lid 13 Screw Electrical wiring harness 14 Screw

XX	Remove/install		
⚠ Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
i	Notes on sensor system for trunk lid opening/ closing		AH80.61-P-0001-01A
1.1	Remove hinge bracket trim piece (2)	MODEL 212.0/1	
1.2	Unclip clip (15) and detach hinge bracket paneling (2)	MODEL 218.3	
		S Clip remover	*452589016300
2	Remove warning triangle (3) from bracket (4)		
3	Remove screw/bolt (5)	MODEL 212.0/1	
4.1	Push catch hook (6) toward rear and remove bracket (4)	MODEL 212.0/1	
4.2	Press catch hook (6) in direction of arrow and remove bracket (4)	MODEL 218.3	
5	Unclip clips (7), unclip cover (8) with assembly wedge and remove until electrical connector on trunk lid ambient lamp (E40) is accessible	© Clip remover	*452589016300
		Mounting wedge	*110589035900
6	Disconnect electrical connector (9) from trunk lid ambient lamp (E40) and remove cover (8)		
7	Unclip clips (10) and expansion clip (16)	i Expansion clips (16) only on model 218.3 Clip remover	*452589016300
8	Detach trunk lid trim (11)		
9	Disconnect electrical connector from electrical wiring harness (12) in trunk lid (1)	The number of electrical connectors depends on the equipment installed.	
10	Remove electrical wiring harness (12) from trunk lid (1) and lay down to side		
11	Remove screws/bolts (13)	i Installation: Screw in bolts (13) only until trunk lid (1) can still be moved. These bolts (13) can be tightened after adjusting trunk lid (1).	

12	Loosen screws/bolts (14)	Loosen bolts (14) only until trunk lid (1) car be removed. Installation: Screw in bolts (14) only until trunk lid (1) can still be moved. These bolts (14) can be tightened after adjusting trunk lid (1).	
13	Remove trunk lid (1) out of the hinge levers upwards		
14	Install in the reverse order		
15	Adjust trunk lid (1)		AR88.50-P-5200EW
16	Calibrate reversing camera and 360° camera with STAR DIAGNOSIS	MODEL 212.0/1, 218.3 with CODE 218 (reversing camera) MODEL 212.0/1, 218.3 with CODE 501 (360 degree camera)	
⊯ AD			AD00.00-P-2000-04A

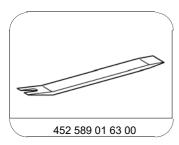

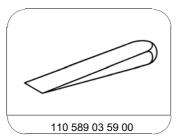

Clip remover

Mounting wedge