


MODEL 212

with CODE (494) USA version

with CODE (536) SIRIUS satellite radio

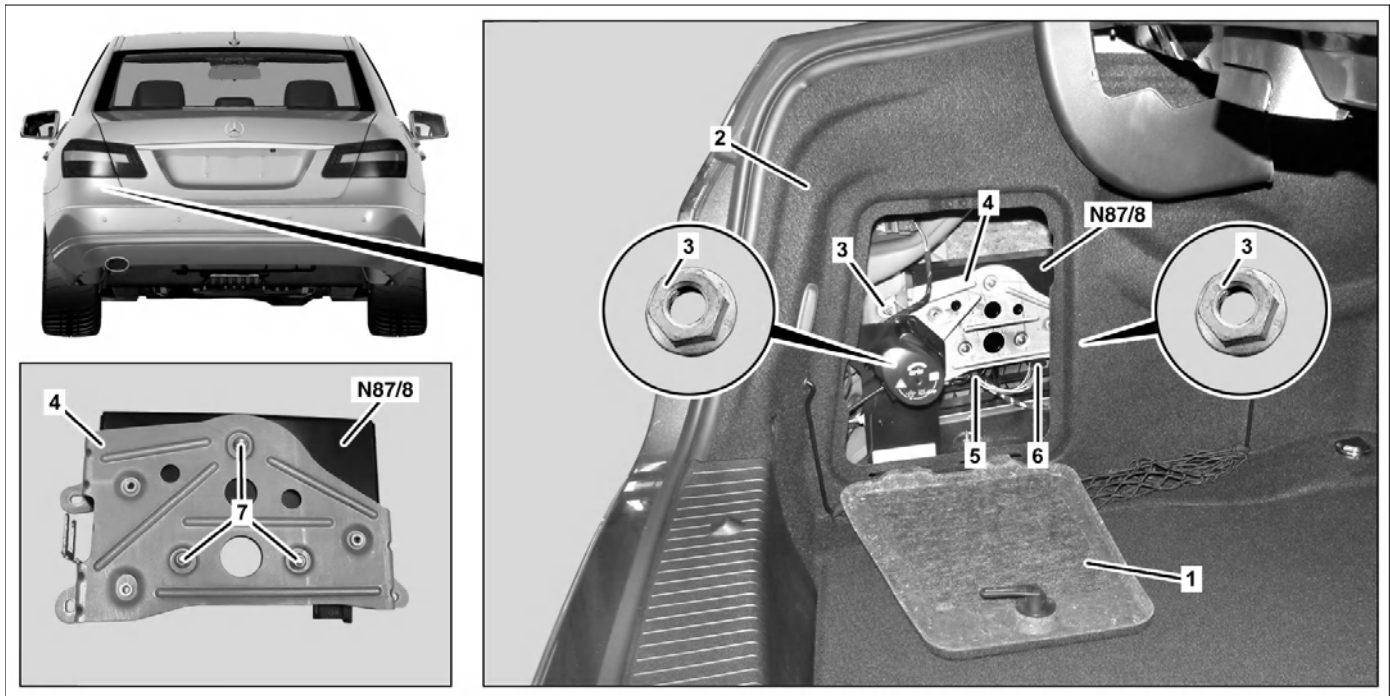







P82.60-7470-09

Shown on vehicle without code (489)
AIRMATIC (air suspension with
 continuous adjustment damping)

- 1 Maintenance flap
 2 Left side paneling
 3 Nuts

- 4 Bracket
 5 Electrical connector
 6 Electrical connector with fiber optic
 cable

- 7 Nuts
 N87/8 SDAR control unit / high
 definition tuner

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Buffer basic data from SDAR / high definition tuner control unit (N87/8) in Star Diagnosis	When replacing SDAR / high definition tuner control unit (N87/8).  Installation: Copy buffered basic data to new SDAR control unit/ high definition tuner (N87/8).	AD00.00-P-2000-04A
2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	 KEYLESS-GO start/stop button only on vehicles with code (889) Keyless-Go.	
3.1	Remove maintenance flap (1) from left side paneling (2)	Only for vehicles without code (489) AIRmatic (air suspension with continuous adjustment damping) and/or for vehicles without code (432) Left and right dynamic multicontour seat	
3.2	Remove pneumatic pump for dynamic seat control	Only for vehicles with code (432) Left and right dynamic multicontour seat	AR91.25-P-1580EW
3.3	Remove AIRmatic central reservoir	Only for vehicles with code (489) AIRmatic (air suspension with continuous adjustment damping)  Place air reservoir with connected air-operated line to one side  Installation: Observe routing of pneumatic line.	AR32.22-P-2017EW
4	Unscrew nuts (3)		
5	Remove bracket (4) with SDAR / high definition tuner control unit (N87/8) and lay down to side with electrical lines connected	 Installation: Observe routing of wiring harness.	
6	Disconnect electrical connector (5)		

7	Detach electrical connector with fiber optic cable (6) and cover up unit connection on the SDAR / high definition tuner control unit (N87/8)		
ⓘ	Notes on avoiding damage to fiber optic cables during repair work	With Media Oriented System Transport (MOST)	AH82.60-P-0001-05AK
8	Remove bracket (4) with SDAR / high definition tuner control unit(N87/8)		
9	Unscrew nut (7) from bracket (4) and remove SDAR / high definition tuner control unit (N87/8)	When replacing the bracket (4) or the SDAR / high definition tuner control unit (N87/8).	
10	Install in the reverse order		