


ENGINE 272, 273 in MODELS 211, 219

- 1 Line
 2 Oil separator
 2a Bolt
 2b Seal
 3 Cylinder head cover
 4 Hose

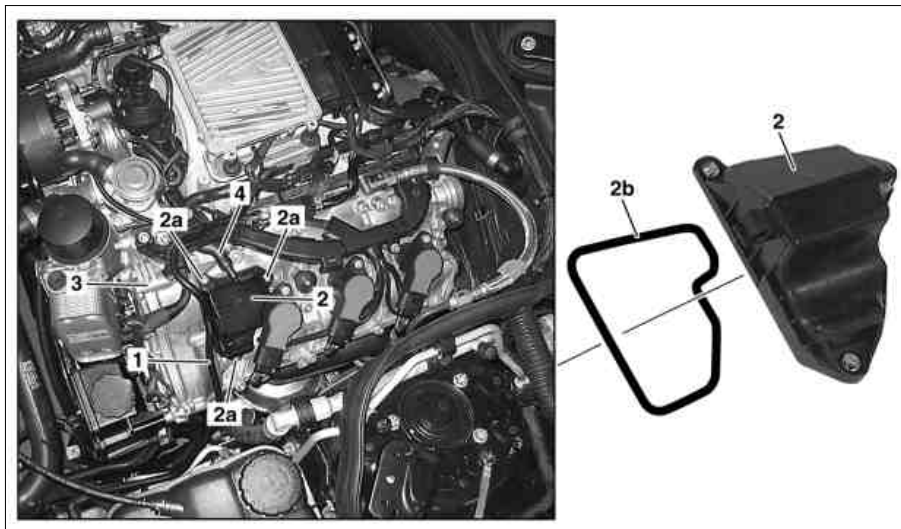

P01.20-2132-05

Modification notes

25.7.05	Bolt connecting oil separator to cylinder head cover	Engine 272	*BA01.20-P-1003-01L
---------	--	------------	---------------------

	Remove/install		
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Remove air filter housing		AR09.10-P-1150TS
2	Unclip line (1) from bracket at oil separator (2)		
3	Unscrew bolts (2a) of oil separator (2)		*BA01.20-P-1003-01L
4	Remove the oil separator (2) from the cylinder head cover (3) and detach it from the hose (4)	<p> Intercept the engine oil that flows out with an absorbent rag.</p> <p> Installation: Check sealing ring (2b) for damage and replace if necessary.</p>	
5	Install in the reverse order		
	Checking		
Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the running engine	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts.	AS00.00-Z-0005-01A
6	Conduct engine test run and check the engine for leaks		
7	Correct the engine oil level		

Crankcase ventilation, cylinder head cover

Number	Designation		Engine 272	Engine 273
BA01.20-P-1003-01L	Bolt connecting oil separator to cylinder head cover	Nm	12	12