


## ENGINES 272, 273 in MODEL 212

- 1 Cable
- 2 Oil separator
- 2a Screw
- 2b Gasket
- 3 Cylinder head cover
- 4 Hose

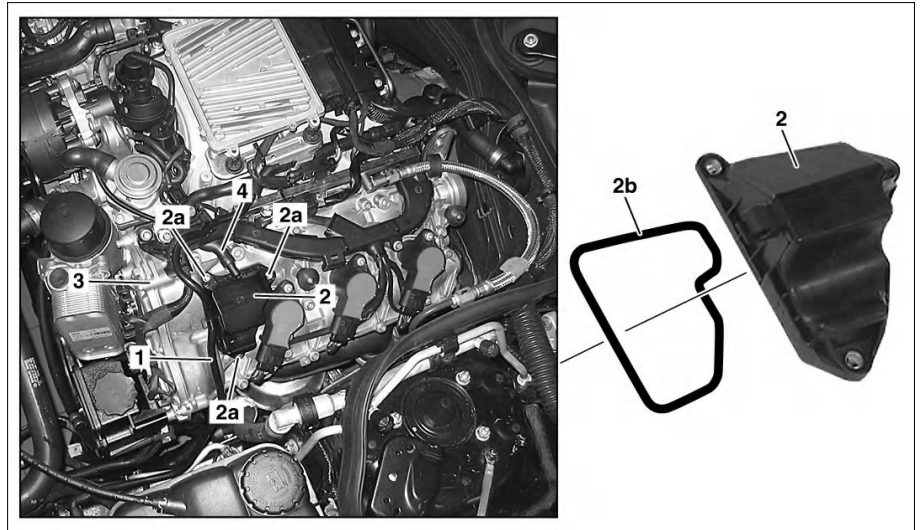

P01.20-2132-05

Remove/install			
⚠	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Remove air filter housing		AR09.10-P-1150EWS
2	Unclip line (1) from bracket at oil separator (2)		
3	Remove bolts (2a) of oil separator (2)	Nm	*BA01.20-P-1003-01L
4	Remove the oil separator (2) from the cylinder head cover (3) and detach it from the hose (4)	<p><b>i</b> Intercept engine oil that flows out with an absorbent rag.</p> <p><b>i</b> <b>Installation:</b> Check seal (2b) for damage and replace if necessary.</p>	
5	Install in the reverse order		
Checking			
⚠ <b>Danger!</b>	<p><b>Risk of accident</b> caused by vehicle starting off by itself when engine is running. <b>Risk of injury</b> caused by contusions and burns during starting procedure or when working near the engine as it is running</p> <p>Conduct engine test run and check engine for leaks</p>	<p>Secure vehicle to prevent it from moving by itself.</p> <p>Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.</p>	AS00.00-Z-0005-01A
6	Conduct engine test run and check engine for leaks		
7	Check engine oil level; correct if necessary		

## Nm Crankcase ventilation, cylinder head cover

Number	Designation		Engine 272	Engine 273
BA01.20-P-1003-01L	Bolt connecting oil separator to cylinder head cover	Nm	12	12