


- MODEL 463.202/222/236/237/270/271/303/340/341  
with CODE S50(Seat ventilation for driver and co-driver seats) as of model year 2010
- MODEL 463.306/336/346  
with CODE S50(Seat ventilation for driver and co-driver seats)
- MODEL 204.0 (except 204.077), 204.2 (except 204.277), 204.9, 212  
with CODE 401(Front deluxe seats, incl. seat heating and seat ventilation)

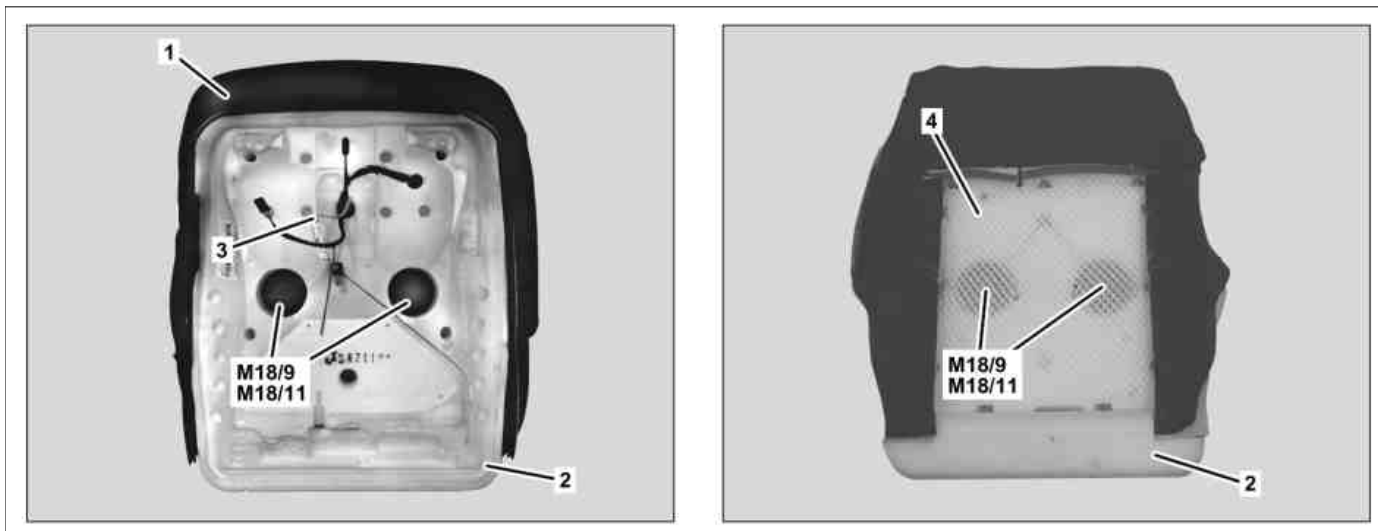

P91.30-2464-08

Shown on model 212.057

- |   |         |   |                           |        |  |
|---|---------|---|---------------------------|--------|--|
| 1 | Cover   | 3 | Electrical wiring harness | M18/9  | Left front seat cushion seat ventilation motors  |
| 2 | Padding | 4 | Net                       | M18/11 | Right front seat cushion seat ventilation motors |

☒ ☒	Remove/install		
1	Remove cover (1) at front seat cushion	MODEL 204, 212	AR91.18-P-1800CW
		MODEL 463	AR91.18-P-1800GP
2	Lift net (4) at padding (2) and remove left front seat cushion seat ventilation motors (M18/9) or right front seat cushion seat ventilation motors (M18/11) from the padding (2)	<b>i</b> <b>Installation:</b> Transfer installation position of left front seat cushion seat ventilation motors (M18/9) or right front seat cushion seat ventilation motors (M18/11) to be replaced at padding (2) to new left front seat cushion seat ventilation motors (M18/9) or right front seat cushion seat ventilation motors (M18/11).	
3	Expose electrical wiring harness (3) at padding (2) and guide out with left front seat cushion seat ventilation motors (M18/9) or right front seat cushion seat ventilation motors (M18/11) under lifted net (4)		
4	Install in the reverse order		