





- MODEL** 463.306/336
with CODE S50 (Seat ventilation for driver and co-driver seats)
- MODEL** 463.222/270/271/303/340/341
as of model year 2010
with CODE S50 (Seat ventilation for driver and co-driver seats)
- MODEL** 463.346
up to model year 2013
with CODE S50 (Seat ventilation for driver and co-driver seats)
- MODEL** 463.202/236/237
as of model year 2010 up to model year 2013
with CODE S50 (Seat ventilation for driver and co-driver seats)
- MODEL** 204.0 (except 204.077), 204.2 (except 204.277), 204.9, 212, 218
with CODE 401 (Front deluxe seats, incl. seat heating and seat ventilation)

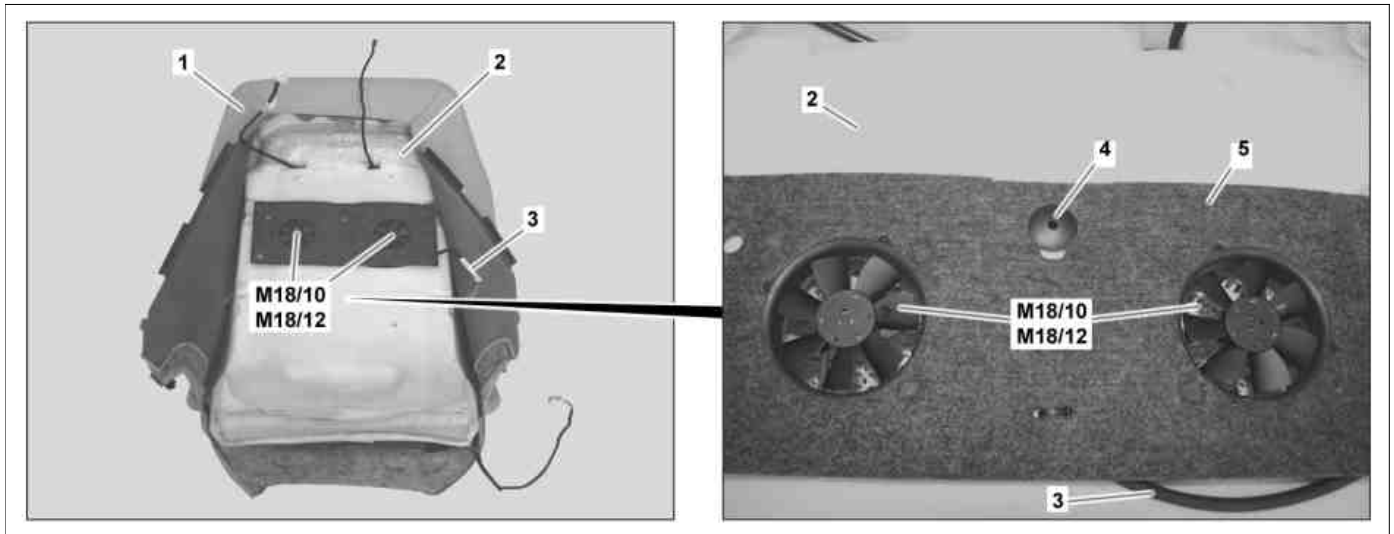

P91.30-2465-08

Shown on model 212.054

1	Cover	4	Clip	M18/12	Right front backrest seat ventilation motors
2	Padding	5	Felt cover		
3	Electrical wiring harness	M18/10	Left front backrest seat ventilation motors		

 	Remove/install		
1	Detach cover (1) with padding (2) at front seat backrest until left front backrest seat ventilation motors (M18/10) or right front backrest seat ventilation motors (M18/12) are accessible	Model 204, 212, 218	AR91.18-P-1820CX
		MODEL 463  Do not separate cover (1) from padding (2).	AR91.18-P-1820GP
2	Unclip clip (4) at padding (2)		
3	Pull left front backrest seat ventilation motors (M18/10) or right front backrest seat ventilation motors (M18/12) with felt cover (5) out of padding (2) and remove with electrical wiring harness (3)		
4	Install in the reverse order		