


MODEL 204, 207, 212, 218

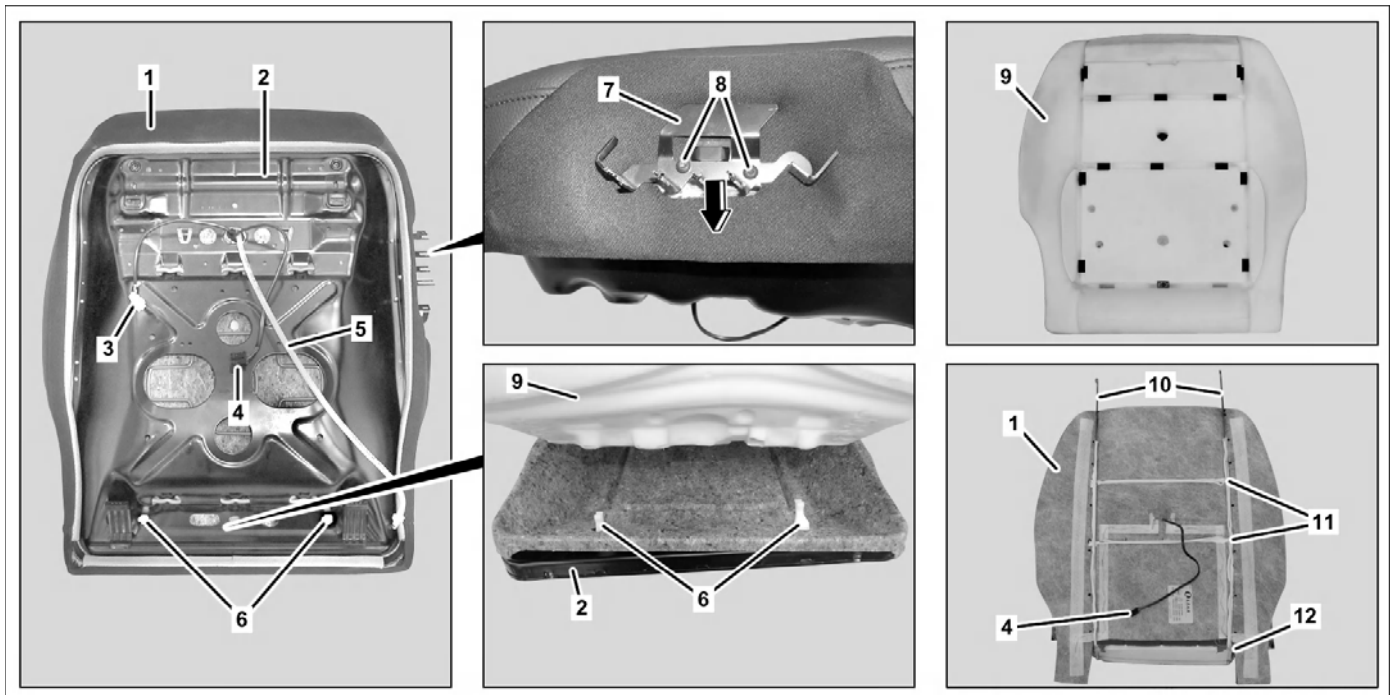


P91.18-2255-09

Shown on MODEL 204.0 with CODE 409 (Left/right front multicontour seats) and CODE 873 (Seat heater for driver and front passenger)



- | | | | | | |
|---|--|---|----------------|----|--------------|
| 1 | Cover | 5 | Pneumatic line | 9 | Padding |
| 2 | Seat cushion frame | 6 | Retaining clip | 10 | Staple wires |
| 3 | Seat occupancy recognition electrical wiring harness, front passenger seat | 7 | Bracket | 11 | Staple wires |
| 4 | Electrical wiring harness for seat heater | 8 | Bolts | 12 | Staple wire |

MODEL 212, 218, shown on right seat cushion with CODE 873 (Seat heater for driver and front passenger)

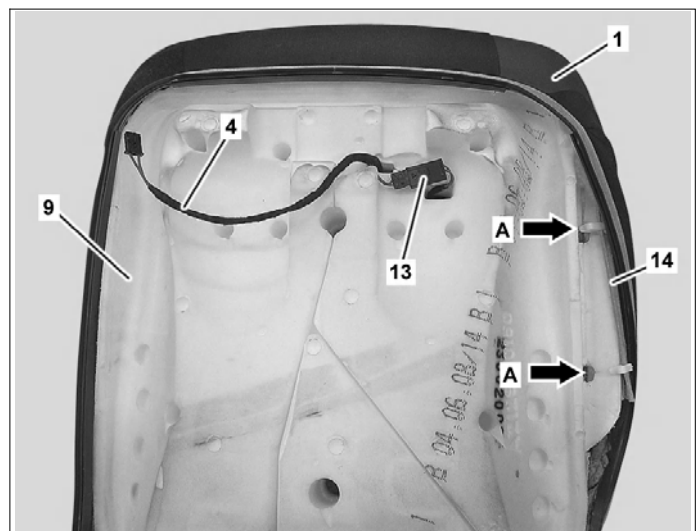- | | |
|----|---|
| 1 | Cover |
| 4 | Electrical wiring harness for seat heater |
| 9 | Padding |
| 13 | Electrical connector for seat heaters |
| 14 | Staple wire |



P91.18-2264-11

 	Remove/install		
1	Remove seat cushion		AR91.10-P-3310CW
2	Remove tray for fire extinguisher	MODEL 218 with CODE 682 (Fire extinguisher)	
3	Unhook cover (1) from seat cushion frame (2)		

4	Remove screws/bolts (8) and remove bracket (7)	MODEL 204 (except 204.9), 207, 212, 218 with CODE 409 (Left/right front multicontour seat) MODEL 212 with CODE 432 (Left and right dynamic multicontour seat) MODEL 218 up to model year 2015 with CODE 432 (Left and right dynamic multicontour seat)	
5	Slip cover (1) over padding (9)		
6	Unclip staple wire (12) from retaining clips (6)	MODEL 204 (except 204.9), 207, 212, 218 with CODE 409 (Left/right front multicontour seat) MODEL 212, 218 with CODE 432 (Left and right dynamic multicontour seat)	
7	Lift cover (1) with padding (9)		
8	Guide electrical wiring harness for front passenger seat occupied recognition (3) through seat cushion frame (2)	Only on passenger seat.	
9	Guide pneumatic line (5) through seat cushion frame (2)	MODEL 204 (except 204.9), 207, 212, 218 with CODE 409 (Left/right front multicontour seat) MODEL 212, 218 with CODE 432 (Left and right dynamic multicontour seat)	
10	Guide electrical wiring harness for seat heater (4) through seat cushion frame (2)	MODEL 204, 207, 212, 218 with CODE 873 (Seat heating for driver and front passenger)	
11	Route electrical wiring harness for seat heater (4) together with electrical wiring harness for seat ventilation motors through seat cushion frame (2)	MODEL 204, 207, 212, 218 with CODE 401 (Climatised front seats)	
12	Remove cover (1) with padding (9)		
13	Disconnect seat heater electrical connector (13) at bottom of cushion (9)	MODEL 212, 218 with CODE 873 (Seat heating for driver and front passenger)	
14	Unclip staple wire (14) at padding (9) (arrows A)	MODEL 212, 218	
15	Unclip staple wires (10, 11) at padding (9)	i MODEL 212, 218 Only the upper staple wire (11) is installed.	
16	Lift cover (1) and guide electrical wiring harness for seat heater (4) through padding (9)	MODEL 204, 207, 212, 218 with CODE 873 (Seat heating for driver and front passenger)	
17	Remove cover (1) from padding (9)		
18	Pull staple wires (10, 11) out of cover (1)	When replacing the cover (1). i The option of removing the staple wires (10, 11) from the cover (1) depends on the vehicle equipment and may vary as a result. i MODEL 212, 218 Only the upper staple wire (11) is installed.	
19	Pull staple wire (12) out of cover (1)	MODEL 204 (except 204.9), 207, 212, 218 with CODE 409 (Left/right front multicontour seat) MODEL 212, 218 with CODE 432 (Left and right dynamic multicontour seat) When replacing the cover (1). i The option of removing the staple wire (12) from the cover (1) depends on the vehicle equipment and may vary as a result.	
20	Modify heating elements of seat heater at cover (1)	MODEL 212, 218 with CODE 873 (Seat heating for driver and front passenger) When replacing the cover (1). i Reuse seat heater heating elements. The given bonding need not be renewed for the new installation.	
21	Install in the reverse order		