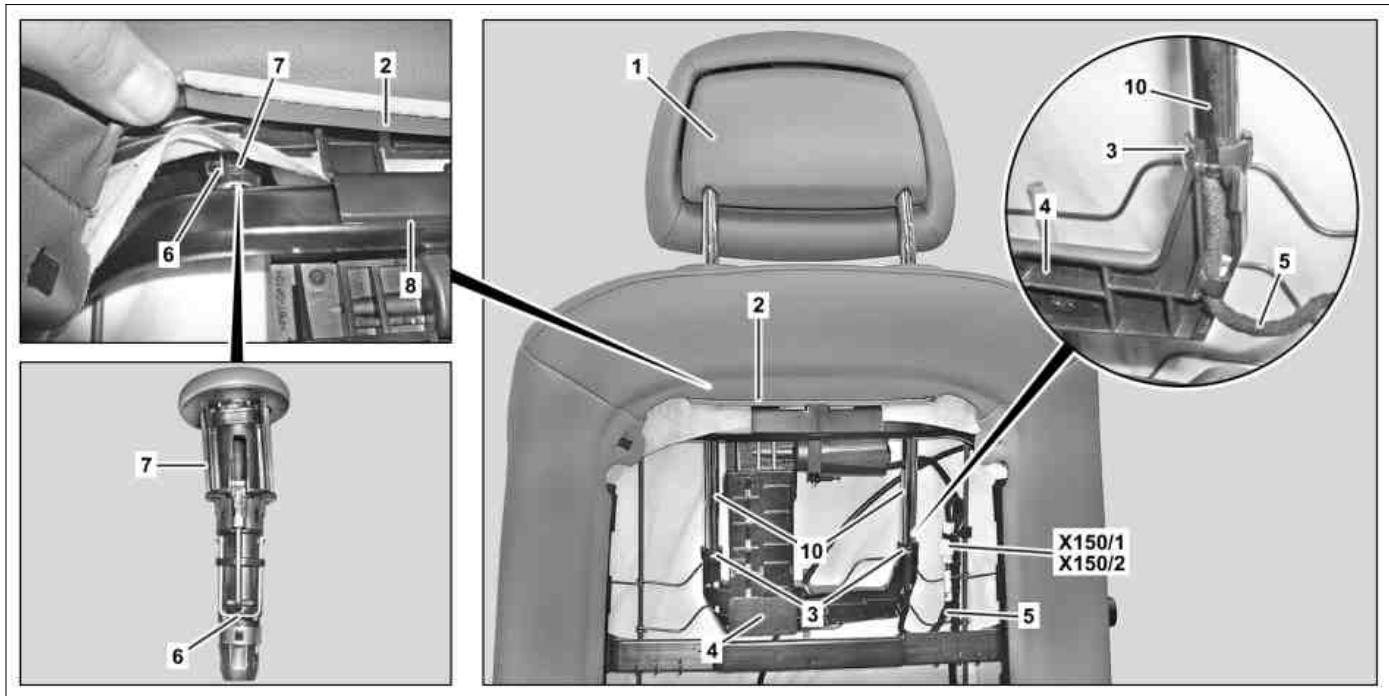


MODEL 166, 204.0 /2 /9 (except , 204.077 /277),
211.0 /2 /6 as of 15.8.07,
212, 218,
219.3 as of 14.8.07

MODEL 463.202 /222 /236 /237 /270 /271 /303 /340 /341
as of model year 2010

MODEL 463.306 /336 /346

 
 
 

 


P91.16-2672-09

Shown on model 204.052, left front seat with code (275)
Memory package (driver seat, steering column, mirrors)

- | | |
|--|--|
| <ul style="list-style-type: none"> 1 Head restraint 2 Securing strap 3 Supports 4 Bracket 5 Electrical line 6 Spring 7 Head restraint guide | <ul style="list-style-type: none"> 8 Backrest frame 10 Head rest supports X150/1 Driver NECK-PRO head restraint electrical connector X150/2 Front passenger NECK-PRO head restraint electrical connector |
|--|--|

☒ ☒	Remove/install		
⚠ Danger!	Risk of injury caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove seat-back lining from left or right front seat backrest	Model 166 Model 204, 212, 218 Model 211 at driver seat Model 211 at front passenger seat without code (842) Folding front passenger backrest (usable as table) Model 219 Model 463	AR91.10-P-1910GQ AR91.10-P-1910CW AR91.10-P-1910TB AR91.10-P-1910TX AR91.10-P-1910GP
2	Adjust front seat backrest toward rear until head restraint (1) can be removed from front seat backrest		
3.1	Disconnect battery ground line	Model 166 Model 204 Model 212, 218	AR54.10-P-0003GZ AR54.10-P-0003CW AR54.10-P-0003EW AH54.10-P-0001-01A
ⓘ	Notes on battery		

3.2	Switch off the ignition and remove the transmitter key from the EIS control unit	Model 211, 219, 463  On vehicles with code (889) Keyless go: Press keyless go start/stop button repeatedly until ignition is switched off. Remove the transmitter key from the vehicle and store it in a location beyond its transmission range (at least 2 meters).	
4	Disconnect driver NECK-PRO head restraint electrical connector (X150/1) or front passenger NECK-PRO head restraint electrical connector (X150/2)	Model 204, 211, 212, 218, 219 Model 463.202/222/236/237/303/340/341 as of model year 2010 Model 463.306/336/346	
5	Unclip head restraint (1) from left and right mount (3) of bracket (4)	Model 166 with code (275) Memory package (driver seat, steering column, mirrors) Model 204 with code (242) Electrically adjustable front passenger seat with memory or with code (275) Memory package (driver seat, steering column, mirrors) Model 212, 218 with code (275) Memory package for electrically adjustable front seats MODEL 463  Installation: Ensure head restraint supports (10) are properly seated in mounts (3) of bracket (4).	
6	Route electrical line (5) of head restraint (1) through right mount (3)	Model 204, 211, 212, 218, 219 Model 463.202/222/236/237/303/340/341 as of model year 2010 Model 463.306/336/346  Observe routing of electrical line (5).	
7	Unhook securing strap (2) of cover from backrest frame (8) and pull cover upwards until spring (6) of head restraint guide (7) is accessible	 Do not pull cover too far upward. Otherwise cover can tear at seam.	
8.1	Lift spring (6) of left head restraint guide (7), pull out head restraint (1) and route electrical line (5) through the right head restraint guide (7)	Model 204 without code (275) Memory package (driver seat, steering column, mirrors) or without code (242) Electrically adjustable front passenger seat with memory, Model 212, 218 without code (275) Memory package for electrically adjustable front seats  To remove the head restraint (1) the head restraint (1) must be unlocked at the left head restraint guide (7) using the adjustment button.	
8.2	Lift spring (6) of left head restraint guide (7) and remove head restraint (1)	MODEL 463	
9	Remove head restraint (1)		
10	Install in the reverse order		