

Document title Location and assignment of ground points

Document number gf0019p2000daa

Model 212

W10	Right front battery ground point	Location	GF00.19-P-2000-02DAA
		Assignment (M642)	PE15.00-P-2101DAA
		Assignment (CODE B03, 4U7)	PE15.00-P-2103DAA
		Assignment (M157, 274, 276, 278 as of model year 2015)	PE15.00-P-2101DAI
		Assignment (M157, 274, 276, 278 as of model year 2015)	PE15.00-P-2101DAG
		Assignment (M271 (except 271.9), 272 hybrid)	PE15.00-P-2101DAE
		Assignment (M271.9, 272 (except hybrid), 273)	PE15.00-P-2101DAC
		Assignment (M651 (except hybrid))	PE15.00-P-2101DAB
W11	Combustion engine ground point	Location (M272, M273, M271, M642, M651, M156, M276.8, M276.9)	GF00.19-P-2000-01DAA
W11	Combustion engine ground point	Location (M157, M278, M274, M651)	GF00.19-P-2000-02DAA
		Assignment (M156)	PE07.61-P-2101DAC
		Assignment (M157, 278)	PE07.08-P-2101DAF
		Assignment (M271 (except 271.958))	PE07.08-P-2101DAA
		Assignment (M271.958)	PE07.61-P-2101DAF
		Assignment (M274)	PE07.08-P-2101DAL
		Assignment (M276.8)	PE07.08-P-2101DAO
		Assignment (M276.9 (except hybrid))	PE07.08-P-2101DAI
		Assignment (M276.9 (hybrid))	PE07.08-P-2101DAK
		Assignment (M651 up to 05/10)	PE07.16-P-2101DAG
W11/1	Combustion engine ground point (ground strap)	Location	GF00.19-P-2000-01DAA
W11/1	Combustion engine ground point (ground strap)	Location (M156)	GF00.19-P-2000-02DAA
		Assignment	PE07.61-P-2101DAC
W11/3	Ground (engine, left)	Location	GF00.19-P-2000-01DAA
		Assignment	PE07.08-P-2101DAK
W11w1	Left cylinder bank ground point (engine)	Location	GF00.19-P-2000-01DAA
		Assignment (M272 DE)	PE07.08-P-2101DAC
		Assignment (M272 KE)	PE07.61-P-2101DAE
		Assignment (M273 KE)	PE07.61-P-2101DAA
W11w2	Right cylinder bank ground point (engine)	Location	GF00.19-P-2000-02DAA
		Assignment (M272 DE)	PE07.08-P-2101DAC
		Assignment (M272 KE)	PE07.61-P-2101DAE
		Assignment (M273 KE)	PE07.61-P-2101DAA
W12	Ground point (center console)	Location (M651 up to 05/10)	GF00.19-P-2000-02DAA
W12	Ground point (center console)	Location	GF00.19-P-2000-04DAA
		Assignment (M642)	PE07.16-P-2101DAC
		Assignment (M651 up to 05/10)	PE07.16-P-2101DAG
W13/1	Ground point (left rear window heater)	Location	GF00.19-P-2000-04DAA
		Assignment (212.0/1)	PE54.21-P-2108DAG
		Assignment (212.2)	PE54.21-P-2108DAC
W13/2	Ground point (right rear window heater)	Location	GF00.19-P-2000-05DAA
		Assignment	PE54.21-P-2108DAG
W15/1	Right footwell ground point	Location	GF00.19-P-2000-05DAA
		Assignment	PE00.19-P-2800DAD
W15/2	Left footwell ground point	Location	GF00.19-P-2000-04DAA
		Assignment	PE00.19-P-2800DAE
W15/5	Left front footwell ground point	Location	GF00.19-P-2000-04DAA
		Assignment	PE00.19-P-2800DAF
W15/7	Right front footwell ground point	Location	GF00.19-P-2000-05DAA
		Assignment	PE00.19-P-2800DAG
W16/3	Left major assembly compartment ground point	Assignment	PE54.15-P-2502DAA
W16/4	Right wheelhouse ground point	Assignment	PE54.10-P-2106DAA
W16/5	Left major assembly compartment electronics ground point	Assignment	PE00.19-P-2800DAE
W16/6	Right major assembly compartment ground point	Location	GF00.19-P-2000-02DAA
		Assignment	PE00.19-P-2800DAE
W18	Left front seat crossmember ground point	Location	GF00.19-P-2000-04DAA
		Assignment	PE00.19-P-2800DAH
W19	Right front seat crossmember ground point	Location	GF00.19-P-2000-05DAA
		Assignment	PE00.19-P-2800DAI
W2	Right front ground point at lamp unit	Location	GF00.19-P-2000-02DAA
		Assignment	PE00.19-P-2800DAA
W2/1	Right front ground point	Location	GF00.19-P-2000-02DAA

		Assignment	PE46.35-P-2101DAA
W2/2	Left front ground point	Assignment	PE46.35-P-2101DAA
W26	Supplemental restraint system (SRS) control unit ground point	Location	GF00.19-P-2000-04DAA
		Assignment	PE91.60-P-2102DAA
		Assignment	PE91.60-P-2105DAB
W3/1	Ground point (right front wheel well)	Location	GF00.19-P-2000-02DAA
		Assignment	PE00.19-P-2800DAA
W48	Left rear roof frame ground point	Location	GF00.19-P-2000-09DAA
		Assignment	PE00.19-P-2800DAC
W48/1	Right rear roof frame ground point	Location	GF00.19-P-2000-09DAA
		Assignment	PE00.19-P-2800DAC
W6	Left rear wheel well ground point	Location	GF00.19-P-2000-06DAA
		Assignment	PE00.19-P-2800DAA
W6/4	Ground point (bumper bracket on left of trunk)	Location	GF00.19-P-2000-06DAA
		Assignment	PE32.22-P-2101DAA
		Assignment	PE32.33-P-2101DAA
W7	Right rear wheel well ground point	Location	GF00.19-P-2000-09DAA
		Assignment	PE00.19-P-2800DAB
W7/1	Right taillamp trunk ground point	Location	GF00.19-P-2000-09DAA
		Assignment	PE00.19-P-2800DAB
W7/6	Rear additional battery ground point	Assignment	PE14.40-P-2101DAB
W7/8	Right wheelhouse trunk ground point	Location	GF00.19-P-2000-09DAA
		Assignment	PE00.19-P-2800DAC
W70	Electronic Stability Program ground point	Location	GF00.19-P-2000-01DAA
		Assignment (ESP as of model year 2014)	PE42.47-P-2000DAC
		Assignment (ESP Basic up to model year 2014)	PE42.47-P-2000DAA
		Assignment (ESP Premium up to model year 2014)	PE42.47-P-2000DAB
		Assignment (hybrid)	PE42.22-P-2101DAA
W8/2	Right tailgate ground point	Location	GF00.19-P-2000-09DAA
		Assignment	PE00.19-P-2800DAC
W8/4	Left tailgate ground point	Assignment	PE54.18-P-2300DAA
W8/8	Right rear ground point	Location	GF00.19-P-2000-09DAA
		Assignment	PE00.19-P-2800DAC
W9	Left front ground point (at lamp unit)	Location	GF00.19-P-2000-01DAA
		Assignment	PE00.19-P-2800DAA
	Location and assignment of ground points - Engine compartment, left		GF00.19-P-2000-01DAA
	Location and assignment of ground points - Engine compartment, right		GF00.19-P-2000-02DAA
	Location and assignment of ground points - Vehicle interior, left		GF00.19-P-2000-04DAA
	Location and assignment of ground points - Vehicle interior, right		GF00.19-P-2000-05DAA
	Location and assignment of ground points, trunk, left		GF00.19-P-2000-06DAA
	Location and assignment of ground points - trunk right		GF00.19-P-2000-09DAA