

P82.10-5843-09


**Illustrated on model 207.3**

- 1 Bolts
- 2 Expansion clip
- 3 Cover
- 4 Electrical connector
- 5 Trunk lid lining
- 6 Electrical connector
- 7 Nut
- 8 Cover
- 9 Gasket




- E3/1 Inner left rear lamp unit
- E4/1 Inner right rear lamp unit
- E40/2 Left ambient lamp and trunk lid warning lamp (model 207)

**Model 212.0/1, shown on left inner rear lamp unit (E3/1) with removed trunk lining**

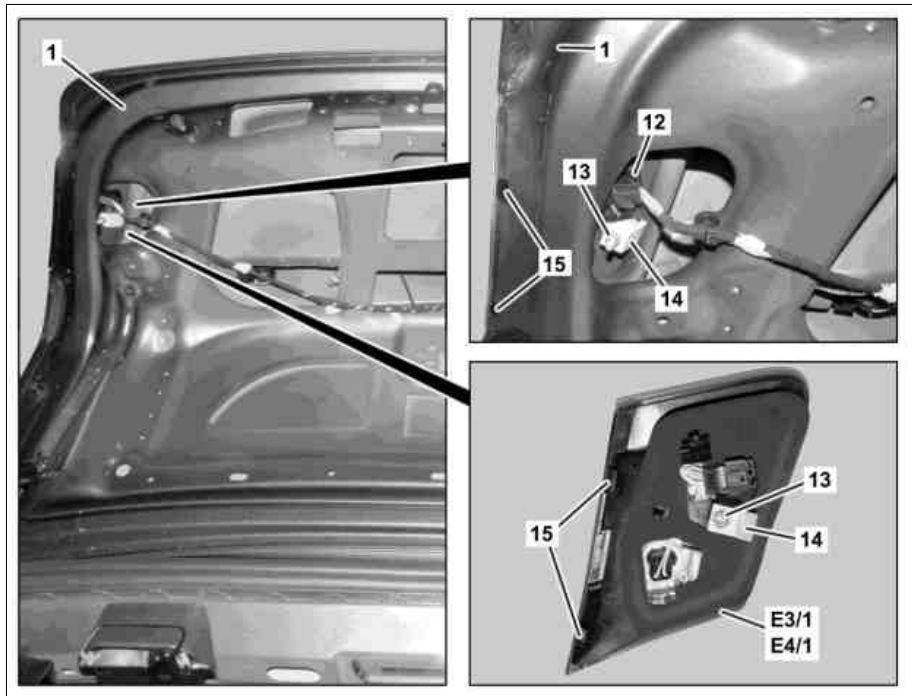
- 1 Trunk lid
- 12 Electrical connector
- 13 Nut
- 14 Bracket
- 15 Fastening shackles
- E3/1 Inner left rear lamp unit
- E4/1 Inner right rear lamp unit



P82.10-5773-06

 	Remove/install		
1	Remove bolts (1)	Model 207	
2	Remove expansion clips (2)		<a href="http://www.vauxhall.com">*452589016300</a>
3	Remove cover (3) from trunk lid (1) and detach electrical connector (4)		
4	Detach trunk lining (5) far enough to enable access to the electrical connector (6)		

5.2	Disconnect electrical connector (12)	Model 212	
6	Unclip cover (8) on trunk lid (1) and remove	Model 207	
7.1	Unscrew nuts (7)	Model 207	
7.2	Slacken off nut (13) far enough until the bracket (14) is disconnected from trunk lid (1)	Model 212	
		<b>i</b> Do not unscrew nut (13) completely.	
8	Remove inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1)	<b>i</b> <b>Installation:</b> Check gasket (9) for signs of damage, replace if necessary. On model 212 check that fastening shackles (15) are correctly seated on trunk lid (1).	
9	Install in the reverse order		

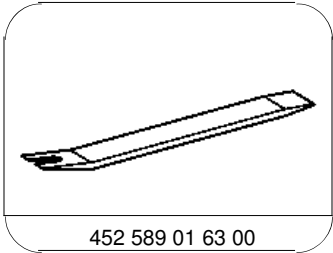

452 589 01 63 00

Snap-release tool