


AR46.20-P-0600-01CW	Turn rack-and-pinion steering to center position and mount steering coupling		
---------------------	--	--	--

- 1 Turn rack-and-pinion steering to center position.  
**i** Turn the rack-and-pinion steering until the marking on the dust cap of the input shaft matches the marking on the control valve housing (arrow).
- 2 Mount steering coupling.

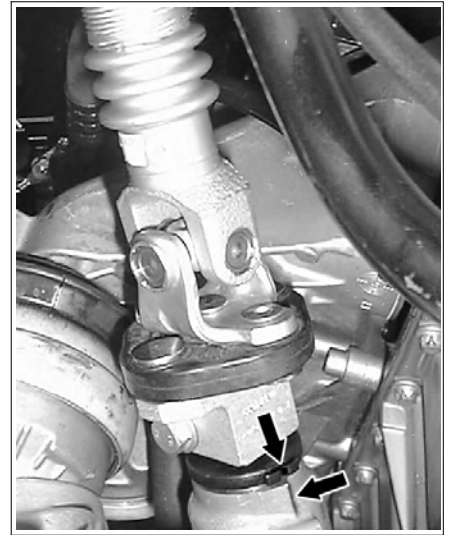

P46.20-2124-02