


MODEL 168, 170, 171, 197, 203, 204.0/2/3, 207, 208, 209, 210, 211, 216, 219, 221, 230
 MODEL 204.9
 up to model year 2013
 MODEL 212
 without CODE 279(Electronic gear selector)

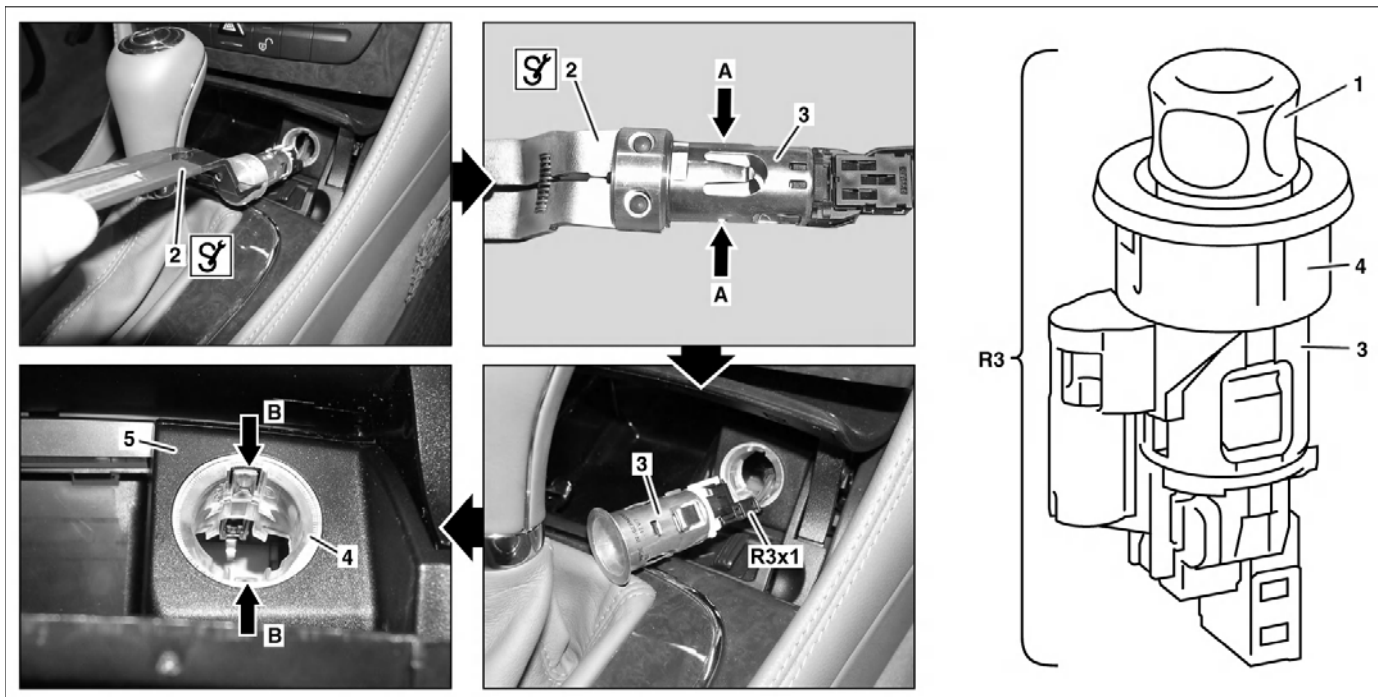


P54.10-2911-09

Shown on model 219

- 1 Insert
- 2 Pliers
- 3 Housing
- 4 Roll pin
- 5 Ashtray housing
- R3 Front cigarette lighter with ashtray illumination
- R3x1 Front cigarette lighter with ashtray illumination electrical connector

☒ ☒	Remove/install		
1	Switch off the ignition and remove the transmitter key from the EIS control unit	ⓘ On vehicles with code (889) KEYLESS-GO: Press keyless go start/stop button repeatedly until ignition is switched off. Remove KEYLESS-GO chip card or transmitter key from the vehicle and store outside the transmitter range (at least 2 m) .	
2.1	Open ashtray	except model 204, 207, 212	
2.2	Remove ashtray housing (5)	MODEL 212 without CODE 279(Electronic gear selector) MODEL 204.0/2/3, 207 MODEL 204.9 up to model year 2013	
3	Pull insert (1) out of the housing (3) of the cigarette lighter with front ashtray illumination (R3)		
4	Insert pliers (2) into the housing (3) and pull the housing (3) out of the clamping sleeve (4)	ⓘ The spigots of the pliers (2) must engage in the cutouts of the housing (3) (arrows A). ☒ Pliers	*169589003700
5	Disconnect electrical connector of cigarette lighter with front ashtray illumination (R3x1)	except model 204, 207, 212	
6	Unclip spring sleeve (4) from ashtray housing (5) by pressing back catch hooks (arrows B), and remove	ⓘ Installation: Check for correct installation position of spring pin (4).	
7	Install in the reverse order		

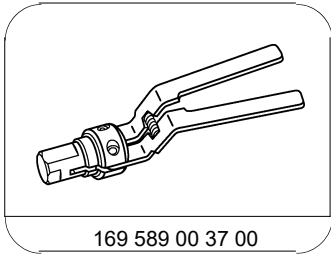

169 589 00 37 00

Pliers