

Document number: pe07.08-p-2101-97dag

Document title: Wiring diagram for gasoline direct injection system control unit

Code:	Designation:	Position:
A0	Color code key	32L
B11/4	Coolant temperature sensor	9L
B17/8	Charge air temperature sensor	17L
B28/5	Pressure sensor downstream of air filter	11L
B28/6	Pressure sensor upstream of throttle valve	14L
Code B03	ECO start/stop function	24D
G3/3	Left oxygen sensor upstream of catalytic converter	7L
G3/3x1	Electrical connector for left oxygen sensor upstream of catalytic converter	6J
G3/4	Right oxygen sensor upstream of catalytic converter	2L
G3/4x1	Electrical connector for right oxygen sensor upstream of catalytic converter	1J
G3/5	Left oxygen sensor downstream of catalytic converter	22L
G3/5x1	Electrical connector for left oxygen sensor downstream of catalytic converter	21J
G3/6	Right oxygen sensor downstream of catalytic converter	19L
G3/6x1	Electrical connector for right oxygen sensor downstream of catalytic converter	18J
N3/10	ME-SFI [ME] control unit	4A
N3/10	ME-SFI [ME] control unit	12A
N3/10	ME-SFI [ME] control unit	26L
N3/10	ME-SFI [ME] control unit	20A
N3/10	ME-SFI [ME] control unit	26A
X26	Interior and engine wiring harness electrical connector	10H
X26	Interior and engine wiring harness electrical connector	13H
X26	Interior and engine wiring harness electrical connector	25G
Y130	Engine oil pump valve	5L
Z5z1	Connector sleeve in wiring harness	12E
Z5z1	Connector sleeve in wiring harness	15E
Z7/36z1	Circuit 87 M2e connector sleeve	6G
Z7/36z1	Circuit 87 M2e connector sleeve	22E
Z7/36z2	Circuit 87 M2e connector sleeve	4G
Z7/36z2	Circuit 87 M2e connector sleeve	19E
Z7/43	Sensor ground connector sleeve	16E
Z7/43	Sensor ground connector sleeve	9G
Z7/43	Sensor ground connector sleeve	21G
Z7/44	Sensor ground connector sleeve	11E
Z7/44	Sensor ground connector sleeve	14E

