


Document number : pe07.16-p-2101-97dae
Document title : Wiring diagram for common rail diesel injection (CDI) control unit


Code :	Designation :	Position :
A0	Color code key	80L
B19/9	Temperature sensor upstream of diesel particulate filter	65L
B28/8	Differential pressure sensor (DPF)	67L
B37	Accelerator pedal sensor	59L
B79/2	Transmission neutral position position sensor	70L
CAN C	Drive train CAN	10K
CAN E	Chassis CAN	14K
Code 474	Diesel particulate filter	63F
Code 4U7	StarV/stop voltage dip protection	50F
Code B03	ECO start/stop function	50G
Code ME04	Hybrid drive 20 KW VARIANT	50G
F32	Front electrical prefuse box	54L
F32f151	Prefuse 151	52K
F32f154	Prefuse 154	52K
G3/2	Oxygen sensor upstream of catalytic converter	17L
G3/2x1	Electrical connector for oxygen sensor upstream of catalytic converter	16J
M1	Starter	45L
M4/7	Combustion engine and air conditioning with integrated control fan motor	57L
N10/1	Front SAM control unit with fuse and relay module	21L
N10/1	Front SAM control unit with fuse and relay module	27L
N10/1	Front SAM control unit with fuse and relay module	33L
N10/1	Front SAM control unit with fuse and relay module	38L
N10/1f22	Fuse 22	24L
N10/1f22	Fuse 22	36L
N10/1f23	Fuse 23	26L
N10/1f23	Fuse 23	35L
N10/1f24	Fuse 24	37L
N10/1f27	Fuse 27	23L
N10/1f6	Fuse 6	20L
N10/1f7	Fuse 7	33L
N10/2	Rear SAM control unit with fuse and relay module	7L
N118	Fuel pump control unit	3L
N2/10	Supplemental restraint system control unit	48L
N3/9	CDI control unit	5A
N3/9	CDI control unit	12A
N3/9	CDI control unit	20A
N3/9	CDI control unit	28A
N3/9	CDI control unit	36A
N3/9	CDI control unit	44A

Document number : pe07.16-p-2101-97dae
Document title : Wiring diagram for common rail diesel injection (CDI) control unit

Code :	Designation :	Position :
N3/9	CDI control unit	52A
N3/9	CDI control unit	60A
N3/9	CDI control unit	71A
N3/9	CDI control unit	67A
N3/9	CDI control unit	74A
S40/3	Clutch pedal switch	62L
S40/5	Start enable clutch pedal switch	72L
U12	Valid for left-hand drive vehicles	62F
U13	Valid for right-hand drive vehicles	62G
U24	Valid for manual transmission	61E
U24	Valid for manual transmission	68E
U240	Valid for all except ECU start/stop function	50F
U245	Valid for fuel system control unit	1F
U246	Valid without fuel system control unit	5F
U252	Valid for ECU start/stop function	68E
W15/1	Right footwell ground point	62H
W15/2	Left footwell ground point	62H
W15/2	Left footwell ground point	72H
W16/6	Left footwell ground point	16E
W9	Right major assembly compartment ground point	57H
X220	Left front ground point (at lamp unit)	69H
X25/2	New Manual Transmission zero position sensor electrical connector	57E
X26	Engine compartment/interior electrical connector	41H
X26	Interior and engine wiring harness electrical connector	64H
X30/21	Drive train CAN voltage distributor electrical connector	11L
X30/30	Vehicle floor chassis CAN voltage distributor electrical connector	14L
Y84	Radiator shutters actuator	39L
Z51/19	Engine management crash signal connector sleeve	48E
Z6/8	Sensor ground connector sleeve	67E
Z7/35	Circuit 87 M1e connector sleeve	25E
Z7/36	Circuit 87 M2e connector sleeve	67E

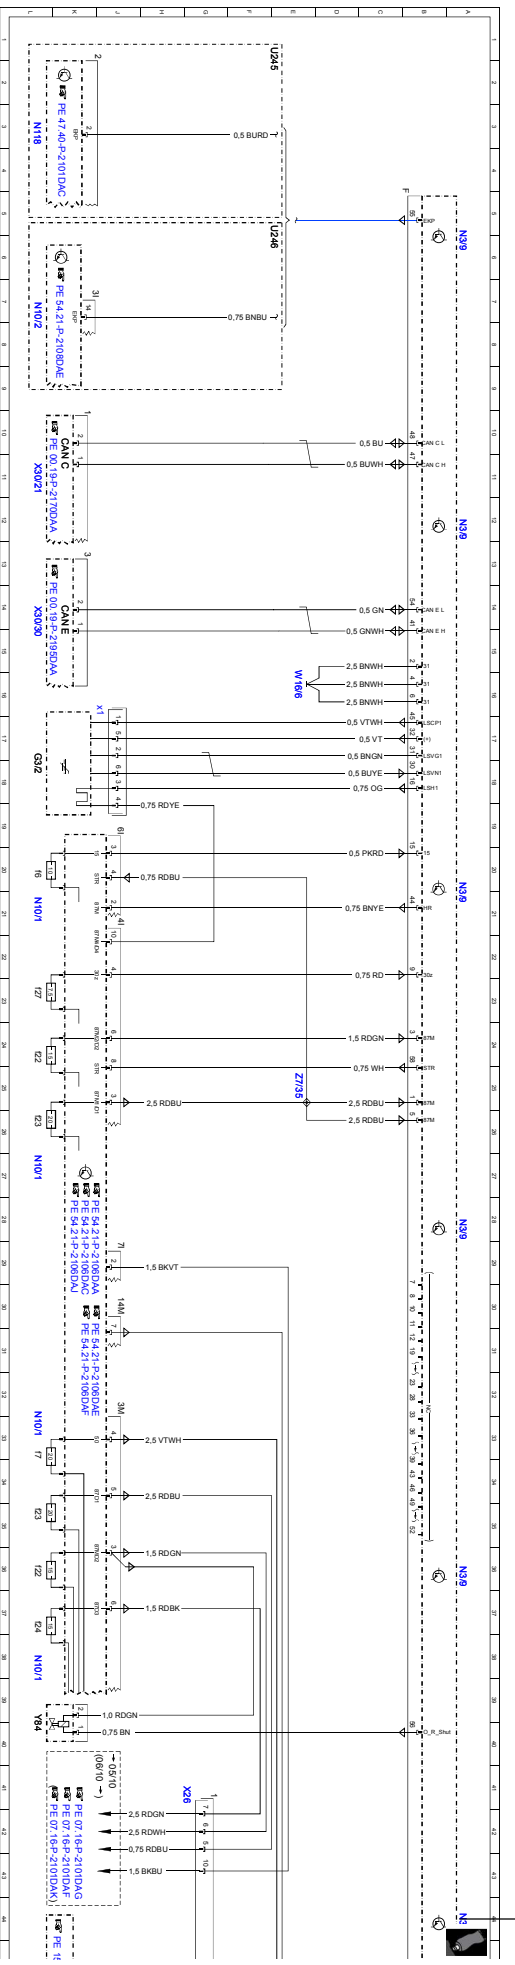

▼ Affix page 2 here ▼

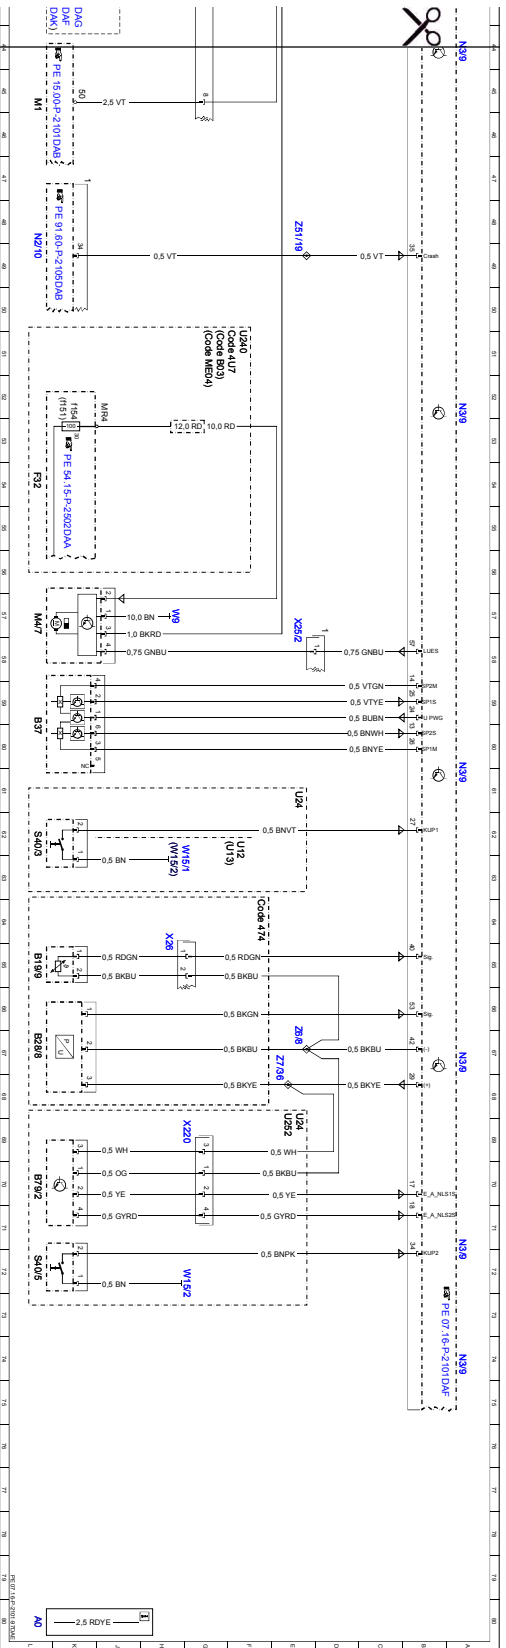

Cut here