
Model 205.0/1/2 Model 213 Model 253

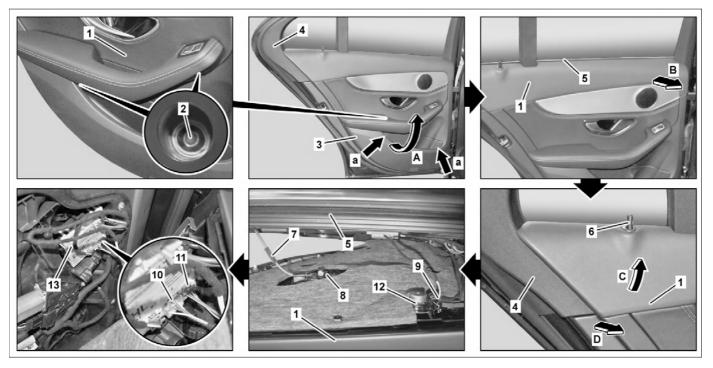

P72.12-3047-09

Shown on model 205.0 except code 810 (Sound-System)

- Door trim
 Screw
- 3 Door pocket
- 4 Window frame paneling
- 5 Inner sealing rail

- 6 Release button
- 7 Inside door opener cable
- 8 Inner door handle9 Electrical connector
- 10 Electrical connector

- 11 Electrical connector
- 12 Speaker
- 13 Rear door control unit

| | Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof. | No parts of the body or limbs should be within the operating area when the components are moving. | AS00.00-Z-0011-01A |
|------------|---|--|----------------------|
| (3) | Information on preventing damage to electronic components due to electrostatic discharge | | AH54.00-P-0001-01A |
| XX | Remove/install | | |
| 1 | Completely open rear door | | |
| 2 | Unscrew bolts (2) | | |
| 3 | Reach into outer area (arrows a) of door pocket (3) on left and right and detach door lining (1) from rear door by pulling with a jerk | Detach door trim (1) by hand. The door trim (1) can be damaged when using a tool. I Ensure that the rear door is held in open position when pulling. Helper required. | |
| 4 | Unclip retaining clips on door trim (1) up to inner sealing rail (5) (arrow A) | | |
| 5.1 | Remove roller sun blind from drive | Model 213.1 with code 297 (Roller sun blinds in rear doors) | AR72.12-P-1010-01LWV |
| 5.2 | Move side window to lowest position | Model 205.0/1/2, 213 (except 213.1), 253 Model 213.1 except code 297 (Roller sun blinds in rear doors) | |
| 6 | Switch off ignition | , | |

| 7 | Carefully remove door trim (1) from inner sealing rail (5) up to height of release button (6) (arrow B) starting at front | Carefully pull out door trim (1). Otherwise the door trim (1) or the inner sealing rail (5) can be damaged. | |
|----|---|--|--|
| 8 | Remove door trim (1) upward (arrow C) and remove from rear door until electrical connectors (10, 11) on rear door (13) and inside door opener wire (7) are accessible | (arrow D) in area of door lock until it can be moved upward over window frame paneling (4). | |
| 9 | Unhook inside door opener cable (7) on inside door handle (8) | | |
| 10 | Unlock electrical connector (9) on speaker (12) and disconnect | | |
| 11 | Unlock electrical connector on tweeter and disconnect | Model 205.0/1/2, 213, 253 with code 810 (Sound system) Model 213 with code 811 (Advanced sound system) | |
| 12 | Unlock electrical connectors (10, 11) on rear door control unit (13) and disconnect | i Model 213.1 with code 297 (Roller sun blinds in rear doors) Installation: Do not yet connect electrical connector of roller sun blind motor. i The number of electrical connectors varies depending on equipment installed. | |
| 13 | Remove door trim (1) | | |
| 14 | Install in the reverse order | | |