


Model 213 (except 213.050)
with code 877 (ambient lighting)

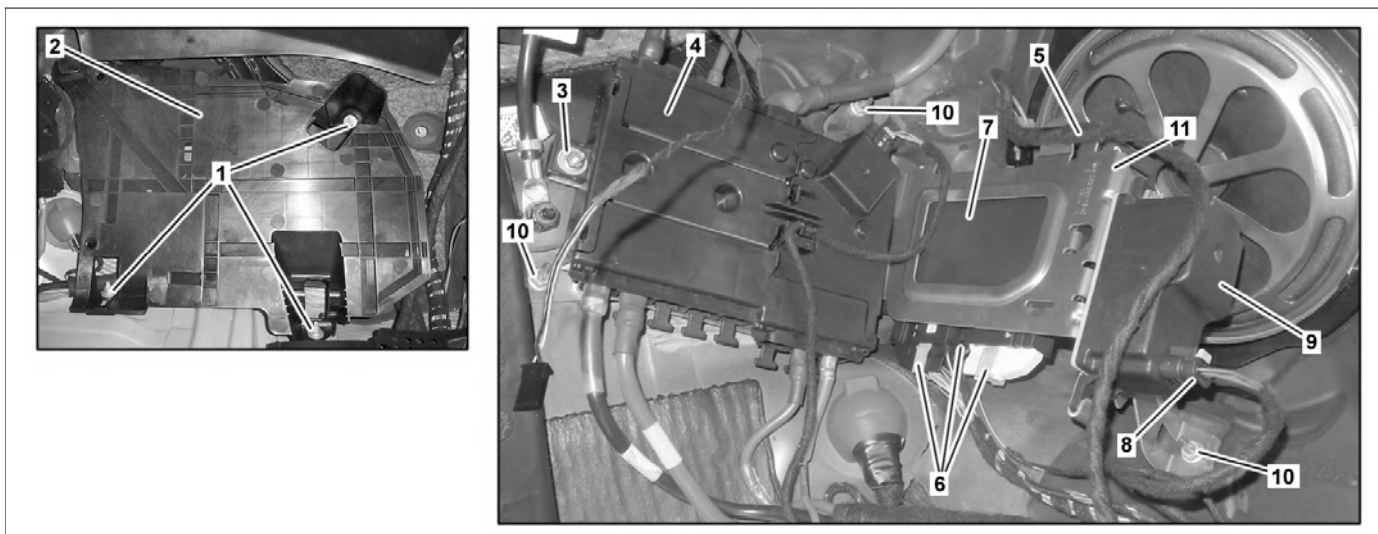


P82.20-4523-08

Shown with transmission 725

- | | |
|-------------------------|---------------------------|
| 1 Nuts | 7 Drivetrain control unit |
| 2 Footrest | 8 Electrical connector |
| 3 Nut | 9 Park pawl capacitor |
| 4 Prefuse box | 10 Nut |
| 5 Electrical line | 11 Bracket |
| 6 Electrical connectors | |

- | |
|---|
| 11 Bracket |
| 12 Electrical connector |
| 13 Nut |
| N162 Ambiance illumination control unit |

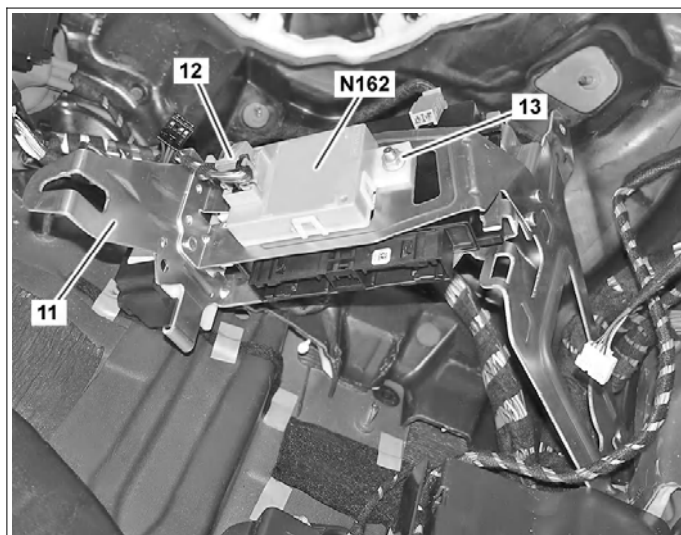

P82.20-4524-11

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Remove bottom paneling for instrument panel on passenger side		AR68.10-P-1502LWE
3	Remove front floor covering on passenger side		AR68.20-P-2065LWE
4	Unscrew nuts (1) and remove footrest (2)		

5	Unscrew nut (3) and place prefuse box (4) to one side with the lines connected		
6	Unclip electrical line (5) from the bracket (11)		
7	Disconnect electrical connectors (6) on the powertrain control unit (7)		
8	Disconnect electrical connector (8) from park pawl condenser (9)	Model 213 (except 213.050) with transmission 725 with code 877 (ambient lighting)	
9	Unscrew nuts (10) and put the bracket (11) with the control units in the footwell		
10	Disconnect electrical connector (12) from ambiance illumination control unit (N162)		
11	Unscrew nut (13) and remove ambiance illumination control unit (N162)		
12	Install in the reverse order		