

**Model** all (CAR)

**INCREASE speed**

The vehicle's speed is increased by increasing the drive torque.  
The following activities are started in this case:

- Increase engine torque  
The engine management system implements the "Increase engine torque" request.
- Shift down a gear and upshift if necessary (vehicles with automatic transmission)  
The transmission management system implements the "Shift down gear" or "Upshift gear" request.

	<b>Additional basic functions</b>		
	Torque coordination, basic function		GF07.10-P-1060A
	Gearshift system, basic function	Model all with transmission 700.420/421, 724.033/044/045/103/114/115/120	GF27.60-P-1002A