

Item	Designation	Coordinates
<u>A0</u>	Use of wiring diagrams	23L
<u>B92/6</u>	Right outer rear bumper integrated radar sensor	18A
<u>B92/11</u>	Left outer rear bumper integrated radar sensor	14A
<u>Code 234</u>	Blind Spot Assist (BSM)	23L
<u>N10/8</u>	Rear SAM control unit	3L
<u>W6</u>	Left wheel arch trunk ground point	10L
<u>X26/40</u>	Rear bumper electrical connector	3G
<u>X30/27</u>	Peripherals CAN (CAN PER) potential distributor electrical connector	7L
<u>Z6/30z10</u>	Circuit 31 connector sleeve	10J
<u>Z36/17z1</u>	Rear sensor CAN (low) connector sleeve	14H
<u>Z36/19z1</u>	Rear sensor CAN (high) connector sleeve	13H
<u>Z36/35z1</u>	Rear bumper circuit 15 connector sleeve	16E
<u>Z36/36z1</u>	Rear bumper circuit 31 connector sleeve	12L
<u>CAN PER</u>	Peripherals CAN	7K