



- Model 205
- Model 213
- Model 238
- Model 253
- Model 293

- 1 Allen wrench
- 2 Spring
- 3 Electrical connector
- 4 Driver airbag

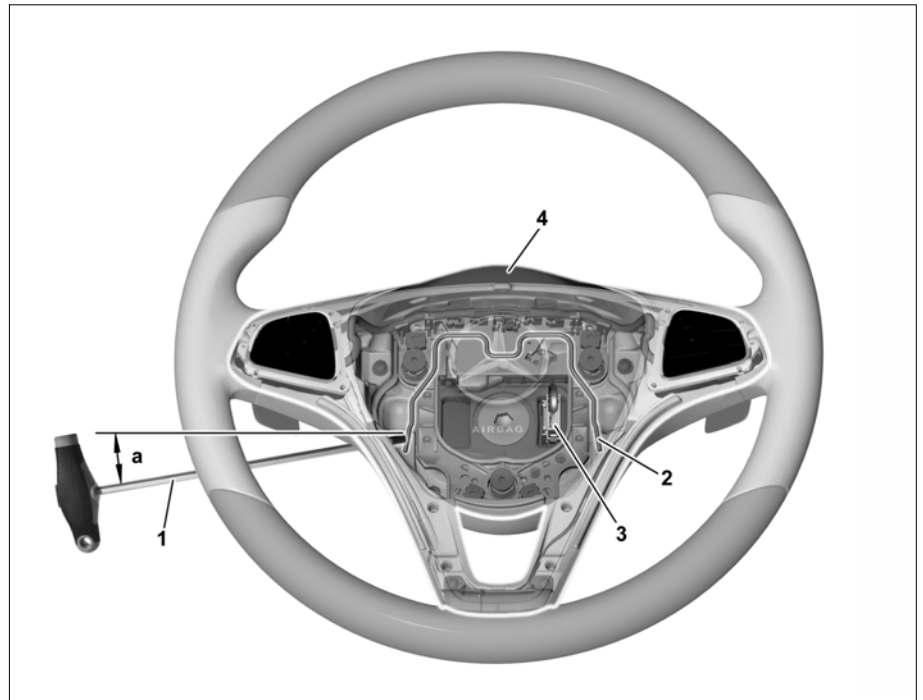




P91.60-5085-06

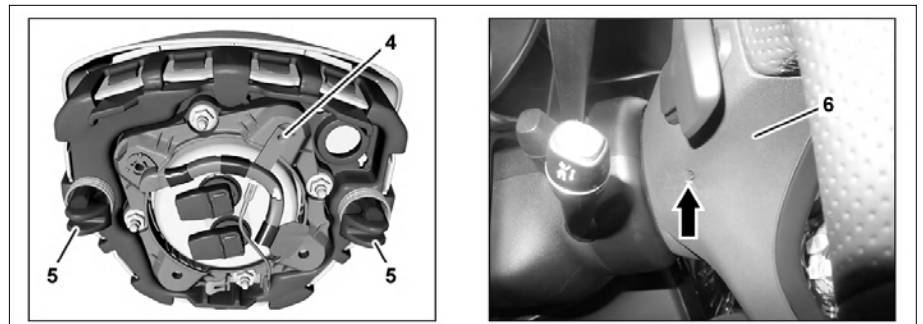- 4 Driver airbag
- 5 Mount
- 6 Steering wheel



P91.60-5084-04

<p> Warning</p>	<p>Risk of injury during testing and repair operations related to pyrotechnical components</p>	<p>Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.</p>	<p>AS91.00-Z-0008-01A</p>
	<p>Information on preventing damage to electronic components due to electrostatic discharge</p>		<p>AH54.00-P-0001-01A</p>
	<p>Notes on safety-relevant components</p>		<p>AH00.00-Z-0019-01A</p>
	<p>Information, assessment and legal requirements when working with, handling and storing pyrotechnical components</p>		<p>AH91.00-Z-0000-10A</p>
<p></p>	<p>Remove/install</p>		
<p>1</p>	<p>Move steering wheel (6) all the way upward.</p>		
<p>2</p>	<p>Disconnect ground line on battery.</p>	<p>Model 293 Model 238 Model 205, 213, 253</p>	<p>AR54.10-P-0003EQ AR54.10-P-0003LWO AR54.10-P-0003LW</p>
<p>3</p>	<p>Insert hexagon socket screwdriver (1) into right and left opening (arrow) at steering wheel (6) and push respective end of spring (2) inwards until the driver's airbag (4) is released.</p>	<p> Angle: a = approx. 10° Use commercially available Allen wrench (1) with a size of 4 mm.</p>	

		<p>i When removing the driver's airbag (4) for the first time, the right and left opening (arrow) at the steering wheel (6) must be pierced.</p> <p>i Installation: The ends of the spring (2) must audibly engage into the mounts (5) of the driver's airbag (4).</p>	
4	Remove driver's airbag (4) and disconnect electrical connector (3).	i Installation: Make sure that the electrical connector (3) engages properly.	
5	Dispose of driver's airbag (4) properly.	When replacing the driver airbag (4).	
6	Install in the reverse order.		
7	Check Supplemental Restraint System (SRS) with diagnostic device.	When replacing the driver airbag (4).	
 AD  AD  AD		Model 293 Model 238 Model 205, 213, 253	AD00.00-P-2000-06FR AD00.00-P-2000-06LWO AD00.00-P-2000-04B