

Model 213

except code 800 (Model year 2020)
 except code 806 (Model year 2016)
 except code 807 (Model year 2017)
 except code 808 (Model year 2018)
 except code 809 (Model year 2019)

Model 238

except code 800 (Model year 2020)
 except code 807 (Model year 2017)
 except code 808 (Model year 2018)
 except code 809 (Model year 2019)

Shown on model 213.073

- 2 "Main menu" button
 3 Finger navigation pad
 4 Multifunction display



P00.20-A038-06

	Preparatory activity		
1	Close hood, doors and the trunk lid or liftgate.		
2	Switch electronic ignition lock control unit to position "1" (circuit 15R).	i There must be no fault messages shown on the multifunction display (4).	
	Open workshop level		
3	Press "Main menu" button (2).	i The main menu appears in the multifunction display (4).	
4	Use swipe movements on the finger navigation pad (3) to select the "Trip" menu item in the multifunction display (4).		
5	Press the "Main menu" button (2) and hold it down for at least 5 s, then release it. Then, within 1.5 s, press the "OK" button on the finger navigation pad (3) for at least 3 s.		
6	Press "Main menu" button (2).	i The main menu appears in the multifunction display (4).	
7	Use swipe movements to the left on the finger navigation pad (3) to select the "Workshop" menu item in the multifunction display (4).	i The multifunction display (4) shows the Workshop menu with the tabs: "Vehicle data", "Dynamometer test", "Change brake pad", "ASSYST PLUS".	
	Close workshop level		
8	Press "Main menu" button (2) and close "Workshop" menu.	i The main menu appears in the multifunction display (4).	
	Finishing activity		
9	Switch electronic ignition lock control unit to		