



Model 205.2
 Model 213.2
 Model 253.1/9

Shown on MODEL 205.2

1 Liftgate
 X X-direction
 Y Y-direction
 Z Z-direction

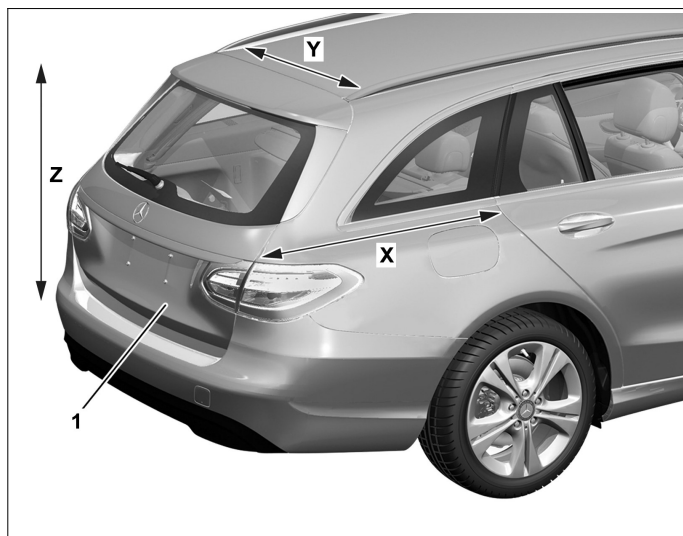


P72.20-3352-11

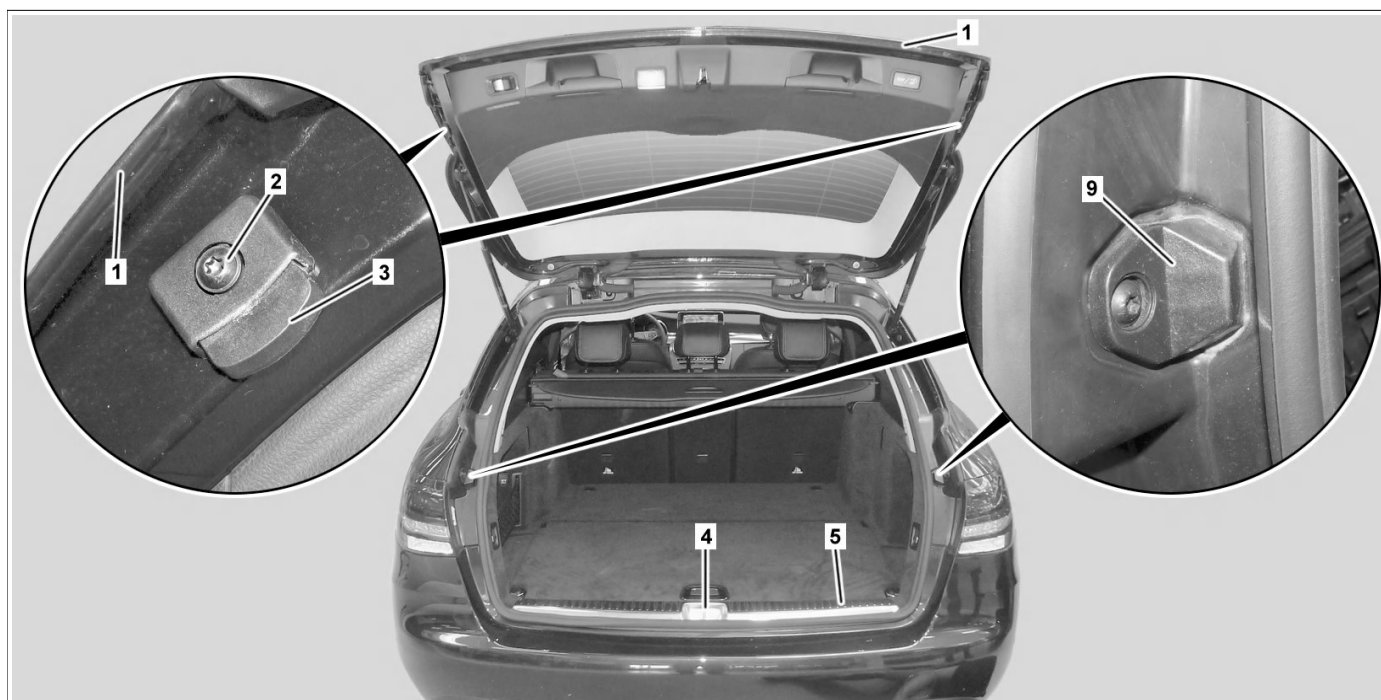

P72.20-3354-09

Shown on MODEL 205.2


1 Liftgate
 2 Screw
 3 Stop lug
 4 Lock striker
 5 Rear center section paneling
 9 End stop

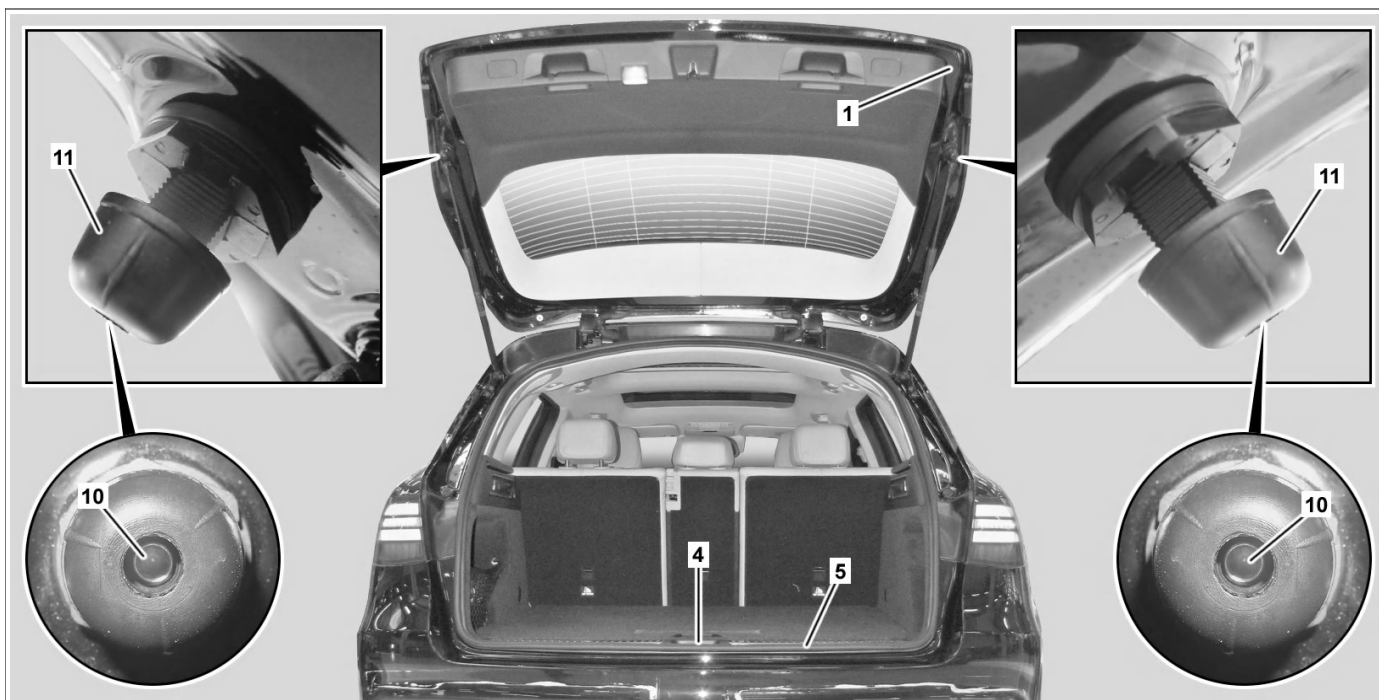

P72.20-3439-09

Shown on model 253.9

- | | | | |
|---|------------------------------|----|-------------|
| 1 | Liftgate | 10 | Screw |
| 4 | Lock striker | 11 | Stop buffer |
| 5 | Rear center section paneling | | |

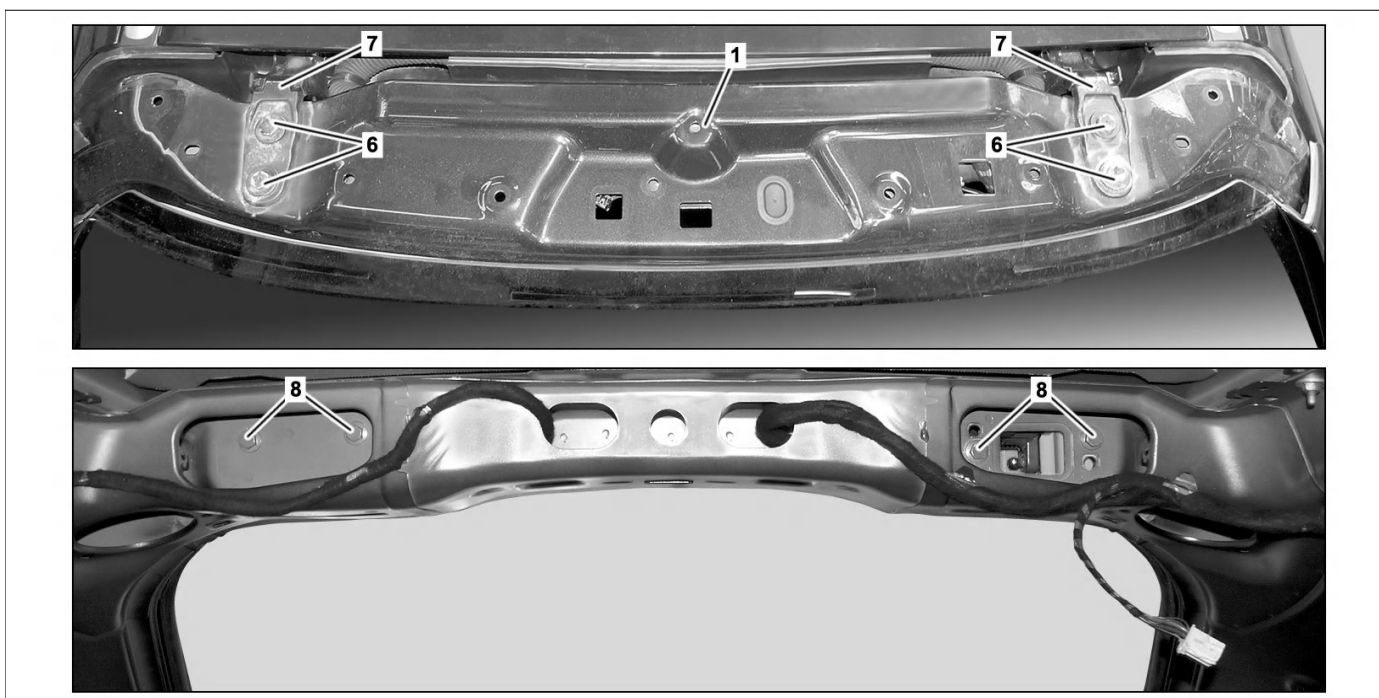

P72.20-3353-09

Shown on MODEL 205.2

- | | | | |
|---|----------|---|-------|
| 1 | Liftgate | 7 | Hinge |
| 6 | Bolts | 8 | Bolts |

 Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
	Check		
1	Check gap dimensions at liftgate (1).	<p>Model 205.2, 253.1/9 Model 213.2</p> <p>Model 205.2Roof to rear spoiler Model 205.2Sidewall to rear spoiler Model 205.2Sidewall to liftgate Model 205.2Outside of taillamp to inside of taillamp Model 205.2Center of liftgate to rear bumper Model 205.2Outside of liftgate to rear bumper Model 213.2Roof to rear spoiler Model 213.2Sidewall to rear spoiler Model 213.2Center of liftgate to rear bumper Model 213.2Outside of liftgate to rear bumper Model 213.2Sidewall to liftgate Model 213.2Outside of taillamp to inside of taillamp Model 253.1/9Roof to rear spoiler/liftgate Model 253.1/9Sidewall to liftgate Model 253.1/9Outside of taillamp to inside of taillamp Model 253.1/9Center of liftgate to rear bumper Model 253.1/9Outside of liftgate to rear bumper</p> <p> Feeler gauge</p>	<p>AR60.00-P-0700-01LW AR60.00-P-0700-01LWE *BE60.00-P-1019-01BB *BE60.00-P-1020-01BB *BE60.00-P-1021-01BB *BE60.00-P-1022-01BB *BE60.00-P-1023-01BB *BE60.00-P-1024-01BB *BE60.00-P-1017-01GA *BE60.00-P-1018-01GA *BE60.00-P-1019-01GA *BE60.00-P-1020-01GA *BE60.00-P-1021-01GA *BE60.00-P-1022-01GA *BE60.00-P-1012-01FA *BE60.00-P-1013-01FA *BE60.00-P-1014-01FA *BE60.00-P-1015-01FA *BE60.00-P-1016-01FA *129589032100</p>
	Remove		
2.1	Loosen screws (2) and completely press back stop lugs (3).	Model 205.2, 213.2	
2.2	Loosen screws (10) and completely press back stop buffers (11).	Model 253.1/9	
3	Remove rear-end center section paneling (5).	Model 205.2, 253.9 Model 213.2	AR68.30-P-4785LWS AR68.30-P-4786LWT
4	Remove lock striker (4).		
5	Remove center brake lamp.	When it is necessary to adjust the liftgate (1) in the x-direction (X) or y-direction (Y). Model 205.2, 253.1/9 Model 213.2	AR82.10-P-5375LWS AR82.10-P-5376LWT
6	Remove both pneumatic springs.	 Do not support liftgate (1) with support. Aid of helper required.	AR72.20-P-2832LW
	Adjusting in x-direction (X) and y-direction (Y)		
7	Loosen screws (6) on left and right hinge (7).		
8	Adjust liftgate (1) in the x-direction (X) or y-direction (Y).	<p> Aid of helper required.</p> <p>Model 205.2Roof to rear spoiler Model 205.2Sidewall to rear spoiler Model 205.2Sidewall to liftgate Model 205.2Outside of taillamp to inside of taillamp Model 205.2Outside of liftgate to rear bumper Model 213.2Roof to rear spoiler Model 213.2Sidewall to rear spoiler Model 213.2Outside of liftgate to rear bumper Model 213.2Sidewall to liftgate Model 213.2Outside of taillamp to inside of taillamp Model 253.1/9Roof to rear spoiler/liftgate Model 253.1/9Sidewall to liftgate Model 253.1/9Outside of taillamp to inside of taillamp Model 253.1/9Outside of liftgate to rear bumper</p> <p> Feeler gauge</p>	<p>*BE60.00-P-1019-01BB *BE60.00-P-1020-01BB *BE60.00-P-1021-01BB *BE60.00-P-1022-01BB *BE60.00-P-1024-01BB *BE60.00-P-1017-01GA *BE60.00-P-1018-01GA *BE60.00-P-1020-01GA *BE60.00-P-1021-01GA *BE60.00-P-1022-01GA *BE60.00-P-1012-01FA *BE60.00-P-1013-01FA *BE60.00-P-1014-01FA *BE60.00-P-1016-01FA *129589032100</p>
9	Tighten screws (6) on hinges (7).	 Aid of helper required.	

		Bolt, liftgate hinge to liftgate	*BA72.20-P-1002-02N
10	Repair paint damage on screws (6) with appropriate touch-up paint pen.		
	Remove		
11	Remove roof lining lay down on seats with connected electric lines.	If the liftgate (1) must be adjusted in the z-direction (Z).	AR68.30-P-4300LWS
12	Remove trunk lid/liftgate control drive unit.	Model 205.2, 213.2, 253.1/9 with code 890 (EASY-PACK-tailgate) If the liftgate (1) must be adjusted in the z-direction (Z).	AR72.29-P-5590LW
	Adjusting in Z-direction (Z)		
13	Loosen screws (8) on left and right hinge (7).		
14	Adjust transition between the liftgate (1) and the roof frame in the z direction (Z).	Aid of helper required. Top edge of liftgate (1) must be flush with roof frame. Observe dimension "U1". Model 205.2 Center of liftgate to rear bumper Model 213.2 Center of liftgate to rear bumper Model 253.1/9 Center of liftgate to rear bumper Feeler gauge	*BE60.00-P-1023-01BB *BE60.00-P-1019-01GA *BE60.00-P-1015-01FA *129589032100
15	Tighten screws (8) on hinges (7).	Aid of helper required. Bolt, hinge for liftgate to roof frame	*BA72.20-P-1001-02N
16	Repair paint damage on screws (8) with appropriate touch-up paint pen.		
	Install		
17	Install both pneumatic springs.	Aid of helper required.	AR72.20-P-2832LW
18	Insert lock striker (4) and screw in screws up to stop.		
	Adjusting the transitions to the edges of the fenders and the D-pillars		
19	Adjust transition between liftgate (1) and edges of fender and D-pillars by moving lock striker (4).	Liftgate (1) must be flush with edges of fender and D-pillars.	
20	Tighten screws on lock striker (4).	Screw/bolt, lock striker for liftgate to rear center section	*BA72.20-P-1003-02N
21.1	Completely pull out stop lugs (3).	Model 205.2, 213.2	
21.2	Pull out stop buffers (11) up to end of the notches.	Model 253.1/9	
22	Carefully close liftgate (1) and open again.	Model 205.2, 213.2, 253.1/9	
23.1	Pull stop lugs (3) out two notches.	Model 205.2, 213.2 except code 890 (EASY-PACK-tailgate)	
23.2	Pull stop buffers (11) out two notches.	Model 253.1/9 except code 890 (EASY-PACK-tailgate)	
24.1	Tighten screws (2).	Model 205.2, 213.2	
24.2	Tighten bolts (10).	Model 253.1/9	
	Install		
25	Install rear-end center section paneling (5).	Model 205.2, 253.1/9 Model 213.2	AR68.30-P-4785LWS AR68.30-P-4786LWT
26	Install trunk lid/liftgate control drive unit.	When the liftgate (1) was adjusted in the z-direction (Z). Model 205.2, 213.2, 253.1/9 with code 890 (EASY-PACK-tailgate)	AR72.29-P-5590LW
27	Install headliner.	When the liftgate (1) was adjusted in the z-direction (Z).	AR68.30-P-4300LWS
28	Install center brake lamp.	When the liftgate (1) was adjusted in the x-direction (X) or y-direction (Y). Model 205.2, 253.1/9 Model 213.2	AR82.10-P-5375LWS AR82.10-P-5376LWT
	Calibrate		
29	Calibrate rear 360° camera with vehicle diagnosis system.	Model 205.2, 213.2, 253.1/9 with code 501 (360° camera)	AD00.00-P-2000-04B

Test and adjustment values for gap dimensions

Number	Designation	Model 253.1/9
BE60.00-P-1012-01FA	Roof to rear spoiler/liftgate	Dimension "Q" mm 4,5 (± 1,5)
		For picture, see AR60.00-P-0700-01 LW

Test and adjustment values for gap dimensions

Number	Designation	Dimension "S"	mm	Model 253.1/9
BE60.00-P-1013-01FA	Sidewall to liftgate	Dimension "S"	mm	4,0 (± 1,5)
		For picture, see		AR60.00-P-0700-01 LW

Test and adjustment values for gap dimensions

Number	Designation	Dimension "T"	mm	Model 253.1/9
BE60.00-P-1014-01FA	Outside of taillamp to inside of taillamp	Dimension "T"	mm	3,5 (+1,5/-1)
		For picture, see		AR60.00-P-0700-01 LW

Test and adjustment values for gap dimensions

Number	Designation	Dimension "U1"	mm	Model 253.1/9
BE60.00-P-1015-01FA	Center of liftgate to rear bumper	Dimension "U1"	mm	5,5 (± 1,5)
		Dimension "M1"	mm	-
		For picture, see		AR60.00-P-0700-01 LW

Test and adjustment values for gap dimensions

Number	Designation	Dimension "U2"	mm	Model 253.1/9
BE60.00-P-1016-01FA	Outside of liftgate to rear bumper	Dimension "U2"	mm	3,5 (± 1)
		Dimension "M"	mm	-
		For picture, see		AR60.00-P-0700-01 LW

Check values for gap dimensions

Number	Designation	Dimension "Q"	mm	Model 213.2
BE60.00-P-1017-01GA	Roof to rear spoiler	Dimension "Q"	mm	4,9 (± 1,4)
		For picture, see		AR60.00-P-0700-01 LWE

Check values for gap dimensions

Number	Designation	Dimension "R"	mm	Model 213.2
BE60.00-P-1018-01GA	Sidewall to rear spoiler	Dimension "R"	mm	3,9 (± 1,3)
		For picture, see		AR60.00-P-0700-01 LWE

Check values for gap dimensions

Number	Designation	Dimension "Q"	mm	Model 205.2
BE60.00-P-1019-01BB	Roof to rear spoiler	Dimension "Q"	mm	4,6 (± 1,4)
		For picture, see		AR60.00-P-0700-01 LW

Check values for gap dimensions

Number	Designation	Dimension "U1"	mm	Model 213.2
BE60.00-P-1019-01GA	Center of liftgate to rear bumper	Dimension "U1"	mm	5,5 (± 1,5)
		For picture, see		AR60.00-P-0700-01 LWE

Check values for gap dimensions

Number	Designation	Dimension "R"	mm	Model 205.2
BE60.00-P-1020-01BB	Sidewall to rear spoiler	Dimension "R"	mm	4,0 (± 1,3)
		For picture, see		AR60.00-P-0700-01 LW

Check values for gap dimensions

Number	Designation	Dimension "U2"	mm	Model 213.2
BE60.00-P-1020-01GA	Outside of liftgate to rear bumper	Dimension "U2"	mm	3,8 (± 1,0)
		For picture, see		AR60.00-P-0700-01 LWE

Check values for gap dimensions

Number	Designation	Dimension "S"	mm	Model 205.2
BE60.00-P-1021-01BB	Sidewall to liftgate	Dimension "S"	mm	3,5 (± 0,8)
		For picture, see		AR60.00-P-0700-01 LW

Check values for gap dimensions

Number	Designation	Dimension "S"	mm	Model 213.2
BE60.00-P-1021-01GA	Sidewall to liftgate	Dimension "S"	mm	3,5 (± 0,8)
		For picture, see		AR60.00-P-0700-01 LWE

Check values for gap dimensions

Number	Designation	Dimension "T"	mm	Model 205.2
BE60.00-P-1022-01BB	Outside of taillamp to inside of taillamp	Dimension "T"	mm	3,8 (± 1,0)
		For picture, see		AR60.00-P-0700-01 LW

Check values for gap dimensions

Number	Designation	Dimension "T"	mm	Model 213.2
BE60.00-P-1022-01GA	Outside of taillamp to inside of taillamp	Dimension "T"	mm	3,8 (± 1,0)
		For picture, see		AR60.00-P-0700-01 LWE

Check values for gap dimensions

Number	Designation	Dimension "U1"	mm	Model 205.2
BE60.00-P-1023-01BB	Center of liftgate to rear bumper	Dimension "U1"	mm	5,5 (± 1,5)
		For picture, see		AR60.00-P-0700-01 LW

Check values for gap dimensions

Number	Designation	Dimension "U2"	mm	Model 205.2
BE60.00-P-1024-01BB	Outside of liftgate to rear bumper	Dimension "U2"	mm	3,8 (± 1,0)
		For picture, see		AR60.00-P-0700-01 LW

 Liftgate

Number	Designation	Nm	Model 205.2	Model 213.2
BA72.20-P-1001-02N	Bolt, hinge for liftgate to roof frame	Nm	40	40

 Liftgate

Number	Designation	Nm	Model 253
BA72.20-P-1001-02N	Bolt, hinge for liftgate to roof frame	Nm	40

 Liftgate

Number	Designation	Nm	Model 205.2	Model 213.2
BA72.20-P-1002-02N	Bolt, liftgate hinge to liftgate	Nm	34	34

Nm Liftgate


Number	Designation	Model 253
BA72.20-P-1002-02N	Bolt, liftgate hinge to liftgate	Nm 32

Nm Liftgate

Number	Designation	Model 205.2	Model 213.2
BA72.20-P-1003-02N	Screw/bolt, lock striker for liftgate to rear center section	Nm 9	9

Nm Liftgate

Number	Designation	Model 253
BA72.20-P-1003-02N	Screw/bolt, lock striker for liftgate to rear center section	Nm 9

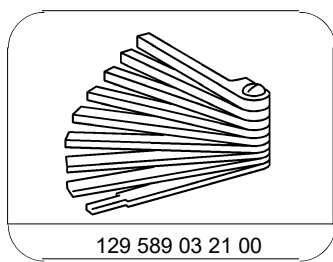

Feeler gauge