


Model 205.2
 Model 213.2
 Model 253

Modification notes

24.05.2018	Removal/installation methods for the handles and clamps changed.		
------------	--	--	--

Shown on model 205.2 with code 550 (trailer hitch) and with code 890 (EASY-PAK liftgate)


- 1 Bottom liftgate paneling
- 2 Handles
- 3 Clips
- E40/2 Left trunk lid/liftgate ambient lamp and warning lamp
- S62/24 Trailer hitch release switch
- S62/26 Trunk lid/liftgate control button

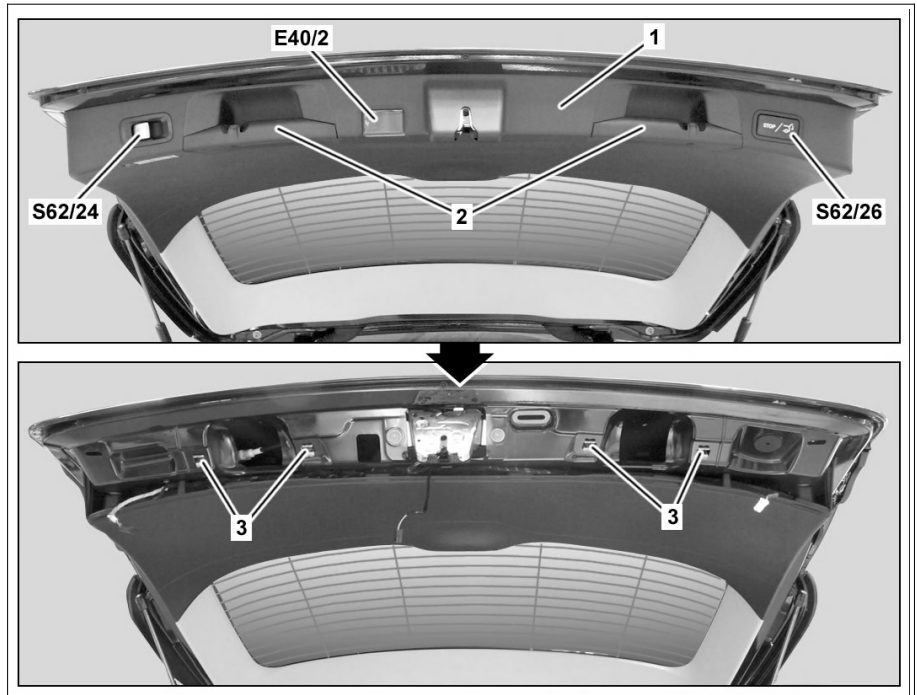



 
 



 
 


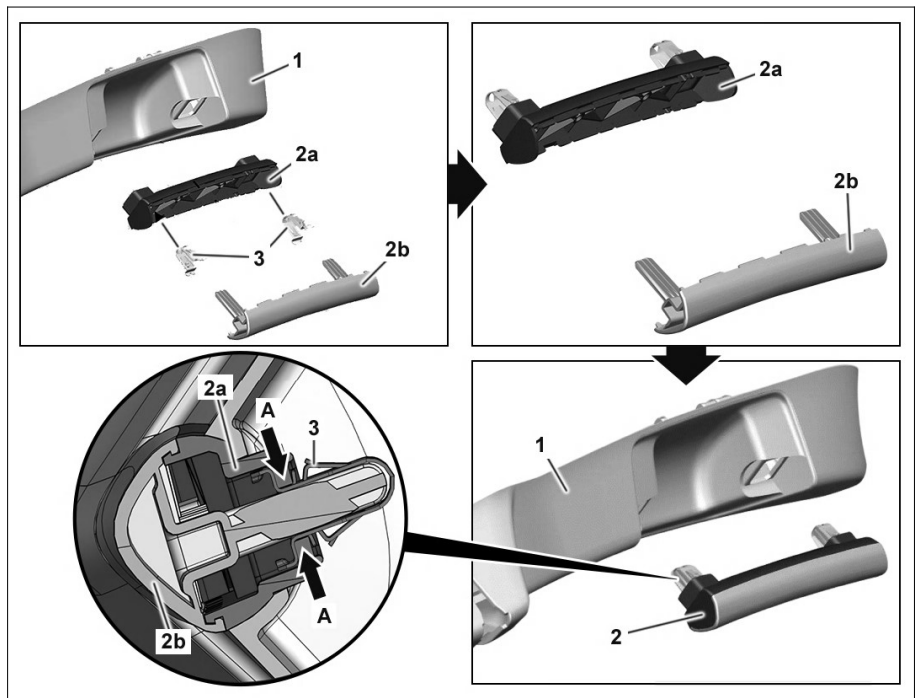P72.20-3358-06

Shown on right side of vehicle

- 1 Bottom liftgate paneling
- 2 Handle
- 2a Handle lower part
- 2b Handle upper part
- 3 Clips



P72.20-3595-06

 Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
	Remove		
1	Disassemble handle upper parts (2b) at the disassembly openings of the handles (2) from the handle lower parts (2a) and remove.	 Do not remove handle lower parts (2a) from the bottom liftgate trim (1).  Model 253.3 Only one handle (2) is installed on the right side of the lower liftgate paneling (1).	
2	Remove clamps (3) with a suitable tool.		
3	Unclip bottom liftgate trim (1).		
4	Disconnect electrical connector from trunk lid/liftgate control button (S62/26).	Model 205.2, 213.2, 253 with code 890 (EASY-PACK-tailgate)	
5	Disconnect electrical connector from trailer hitch release switch (S62/24).	Model 205.2, 213.2, 253 with code 550 (Trailer coupling)	
6	Disconnect electrical connector from ambient lamp and left trunk lid/liftgate warning lamp (E40/2).		
7	Remove bottom liftgate trim (1).		
	Check		
8	Check clamps (3) for damage.	If there is a problem, ↓ Install new clamps (3).	
	Install		
9	Install clamps (3) with the engagement downward into the handle lower parts (2a).	 The latching lugs (arrows A) of the clamps (3) must enclose the handle lower part (2a) correctly. Otherwise injury and damage may occur when opening and closing the liftgate.  The clamps (3) must engage audibly.	
10	Assemble handle upper parts (2b) and handle lower parts (2a).		
11	Install assembled handles (2) into the removed bottom liftgate trim (1).	 Ensure that the handles (2) are seated correctly in the bottom liftgate trim (1).	
12	Connect electrical connector to ambient lamp and left trunk lid/liftgate warning lamp (E40/2).		
13	Connect electrical connector to trailer hitch release switch (S62/24).	Model 205.2, 213.2, 253 with code 550 (Trailer coupling)	
14	Connect electrical connector to the trunk lid/liftgate control button (S62/26).	Model 205.2, 213.2, 253 with code 890 (EASY-PACK-tailgate)	
15	Position bottom liftgate trim (1), starting with the handles (2), at the liftgate and clip in.		
	Check		
16	Pull handles (2) horizontally toward the rear and check for tight seating on the liftgate at both attachment points.	 The firm seating of the handles (2) must be ensured. Otherwise injury and damage may occur when opening and closing the liftgate. If a clamp (3) detaches during the tensile test, ↓ Check clamp (3) and replace if applicable. Then repeat the test.	