


Model 205.2  
 Model 213.2  
 Model 253.1/9  
 Model 293

Shown on model 205.2 except code ME06  
 (Hybrid drive 60 kW variant (Including Plug-in))

- 1 Side load compartment paneling  
 2 Nuts  
 3 Electrical connector  
 E3 Left rear lamp unit  
 E4 Right rear lamp unit

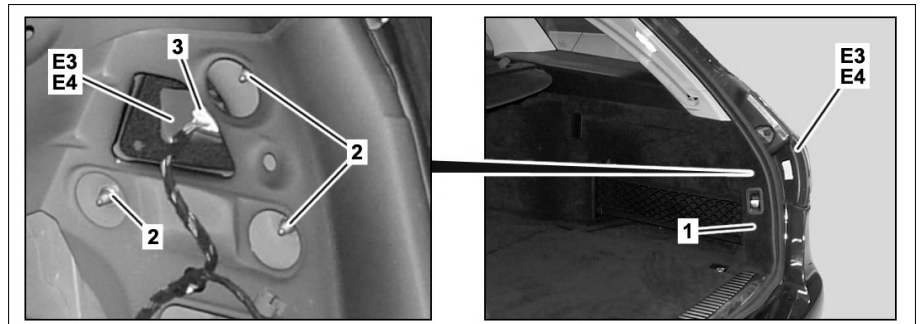

P82.10-7681-04

<b>Warning</b>	<b>Risk of injury</b> caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
<b>Caution</b>	<b>Risk of injury</b> caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
<b>Topical note</b>	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
	<b>Remove/install</b>		
1.1	Loosen side load compartment trim (1) in the rear area until the nuts (2) are accessible.	Model 205.2 except code ME06 (Hybrid drive 60 kW variant (incl. plugin))	AR68.30-P-1180LWS
1.2	Remove side load compartment trim (1).	Model 213.2, 293 Model 293 Model 213.2	AR68.30-P-1180LWG AR68.30-P-1185LWE
1.3	Remove service flap from side load compartment trim (1).	Model 205.2 with code ME06 (Hybrid drive 60 kW variant (incl. plugin)) Model 253.1/9	
2	Disconnect electrical connector (3).		
3	Remove nuts (2).		
4	Remove left rear lamp unit (E3) or right rear lamp unit (E4).		
5	Install in the reverse order.		