


Model 213.2

Modification notes


01.04.2019	Operation step added.	Step 4	
------------	-----------------------	--------	--

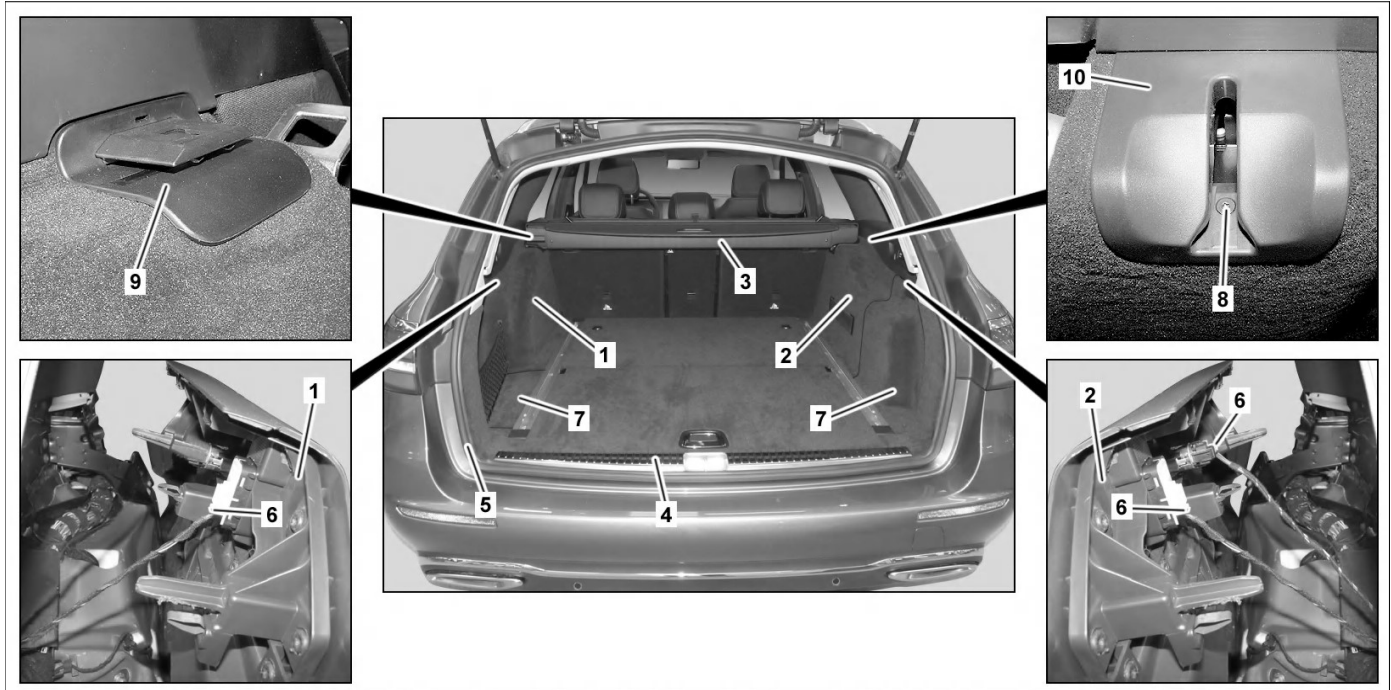

P68.30-3954-09

- | | | |
|--|------------------------|----------|
| 1 Left side load compartment paneling | 5 Edge guard | 8 Screw |
| 2 Right side load compartment paneling | 6 Electrical connector | 9 Cover |
| 3 Luggage compartment roller blind | 7 Cover | 10 Cover |
| 4 Rear center section paneling | | |


- 11 Retaining clips
- 12 Retaining clips

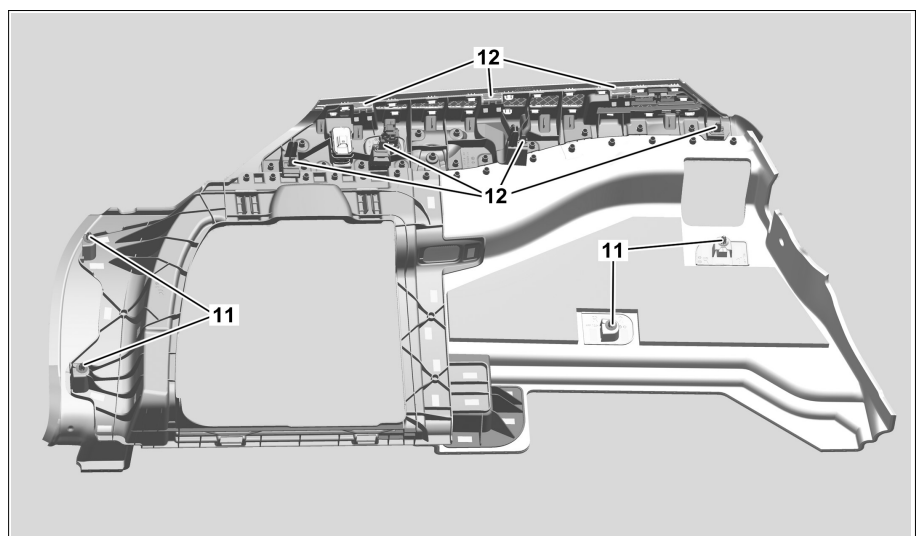

P68.30-3955-05

Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A

☒ ☒	Remove/install		
1	Release and fold over left and right seat backrest in the rear passenger compartment.		
2	Release and remove retractable luggage compartment cover (3).		
3	Remove trim (7) of left side load compartment trim (1) and/or right side load compartment trim (2).		
4	Remove high-voltage battery cover.	Model 213.216	AR68.80-P-6000LWH
5	Remove rear-end center-section trim (4).		AR68.30-P-4786LWT
6	Remove screw (8) and unclip cover (10).	When removing right side load compartment paneling (2). ☒ Dismantling tool	*000589956300
7	Unclip cover (9).	When removing left side load compartment paneling (1). ☒ i Installation: Ensure that spring below upper section of cover (9) is seated correctly. ☒ i Cover (9) consists of two parts. ☒ Dismantling tool	*000589956300
8	Unclip left side load compartment trim (1) and/or right side load compartment trim (2) from the rear to the front from retaining clips (11) and retaining clamps (12).	☒ i Installation: Ensure that edge guard (5) is seated properly..	
9	Disconnect electrical connector (6) of left side load compartment trim (1) and/or electrical connector (6) of right side load compartment trim (2).		
10	Remove left side load compartment trim (1) and/or right side load compartment trim (2).		
11	Install in the reverse order.		

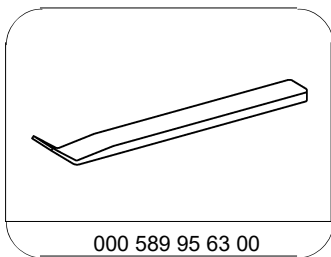

Dismantling tool