## Model 213.0 (except 213.064/088/089), 213.2 (except 213.264/288/289) except code U25 (Illuminated door sill panels with "Mercedes-Benz" lettering)

Illuminated door sill moldings control unit
 Illuminated door sill moldings wiring harness
 Left illuminated door sill molding branch-off line
 Right illuminated door sill molding branch-off line


E17/47 Left front illuminated door sill molding
E17/48 Right front illuminated door sill molding

X30/32 Left interior CAN (CAN B) potential distributor electrical

connector

K40/6 Left fuse and relay moduleW15/7 Right front footwell ground point

br Brown line br/rt Brown/red line rt Red line

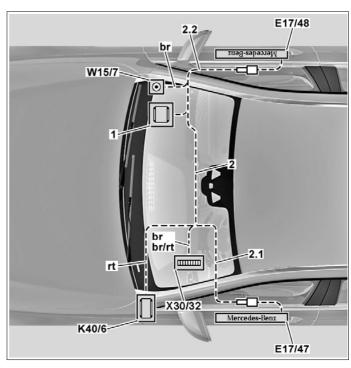


P82.20-4511-12

(1)	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
$\Sigma$	Remove		
1	Move driver seat and front passenger seat towards rear		
2	Disconnect battery ground line		
<b>⊯</b> AR			AR54.10-P-0003LW
3	Remove left and right front inner door sills		
F AR			AR68.30-P-4100LW
4	Detach door seals from entrance area at left and right		
5	Remove bottom paneling for dashboard on driver side		
<b>⊯</b> AR			AR68.10-P-1501LWE
6	Remove left instrument panel cover		
7	Detach left fuse and relay module (K40/6)		
8	Remove bottom paneling for instrument panel on passenger side		
<b>⊯</b> AR			AR68.10-P-1502LWE
9	Remove left and right front door sills		
<b>(1)</b>	Notes on removing adhesive residues and foils on paint and metal surfaces with surface conditioning disks		AH00.00-P-0013-01AK
		i Commercially available surface	
		conditioning disk, Ø 100 mm with fixing shank.	
		The left and right door sills are no longer required.	
		Cleaner	*BR00.45-Z-1025-04A
		Mounting wedge	*110589035900
10	Remove front floor covering on driver side	<u> </u>	
⊯ AR	Ĭ		AR68.20-P-2060LWE
11	Remove front floor covering on passenger side		
<b>₽</b> AR			AR68.20-P-2065LWE
×	Install		

12	Retrofit illuminated door sill molding wiring harness (2)		AZ82.20-P-0001-04LEW
13	Retrofit left front illuminated door sill molding (E17/47) and right front illuminated door sill molding (E17/48)		AZ82.20-P-0001-01LEW
		Nm Right front footwell ground point	*BA00.19-P-1014-02A
14	Retrofit illuminated door sill molding control unit (1)		AZ82.20-P-0001-05LEW
15	Install remaining parts		
	Update Vehicle Documentation (VeDoc)		
16	Attach a note "Illuminated door sill moldings retrofitted as per AZ82.20-P-0001LEW" under field organization texts for DG 68 and DG 82		
4	Check		
17	Cover light sensor in windshield and perform function check on left front illuminated door sill molding (E17/47) and right front illuminated door sill molding (E17/48)	The left front illuminated door sill molding (E17/47) is switched on by opening the front left door and the right front illuminated door sill molding (E17/48) is switched on by opening the front right door. The left front illuminated door sill molding (E17/47) or right front illuminated door sill molding (E17/48) switches off automatically approx. 5 min after opening a door or after automatic shutoff of the ambient illumination.	

## Nm Ground points

Number	Designation			Model 213
BA00.19-P-1014-02A	Right front footwell ground point	W15/7	Nm	10

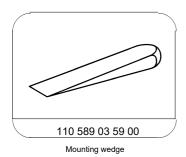

## Repair materials

Number	Designation	Order number
BR00.45-Z-1025-04A	Cleaner	A 005 989 19 71

## Parts ordering note

Part no.	Designation	Quantity
KG 98 (siehe EPC)	Parts kit for illuminated door sill moldings	1