


Model 205
 Model 213
 Model 238
 Model 253

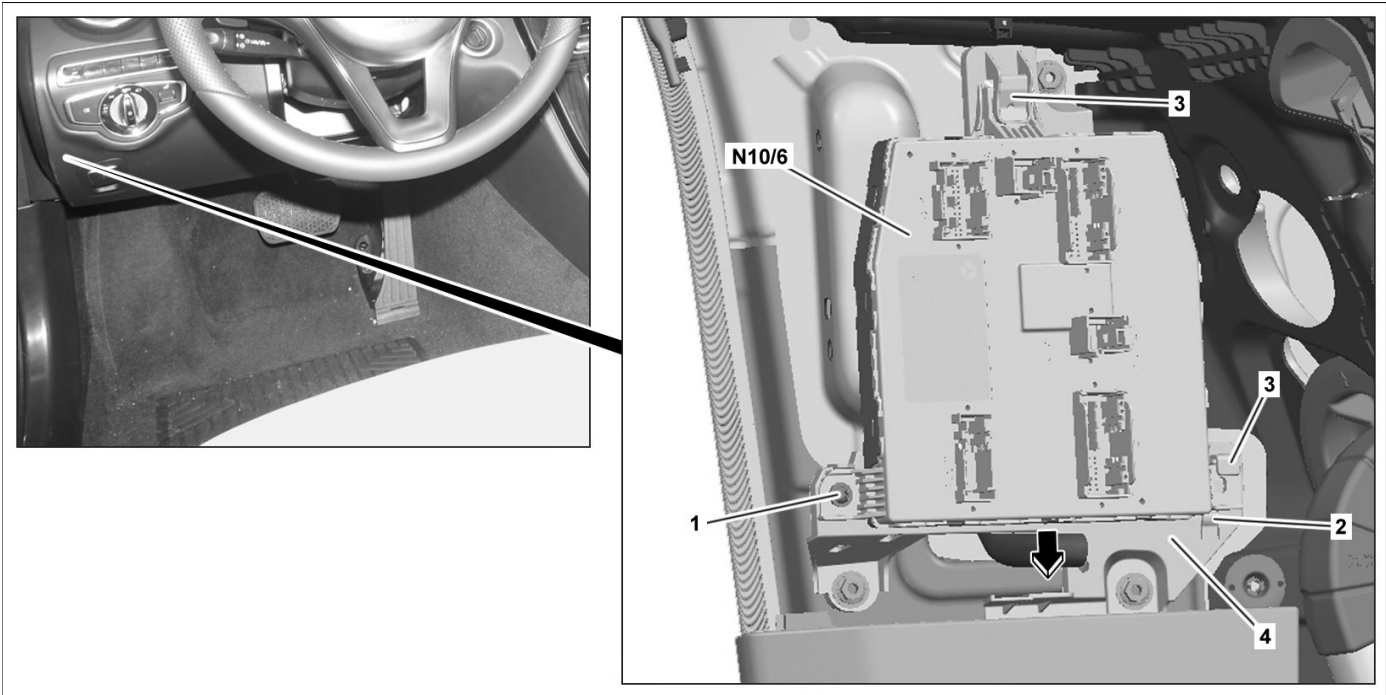

P54.21-3465-09

Shown on MODEL 205.### 1#

1	Screw	4	Bracket
2	Catch hook	N10/6	Front SAM control unit
3	Retaining clamp		

Topical note	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Perform initial startup of front SAM control unit (N10/6)	When replacing front SAM control unit (N10/6). Model 205 Model 213 Model 253 Model 238	AD00.00-P-2000-04B AD00.00-P-2000-06LWO
2	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
3	Remove cover under the instrument panel on the driver-side	Model 205.### 1# Model 253.### 1# Model 205.### 2# Model 253.### 2# Model 213 Model 238	AR68.10-P-1500LW AR68.10-P-1520LW AR68.10-P-1501LWE
4	Remove bolt (1)		
5	Release catch hook (2), move front SAM control unit (N10/6) from retaining clamps (3) (arrow)		
6	Remove front SAM control unit (N10/6) far enough out of holder (4) so that the electrical connectors are accessible		

7	Disconnect all electrical connections on front SAM control unit (N10/6) and remove front SAM control unit (N10/6) out of footwell	i The number of electrical connectors varies according to vehicle equipment. The electrical connections are coded and cannot be interchanged.	
8	Install in the reverse order		