


Model 213

Model 238

## Modification notes

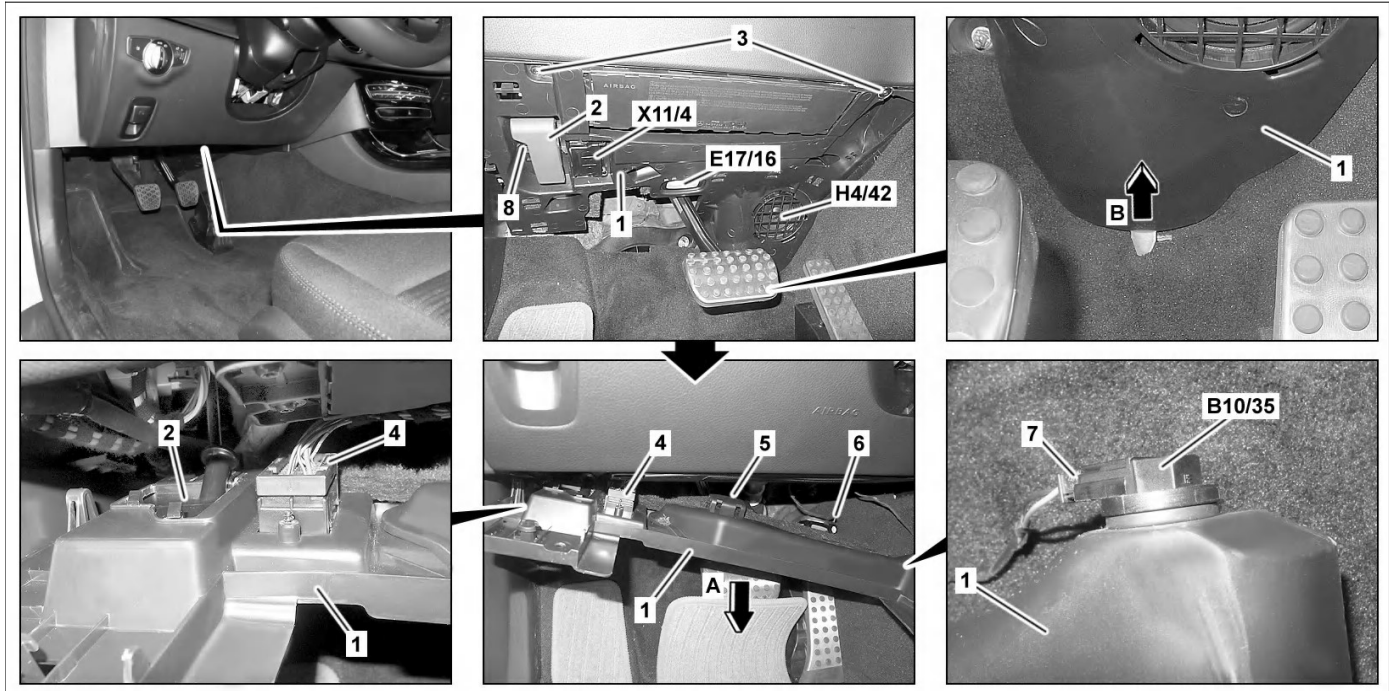

20.03.2017	"Removal of door sill" added.	Operation Step 3	
------------	-------------------------------	------------------	--



P68.10-5445-09

## Shown on model 213.### 1#

1	Cover	7	Electrical connector
2	Engine hood release handle	8	Screw
3	Bolts	B10/35	Left footwell air outlet temperature sensor
4	Electrical connector	E17/16	Left front footwell lamp
5	Electrical connector	H4/42	Left footwell woofer
6	Electrical connector	X11/4	Diagnostic connector

 	Remove/install		
1	Move driver seat to end position toward rear		
2	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
3	Remove door sill molding	Model 213 Model 238	AR68.30-P-4100LW AR68.30-P-4100CLW
4	Remove bolts (3)		
5	Loosen cover (1) and lower (arrow A) until electrical connectors (4, 5, 6 and 7) are accessible		
6	Disconnect electrical connectors (4, 5, 6 and 7)		
7	Unscrew bolt (8)		
8	Remove hood release handle (2) rearwards out of cover (1)		
9	Unhook retaining tab on cover (1) from floor covering (arrow D) and remove cover (1)		
10	Transfer diagnostic connector (X11/4)	When replacing cover (1).	
11	Transfer left footwell woofer (H4/42)	When replacing cover (1).	

12	Transfer left footwell vent air outlet temperature sensor (B10/35)	When replacing cover (1).	
13	Transfer left front footwell lamp (E17/16)	When replacing cover (1).	
14	Install in the reverse order		