

**Model 213**

except code 800 (Model year 2020)  
 except code 806 (Model year 2016)  
 except code 807 (Model year 2017)  
 except code 808 (Model year 2018)  
 except code 809 (Model year 2019)

**Model 238**

except code 800 (Model year 2020)  
 except code 807 (Model year 2017)  
 except code 808 (Model year 2018)  
 except code 809 (Model year 2019)

**Shown on model 213.073**

- 2 "Main menu" button
- 3 Finger navigation pad
- 4 Multifunction display



P00.20-A038-06

	<b>Preparatory activity</b>	
1	Close hood, doors and the trunk lid or liftgate.	
2	Switch electronic ignition lock control unit to position "1" (circuit 15R).	<b>i</b> There must be no fault messages shown on the multifunction display (4).
	<b>Open workshop level</b>	
3	Press "Main menu" button (2).	<b>i</b> The main menu appears in the multifunction display (4).
4	Use swipe movements on the finger navigation pad (3) to select the "Trip" menu item in the multifunction display (4).	
5	Press the "Main menu" button (2) and hold it down for at least 5 s, then release it. Then, within 1.5 s, press the "OK" button on the finger navigation pad (3) for at least 3 s.	
6	Press "Main menu" button (2).	<b>i</b> The main menu appears in the multifunction display (4).
7	Use swipe movements to the left on the finger navigation pad (3) to select the "Workshop" menu item in the multifunction display (4).	<b>i</b> The multifunction display (4) shows the Workshop menu with the tabs: "Vehicle data", "Dynamometer test", "Change brake pad", "ASSYST PLUS".
	<b>Close workshop level</b>	
8	Press "Main menu" button (2) and close "Workshop" menu.	<b>i</b> The main menu appears in the multifunction display (4).
	<b>Finishing activity</b>	
9	Switch electronic ignition lock control unit to position "0".	