


Model 213

- 1 Circuit 30 "E1" connection
- 2 Permanent circuit 30 "E2" connection
- F1/3 Right A-pillar fuse box

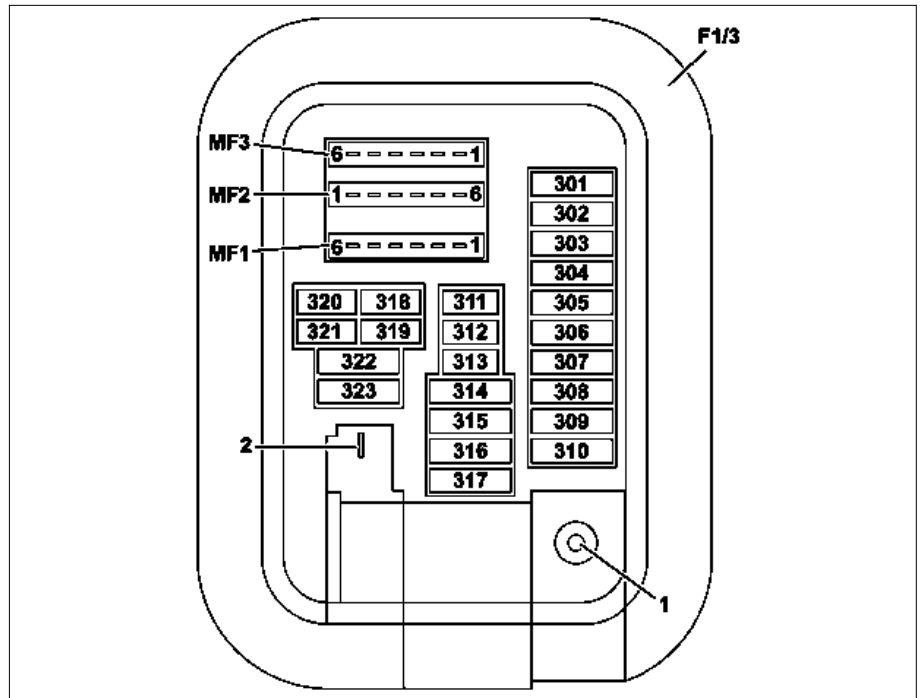

P54.15-3688-06

Slot	Fuse	Clamping device	Wire identification	Fused component	Fuse rating (A)
301	Electrical fuse 301 (F1/3f301)	30t	2.5 RDBU	Left rear door control unit (N69/3)	30
302	Electrical fuse 302 (F1/3f302)	30t	2.5 RD	Right front door control unit (N69/2)	30
303	Electrical fuse 303 (F1/3f303)	30t	2.5 RDGN	Valid with code 221 (Electrically adjustable left driver seat) or code 275 (Memory package): Driver seat control unit (N32/1)	30
304	Electrical fuse 304 (F1/3f304)	30t	2.5 RDYE	Valid with code 222 (Electrically adjustable right front seat) or code 275 (Memory package): Front passenger seat control unit (N32/2)	30
305	Electrical fuse 305 (F1/3f305)	30t	0.35 RDYE	Rain/light sensor with additional functions (B38/2)	5
306	Electrical fuse 306 (F1/3f306)	30t	2.5 RDGY	Valid with code 401 (Seat climate control for driver and front passenger) or code 873 (Seat heater for driver and front passenger), except code 221 (Electrically adjustable left driver seat), code 222 (Electrically adjustable right front seat) and except code 275 (Memory package): Front seat heater control unit (N25/17)	30
			2.5 RD	Valid with code 902 (Seat heater PLUS for driver and front passenger): Front passenger seat heater control unit (N25/4)	
307	Electrical fuse 307 (F1/3f307)	30t	0.35 RD	Valid for code 360 (HERMES UMTS) or code 362 (HERMES LTE): HERMES control unit (N112/9)	5
308	Electrical fuse 308 (F1/3f308)	30t	-	Spare	-
309	Electrical fuse 309 (F1/3f309)	30t	2.5 RDWH	Valid with code 414 (Sliding roof): Sliding roof control module (A98/1)	30
				Valid with CODE 413 (Panoramic sliding sunroof): Panoramic sliding roof control unit (A98n1)	
310	Electrical fuse 310 (F1/3f310)	30t	4.0 RDBK	Right front reversible emergency tensioning retractor (A76/1)	30
311	Electrical fuse 311 (F1/3f311)	30t	1.0 RD	Powertrain control unit (N127)	5
				Valid for diesel engine: CDI control unit (N3/9)	
				Valid for gasoline engine: ME-SFI control unit (N3/10)	
312	Electrical fuse 312 (F1/3f312)	30t	0.75 RDBU	Supplemental Restraint System control unit (N2/10)	7.5

313	Electrical fuse 313 (F1/3f313)	30t	0.5 RDGN	Multimedia connection unit (A90/5)	7.5
314	Electrical fuse 314 (F1/3f314)	30t	2.5RDBK	Valid with CODE 228 (Stationary heater): Stationary heater control unit (A6n1)	20
			0.5 RDBK	Valid for model 213.050: High-voltage PTC heater (N33/5)	5
315	Electrical fuse 315 (F1/3f315)	30t	-	Spare	-
316	Electrical fuse 316 (F1/3f316)	30t	1.5 RDWH	Overhead control panel control unit (N70)	10
317	Electrical fuse 317 (F1/3f317)	30t	1.5 RDBU	Head unit (A26/17)	15
318	Electrical fuse 318 (F1/3f318)	30	0.5 RD	Valid with code 551 (Anti-theft alarm system (ATA)) and code 882 (Interior protection and tow-away protection): Alarm siren (H3/1)	5
319	Electrical fuse 319 (F1/3f319)	30	0.75 RDBK	KEYLESS-GO control unit (N69/5)	10
320	Electrical fuse 320 (F1/3f320)	30	0.5 RDGY	FM, AM, CL, DAB and KEYLESS-GO antenna amplifier (A2/18)	5
321	Electrical fuse 321 (F1/3f321)	30	0.75 RDYE	Electronic ignition lock control unit (N73)	10
322	Electrical fuse 322 (F1/3f322)	30	0.5 RDWH	Instrument cluster (A1)	7.5
323	Electrical fuse 323 (F1/3f323)	30	0.5 RDVT	Diagnostic connector (X11/4)	5
MF1/pin 1	Electrical fuse 324 (F1/3f324)	30t	-	Spare	-
MF1/pin 2	Electrical fuse 325 (F1/3f325)	30t	0.75 RD	Valid with code 22P (Lane package), code 513 (Traffic Sign Assist) or code P35 (Light package) and except code 23P (Driving assistance package Plus): Mono multifunction camera (A40/11)	7.5
				Valid with code 23P (Driving assistance package Plus): Stereo multifunction camera (A40/13)	
MF1/pin 3	Electrical fuse 326 (F1/3f326)	30t	0.5 RDYE	Valid with code 379 (Cordless mobile phone charging): Cellular telephone system antenna amplifier/compensator (A28/15) Mobile phone cradle control unit (N123/8)	7.5
MF1/pin 4	Electrical fuse 327 (F1/3f327)	30t	0.5 RDWH	Valid with code 221 (Electrically adjustable left driver seat), code 222 (Electrically adjustable right driver seat), code P65 (Seating comfort package) or code 275 (Memory package), except code 432 (Left and right dynamic multicontour seat): Driver seat lumbar support adjustment control unit (N32/23)	7.5
			0.35 RDWH	Valid with CODE 432 (Left and right dynamic multicontour seat): Left front multicontour seat control unit (N32/15)	
MF1/pin 5	Electrical fuse 328 (F1/3f328)	30t	0.5 RDBU	Valid with code 221 (Electrically adjustable left driver seat), code 222 (Electrically adjustable right driver seat), code P65 (Seating comfort package) or code 275 (Memory package), except code 432 (Left and right dynamic multicontour seat): Front passenger seat lumbar support adjustment control unit (N32/24)	7.5
			0.35 RDWH	Valid with CODE 432 (Left and right dynamic multicontour seat): Right front multicontour seat control unit (N32/16)	
MF1/Pin 6	Electrical fuse 329 (F1/3f329)	30t	0.5 RDBK	Valid with CODE 239 (DISTRONIC PLUS): DISTRONIC distance pilot controller unit (A108/1)	7.5
				Valid with code 23P (Driving assistance package Plus): Short-range and long-range radar sensor (B92/12)	
MF2/pin 1	Electrical fuse 330 (F1/3f330)	30t	-	Spare	-
MF2/pin 2	Electrical fuse 331 (F1/3f331)	30t	0.35 RDBK	Valid except code 446 (Touchpad only): Audio/COMAND control panel (A40/9)	5
				Valid with code 446 (Touchpad only): Touchpad (A105)	
MF2/pin 3	Electrical fuse 332 (F1/3f332)	30t	-	Spare	-
MF2/pin 4	Electrical fuse 333 (F1/3f333)	30t	0.5 RD	Valid for code 463 (Head-up display): Heads-up display (A40/12)	5
MF2/pin 5	Electrical fuse 334 (F1/3f334)	30t	0.5 RDYE	Valid for model 213.050: Electrical refrigerant compressor (A9/5)	5
MF2/Pin 6	Electrical fuse 335 (F1/3f335)	30t	0.35 RDBU	Valid for CODE P21 (Air quality package): Perfume atomizer generator (N59)	5
MF3/pin 1	Electrical fuse 336 (F1/3f336)	30t	0.5 RDBU	Valid for model 213.050: Pyrofuse (F63) via high-voltage disconnect device (S7)	5
MF3/pin 2	Electrical fuse 337 (F1/3f337)	30t	-	Spare	-
MF3/pin 3	Electrical fuse 338 (F1/3f338)	30t	0.35 RD	Valid for code 448 (Touchpad): Touchpad (A105)	5

MF3/pin 4	Electrical fuse 339 (F1/3f339)	30t	0.35 RDWH	Valid with code 235 (Park-Pilot) and code 489 (AIR BODY CONTROL) or code 238 (Active Lane Keeping Assist), code 266 (DISTRONIC PLUS with Steer Assist and Stop & Go Pilot), code 463 (Head-up display) or code 476 (Lane Keeping Assist): Driver side instrument panel button group (S6/1)	5
MF3/pin 5	Electrical fuse 340 (F1/3f340)	30t	0.35 RDVT	Valid with code 581 (Automatic air conditioning): Rear air conditioning operating unit (N22/4)	5
MF3/Pin 6	Electrical fuse 341 (F1/3f341)	30t	-	Spare	-