


Model 213

K40/6 Left fuse and relay module

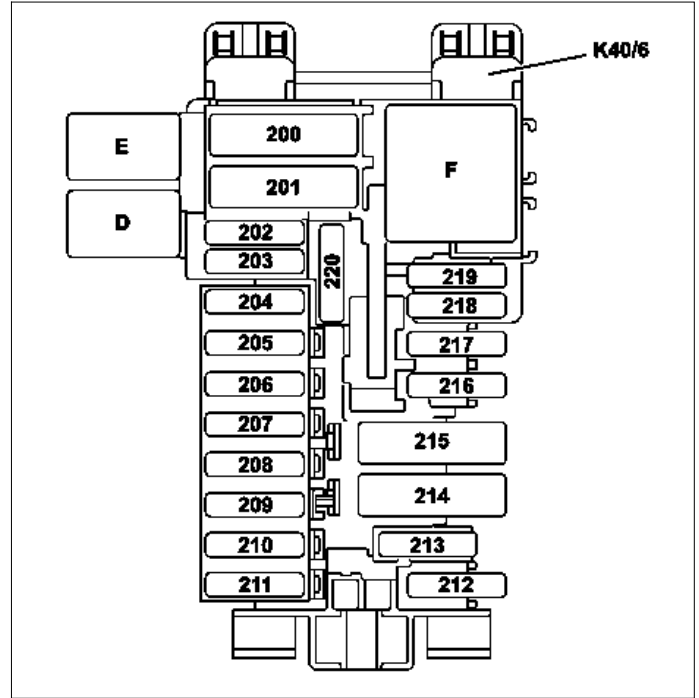

P54.15-3427-12

Slot	Fuse	Clamping device	Wire identification	Fused component	Fuse rating (A)
200	Electrical fuse 200 (K40/6f200)	30t	4.0 RD	Front SAM control unit (N10/6)	40
201	Electrical fuse 201 (K40/6f201)	30t	4.0 RDWH	Front SAM control unit (N10/6)	40
202	Electrical fuse 202 (K40/6f202)	30t	-	Spare	-
203	Electrical fuse 203 (K40/6f203)	30t	2.5 RD	Left front door control unit (N69/1)	30
204	Electrical fuse 204 (K40/6f204)	30t	0.5 BKRD	Valid with CODE 498 (Japan version): Dedicated Short-Range Communications control unit (A50/6) via cockpit fuse block (F11/1)	5
205	Electrical fuse 205 (K40/6f205)	30t	0.5 RD	Steering column tube module control unit (N80)	7.5
206	Electrical fuse 206 (K40/6f206)	30t	0.35 RDYE	Analog clock (A70/1) Upper control panel control unit (N72/1)	5
207	Electrical fuse 207 (K40/6f207)	30t	1.5 RDWH	Valid with transmission 716: Electric steering lock control unit (N26/5)	20
208	Electrical fuse 208 (K40/6f208)	30t	0.5 RD	Audio/COMAND display (A40/8) Audio equipment fan motor (M4/12)	7.5
209	Electrical fuse 209 (K40/6f209)	30t	0.5 RDWH	Climate control operating unit (N58/1)	5
210	Electrical fuse 210 (K40/6f210)	30t	1.5 RDBK	Climate control control unit (N22/1)	15
211	Electrical fuse 211 (K40/6f211)	30t	1.0 RD	Valid with code 238 (Active Lane Keeping Assist) or code 476 (Lane Keeping Assist) or code 443 (Steering wheel heater): Steering column tube module control unit (N80)	15
212	Electrical fuse 212 (K40/6f212)	87	-	Spare	-
213	Electrical fuse 213 (K40/6f213)	30t	4.0 RDGN	Left front reversible emergency tensioning retractor (A76)	30
214	Electrical fuse 214 (K40/6f214)	30t	-	Spare	-
215 - 219	Electrical fuse 215 (K40/6f215) Electrical fuse 219 (K40/6f219)	87	-	Spare	-
220	Electrical fuse 220 (K40/6f220)	30t	-	Reserve solenoid switch (K40/6kD)	25

Relay	Designation
D	Reserve solenoid switch (K40/6kD)
E	Reserve solenoid switch (K40/6kD)
F	Reserve solenoid switch (K40/6kD)