Document title Remove/install power steering pump

Document number ar4630p0500h

Model 463 with engine 102, 103, 104, 112, 113, 117, 157, 273, 279, 602, 603, 612


up to model year 2019

(except 463.228 with engine 117.965), with VT 161 or VT 167 or ZL 167 or LF 67/14 or ZF 67/14

Modification notes

29.01.2020 Document completely revised.

- Bracket
- Return connection
- 3 Pressure fitting
- Poly-V-belt
- 5 Belt pulley
- Power steering pump 6

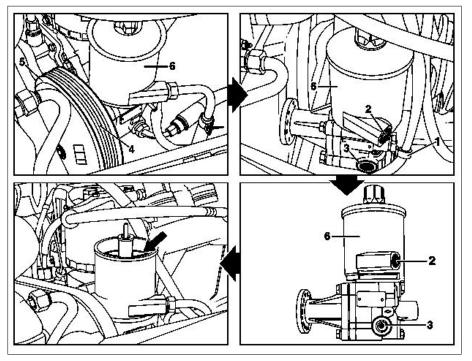

P46.20-2103-06

⚠ Warning	Risk of injury to skin or eyes from hydraulic fluid spraying out under pressure. Risk of poisoning from swallowing hydraulic fluid.	Depressurize hydraulic system completely before starting any work on it. Wear protective clothing and safety glasses.	AS00.00-Z-0013-01A
	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
XX	Remove/install		
1	Remove cap of power-steering pump (6).		
2	Remove the poly-V-belt(4).	Model 463 with engine 102, 103, 104, 112, 113, 117, 157, 273, 279, 602, 603, 612 up to model year 2019(except 463.228 with engine 117.965), with VT 161 or VT 167 or ZL 167 or LF 67/14 or ZF 67/14	
		Model 463 with engine 279 up to model year 2019	AR13.22-P-1202MUD
		Model 463.270/271 with engine 113.993 up to model year 2019	AR13.22-P-1202GX
		Model 463.206/240/241/247/248/249/254 with engine 113.962 up to model year 2019 Model 463.209/232/233/244/245/250 with engine 112.945 up to model year 2019	AR13.22-P-1202B
		Model 463.243/246 with engine 113.982 up to model year 2019	

3	Remove belt pulley (5).	Engine 102 in model 463.200/204/220/221/224/225/235 up to model year 2019 Engine 103 in model 463.227/228/238 up to model year 2019 Engine 104 in model 463.208/230 up to model year 2019 Engine 112 in model 463.209/232/233/244/245 up to model year 2019 Engine 113 in model 463.206/240/241/243/246/247/248/249/270/27 1 up to model year 2019 Engine 117 in model 463.228 up to model year 2019 Engine 273 in model 463.228 up to model year 2019 Engine 279 in model 463.274/275 up to model year 2019 Engine 602 in model 463.324/325 up to model year 2019 Engine 603 in model 463.320/321/327/328/338 up to model year 2019 Engine 612 in model 463.322/323 up to model year 2019 Engine 612 in model 463.322/323 up to model year 2019 Engine 612 in model 463.322/323 up to model year 2019	*BA46.30-P-1004-01B
4	Remove hydraulic lines from pressure connection (3) and return connection (2) and seal openings using suitable stop plugs.	i Collect oil which flows out in a suitable vessel.	*BA46.30-P-1001-01B
		Engine 102 in model 463.200/204/220/221/224/225/235 up to model year 2019 Engine 103 in model 463.227/228/238 up to model year 2019 Engine 104 in model 463.208/230 up to model year 2019 Engine 112 in model 463.209/232/233/244/245 up to model year 2019 Engine 113 in model 463.206/240/241/243/246/247/248/249/270/27 1 up to model year 2019 Engine 117 in model 463.228 up to model year 2019 Engine 273 in model 463.228 up to model year 2019 Engine 273 in model 463.202/222/236/242 up to model year 2019 Engine 279 in model 463.274/275 up to model year 2019 Engine 602 in model 463.324/325 up to model year 2019 Engine 603 in model 463.320/321/327/328/338 up to model year 2019High-pressure expansion hose to power steering pump	*129589009100
5	Remove holder (1) of electric line.		

6	Remove power-steering pump (6).	Engine 102 in model 463.200/204/220/221/224/225/235	*BA46.30-P-1003-01B
		463.200/204/220/221/224/225/235 up to model year 2019 Engine 103 in model 463.227/228/238 up to model year 2019 Engine 104 in model 463.208/230 up to model year 2019 Engine 112 in model 463.209/232/233/244/245 up to model year 2019 Engine 113 in model 463.206/240/241/246/247/248/249/270/271 up to model year 2019 Engine 117 in model 463.228 up to model year 2019 Engine 273 in model 463.202/222/236/242 up to model year 2019 Engine 279 in model 463.274/275 up to model year 2019 Engine 602 in model 463.324/325 up to model year 2019 Engine 603 in model 463.320/321/327/328/338 up to model year 2019 Engine 612 in model 463.322/323 up to model year 2019 Engine 612 in model 463.322/323 up to model year 2019 Engine 102 in model 463.200/204/220/221/224/225/235 up to model year 2019 Engine 103 in model 463.227/228/238 up to model year 2019 Engine 104 in model 463.208/230 up to model year 2019 Engine 112 in model 463.209/232/233/244/245 up to model year 2019 Engine 113 in model 463.209/232/233/244/245 up to model year 2019 Engine 117 in model 463.206/240/241/243/247/248/249/270/271 up to model year 2019 Engine 17 in model 463.228 up to model year 2019 Engine 17 in model 463.228 up to model year 2019 Engine 17 in model 463.228 up to model year 2019 Engine 273 in model 463.228 up to model year 2019 Engine 279 in model 463.228 up to model year 2019 Engine 602 in model 463.324/325 up to model year 2019 Engine 602 in model 463.324/325 up to model year 2019 Engine 603 in model 463.320/321/327/328/338	*BA46.30-P-1002-01B
		up to model year 2019Self-tapping screw,	
7	Install in the reverse order.	power steering pump to timing case	
8	Pour steering gear oil into power steering expansion reservoir and correct.	Model 463 with engine 102, 103, 104, 112, 113, 117, 157, 273, 279, 602, 603, 612 up to model year 2019(except 463.228 with engine 117.965), with VT 161 or VT 167 or ZL 167 or LF 67/14 or ZF 67/14	
F BB	Specified gear oils (cars, cross-country vehicles) - survey		BB00.40-P-0231-01A
		Model 463 with engine 157, 273, 279 as of model year 2010 up to model year 2019	AR46.20-P-0500-10F
		Power steering Power steering pump	*BF46.20-P-1001-01B *BF46.20-P-1002-01B
⚠ Warning	Risk of accident from vehicle starting off by	Power steering pump Secure vehicle to prevent it from starting off by	
	itself when engine running. Risk of injury (bruises and burns) resulting from working on the engine while it is being started or when it is running.	itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	
9 ☞AP	Bleed steering and check for leak tightness.		AP46.00-P-4611G
		i To bleed, allow engine to idle and turn steering to left and right several times. When doing so, the steering gear oil must be refilled, if necessary.	AF 40.00-F-40 1G
10	Attach cap of power-steering pump (6).	i Ensure gasket is correctly installed. Replace seal.	

Number	Designation			Model 463.200/204/206/207 /208/209/21/220/221/ 224/225/227/228/230 /232/233/235/238/24 0/241/243/244/245/2 46/247/248/249/25/2 70/271/274/275 Model 463.30/320/321/324/ 325/327/328/33/34	7/242
BA46.30-P-1001-01B	High-pressure expansion hose to power steering pump	M14x1.5	Nm	30	30
		M16x1.5	Nm	40	40

Nm Power steering pump

Number	Designation			Model 463.200/204/206/207 /208/209/21/220/221/ 224/225/227/228/230 /232/233/235/238/24 0/241/243/244/245/2 46/247/248/249/25/2 70/271/274/275 Model 463.30/320/321/324/ 325/327/328/33/34	7/242
BA46.30-P-1002-01B	Self-tapping screw, power steering pump to timing case	Thread not pre-tapped	Nm	35	35
		Thread pre-tapped	Nm	20	20

Nm Power steering pump

Number	Designation			7/208/209/21/220/22
BA46.30-P-1003-01B	Screw/bolt, power steering pump to carrier N	lm	20	20

Nm Power steering pump

Number	- · · · g · · · · · ·		Model 463.202/222/236/23 7/242
BA46.30-P-1003-01B	Screw/bolt, power steering pump to carrier	Nm	20

Nm Power steering pump

	Designation	/332/333/334/339/34	Model 463.200/204/206/20 7/208/209/21/220/22 1/224/225/227/228/2 30/232/233/235/238/ 240/241/243/244/24 5/246/247/248/249/2 5/270/271/274/275 Model 463.30/320/321/324/ 325/327/328/33/34
BA46.30-P-1004-01B	Screw/bolt at belt pulley Nm	22	20

Nm Power steering pump


Number	Designation		Model 463.202/222/236/23 7/242
BA46.30-P-1004-01B	Screw/bolt at belt pulley	Nm	20

Filling capacities for steering gear

Number	Designation		Model 461, 463
BF46.20-P-1001-01B	Power steering	Filling capacity for MB power Liter steering fluid	1,0
		Sheet	BB00.40-P-0236-03 A

Filling capacities for steering gear

Number	Designation		Model 461, 463
BF46.20-P-1002-01B	Power steering pump	Filling capacity for MB power Liter steering fluid	0,38
		Sheet	BB00.40-P-0236-03 A

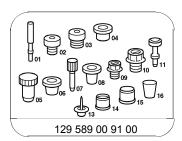

Record plug