

Head Rest: Removal and Replacement

AR91.16-P-0040GZ Remove/Install Head Restraint on Front Seat


AR91.16-P-0040GZ Remove/Install Head Restraint on Front Seat
 - Electrically adjustable head restraint

1 Head restraint



P91.16-2277-02

Component Identification

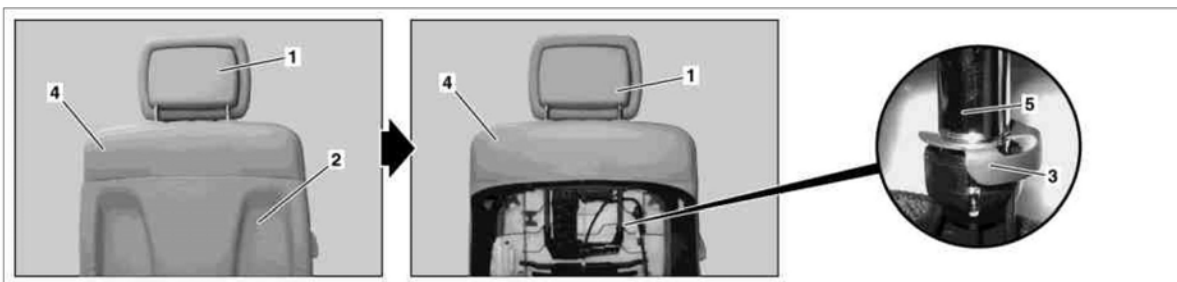

P91.16-2349-07

- 1 Head restraint
- 2 Back shell
- 3 Clip

- 4 Front seat backrest
- 5 Guide

Component Identification

Modification notes

26.7.06	"Disconnect/connect battery ground line" removed	Step 2	
---------	--	--------	--

Modification Notes

№	?	Remove/install		
K		Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1		Remove back shell (2) on front seat backrest (4)		AR91.10-P-1915GZ
2		Unclip clip (3) from guide (5)		
3		Disconnect electrical connector	D Vehicles with code 438 NECK.PRO.	
4		Tilt front seat backrest to the rear (4)		
5		Pull head restraint (1) out upward	X Carefully remove head restraint (1) to avoid damaging the headliner.	
6		Install in the reverse order		

Steps 1 - 6