


	Function	Fuse				
B	A/C Module	12				
C	Airbag	61				
A,C	AIRMATIC / Control unit height adjustment	32	53	108		
C	Antenna	20				
A	ATA Horn	110				
A	Auto. Transmission	111	116			
C	Backup camera	37				
B	Blower, Rear passenger compartment, 2nd row	10				
C	CA Head Restraints	59				
B	CD Changer	14				
C	Cellphone	23				
C	Child Seat Recognition	61				
C	Cigar lighter	46				
B	Compass Module	15				
C	Diagnostics Outlet	58				
A	DISTRONIC	117				
C	Door CU, Driver	34				
C	Door CU, Passenger	26				
C	Elec. Seat Adjustment, Driver	28	63			
C	Elec. Seat Adjustment, Passenger	27	62			
C	Emergency Tensioning Retractor	24	29	52		
A,C	Engine CU	51	102	114	118	120
A	ESP	109	115			
C	Folding 3rd Seat Line	30				
C	Fuel Pump	57				
C	Fuel Pump CU	30	53			
C	Glove Box Light	60				
A,C	Headlamp Range Adjustment	54	112			
C	Heated Seat Rear	68				
A	Horn	113				
B	Ignition Lock	14				
B,C	Instrument cluster	11	55			
C	KEYLESS GO	33				
C	Light Control Switch	55				
C	LINGUATRONIC	20				
C	Multi-contour Seat	66				
C	Panorama Sunroof	42				
C	PARKTRONIC	22				
C	Power Outlet 2nd Seat Line	45				
C	Power Outlet Fr. Passenger	44				
C	Power Outlet Trunk	45				
C	Radio systems	25				
C	Rear Control Panel	21				
C	Rear Seat Entertainment	23				
C	Rear Window Defroster	49				
C	Remote tailgate closing	40				
A,C	Residual Engine-Heat Utilization	22	121			
C	Roof Unit	41				
C	RR Diff. Lock	48	52	69		
C	RR Fan	67				
C	RR Wiper	50				
C	Sat Radio	39				
A	Secondary Air Pump	107				
C	Sound Amplifier	35				
A	Starter	122	105			
B	Steering Column Module	13				
C	Steering Wheel Heater	31				
A	Supply Eng.	101	103	104	105	
B	Switch panel	13				
C	TELEAID / VICS (Japan)	36	60			
C	Tire Pressure Control	39				
C	Trailer Brake (US)	71				
C	Trailer hitching	70	72			
C	TV-Tuner / Radio system Japan	38				
A,C	Wipers, front	60	100			
A	OPEN	106				
A	OPEN	119				
A	OPEN	123				
B	OPEN	16				
B	OPEN	17				
B	OPEN	18				
C	OPEN	37				
C	OPEN	47				
C	OPEN	64				
C	OPEN	65				
A	OPEN	124				
A	OPEN	125				

A: Sicherung · Fuse · Fusible 100 - 125

Im Motorraum rechts, im Gerätekasten

In the engine compartment, on the right side

Dans le compartiment moteur, à droite

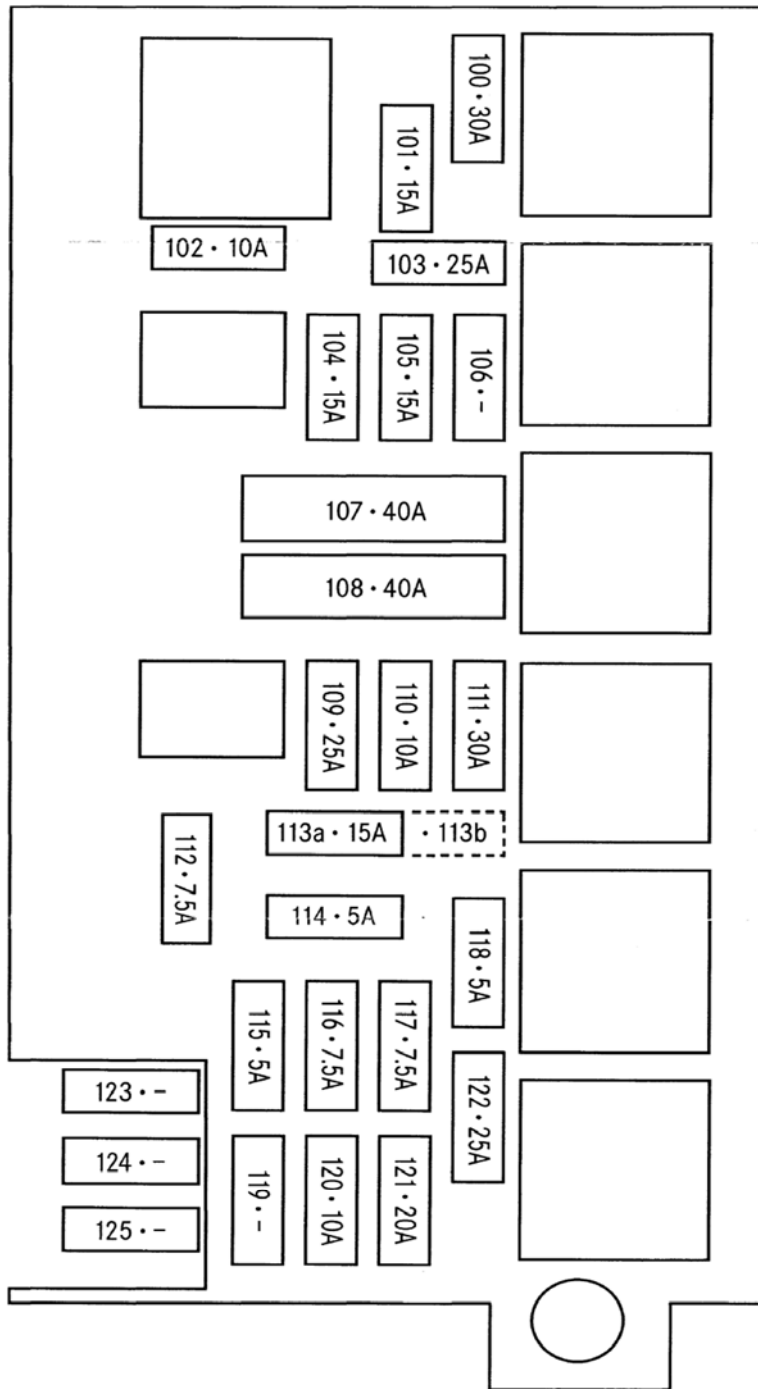


B: Sicherung · Fuse · Fusible 10 - 18

Seitlich im Cockpit auf der rechten Seite

In the cockpit, on the right side

Sur le côté droit du poste de conduite

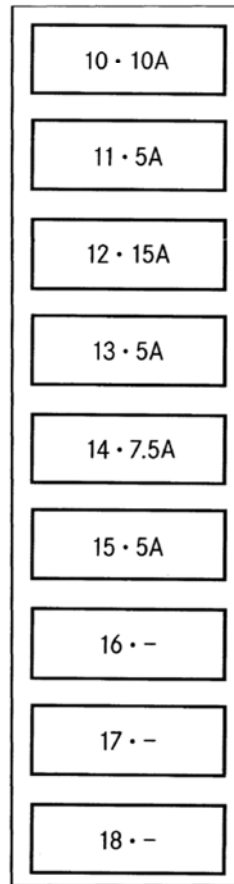

Sicherungswerte · Fuse rating · Valeur des fusibles

Ampere	Farbe	Colour/Color	Couleur
5	beige	tan	beige
7,5	braun	brown	brun
10	rot	red	rouge
15	blau	blue	bleu
20	gelb	yellow	jaune
25	natur	natural	nature
30	grün	green	vert
40	orange	orange	orange
50	rot	red	rouge
60	blau	blue	bleu

C: Sicherung · Fuse · Fusible 20 - 72

Im Gepäckraum rechts, hinter Seitenverkleidung

In the trunk, on the right side

Dans le compartiment de chargement, à droite

