








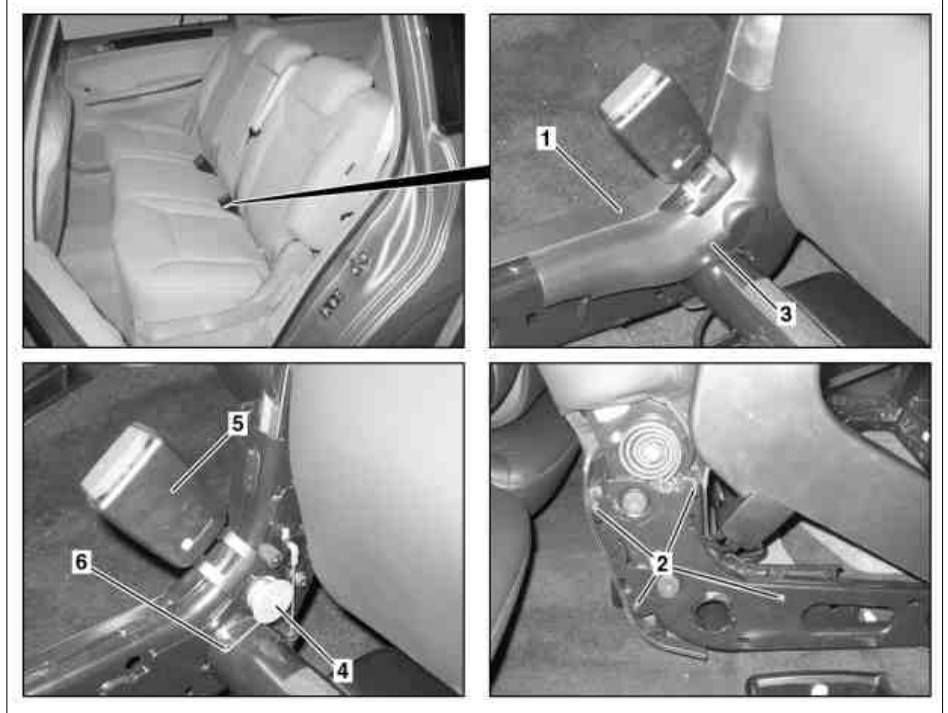

MODEL 164.8
60 % rear seat, center

Shown on vehicle without left and right rear sidebag, code 293

- 1 Cover
- 2 Bolts
- 3 Cover
- 4 Bolt
- 5 Rear seat buckle
- 6 Spring



P91.40-2672-06

|   | Remove/install | | |
|---|--|---|---------------------|
| 1 | Release 40 % rear seat and set upright |  The 60 % rear seat must be accessible from the side. | |
| 2 | Lift up cover (1) |  Swivel upwards and lock. | |
| 3 | Unscrew bolt (2) |  Power screwdriver/drill | *WH58.30-Z-1007-20A |
| 4 | Unclip cover (3) | | |
| 5.1 | Detach electrical connector for seat belt buckle |  On vehicles with left and right rear sidebag, code 293. | |
| 6 | Unscrew bolt (4) from rear seat seat belt buckle (5) |  | *BA91.40-P-1007-01H |
| 7 | Remove rear seat-seat belt buckle (5) |  Installation: Check rear seat seat belt buckle (5) for signs of damage. Ensure correct installation position of springs (6). | |
| 8 | Install in the reverse order | | |

 **Seat belts/emergency tensioning retractors**

| Number | Designation | Model |
|--------------------|--------------------------------|----------------|
| | | 164.1/8 |
| BA91.40-P-1007-01H | Bolt, belt buckle to rear seat | Nm 35 |

Commercially available tools

| Number | Designation |
|--------------------|-----------------------|
| WH58.30-Z-1007-20A | Cordless drill/driver |