MODEL 164

Illustrated on model 164.8

- Bolt
- Bolt
- 2 3 Instrument panel
- S1 Exterior lamp switch



P54.25-4879-06

X	Remove/install		
1	Switch off ignition and remove transmitter key from EIS control unit	Press Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	,
2	Remove the side paneling of the instrument panel		
3	Undo screw (1, 2)		
4	Lift the instrument panel (3) and unclip rotary light switch (S1) from the back on the left side		
5	Unclip clips (arrows) on the right-hand side and remove rotary light switch (S1) forwards		
6	Disconnect electrical connector		
7	Install in the reverse order		
8	Carry out function check		