


GF54.15-P-1256-22GR Fuse assignment of cockpit fuse box GF

- F3/2 Circuit 30 cockpit fuse box (electrical fuses f10 - f18)
- F3/3 Circuit 30g cockpit fuse box (electrical fuses f19 - f22)

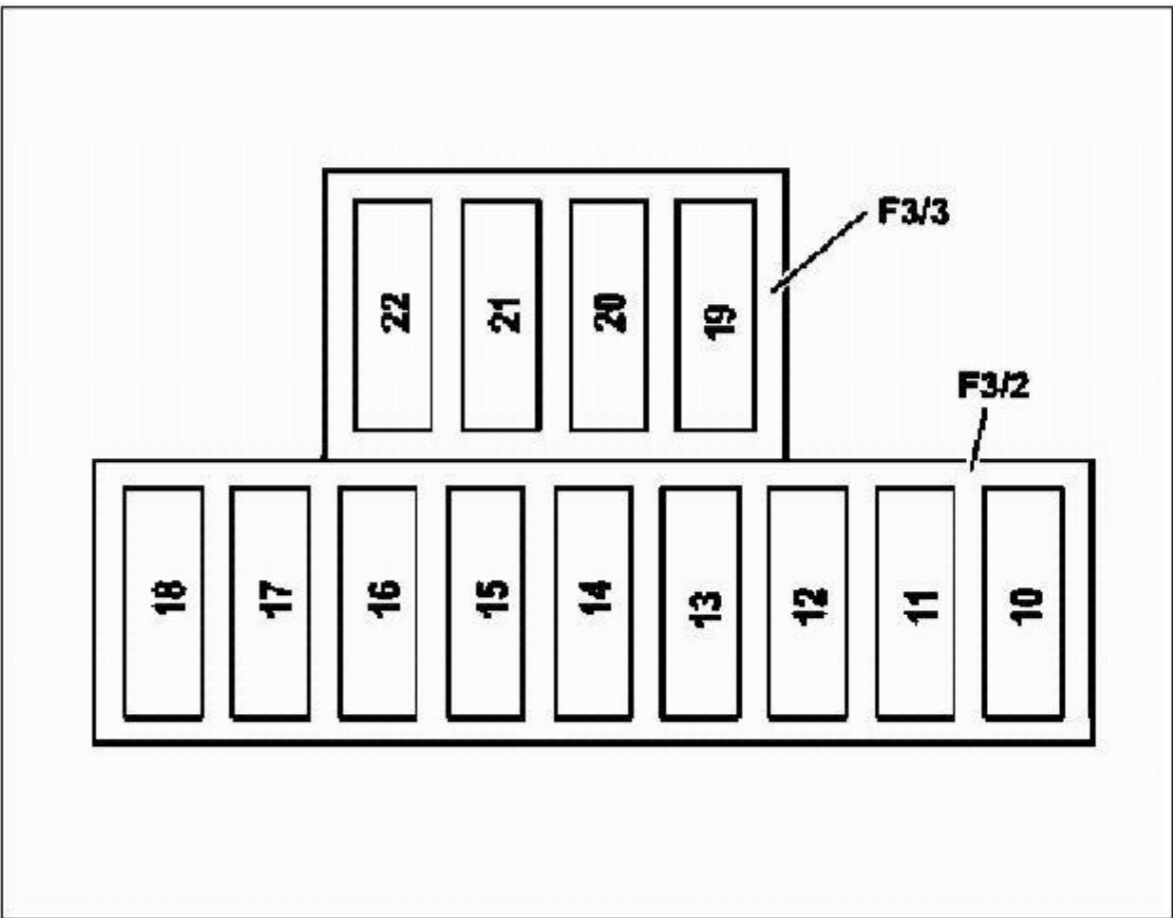

P54.15-3412-11

i The designations 10 to 22 relate to the electrical fuses f10 to f22 respectively

P54.15-3412-11

i The designations 10 to 22 relate to the electrical fuses f10 to f22 respectively.

Fuse	Circuit	Line ID (fused line)	Fused function	Rating in amperes (A)
f10	30	0.5 RDWH	<ul style="list-style-type: none"> Electronic ignition lock control unit (N73) 	7.5
f11	30	0.75 RDWH	Valid for code (238) Active Lane Keeping Assist, code (443) Steering wheel heater or code (476) Lane Keeping Assist: <ul style="list-style-type: none"> Steering column tube module control unit (N80) 	10
f12	30	0.5 RDWH	<ul style="list-style-type: none"> Instrument cluster (A1) 	5
f13	30	1.0 RDWH	Valid for code (581) comfort automatic air conditioning: <ul style="list-style-type: none"> Booster blower electronic blower controller (N29/8) 	15
f14	30	0.5 RDWH	<ul style="list-style-type: none"> Diagnostic connector (X11/4) 	5
f15	30	0.5 RDWH	<ul style="list-style-type: none"> Upper control panel control unit (N72/1) 	5
f16 - f18	30	-	<ul style="list-style-type: none"> Spare 	-
f19	30g	1.5 RDBK	<ul style="list-style-type: none"> Automatic air conditioning control and operating unit (N22/7) 	15
f20	30g	0.5 RDBK	<ul style="list-style-type: none"> Steering column tube module control unit (N80) 	5
f21	30g	0.5 RDBK	<ul style="list-style-type: none"> Audio/COMAND display (A40/8) 	5
f22	30g	-	<ul style="list-style-type: none"> Spare 	-