
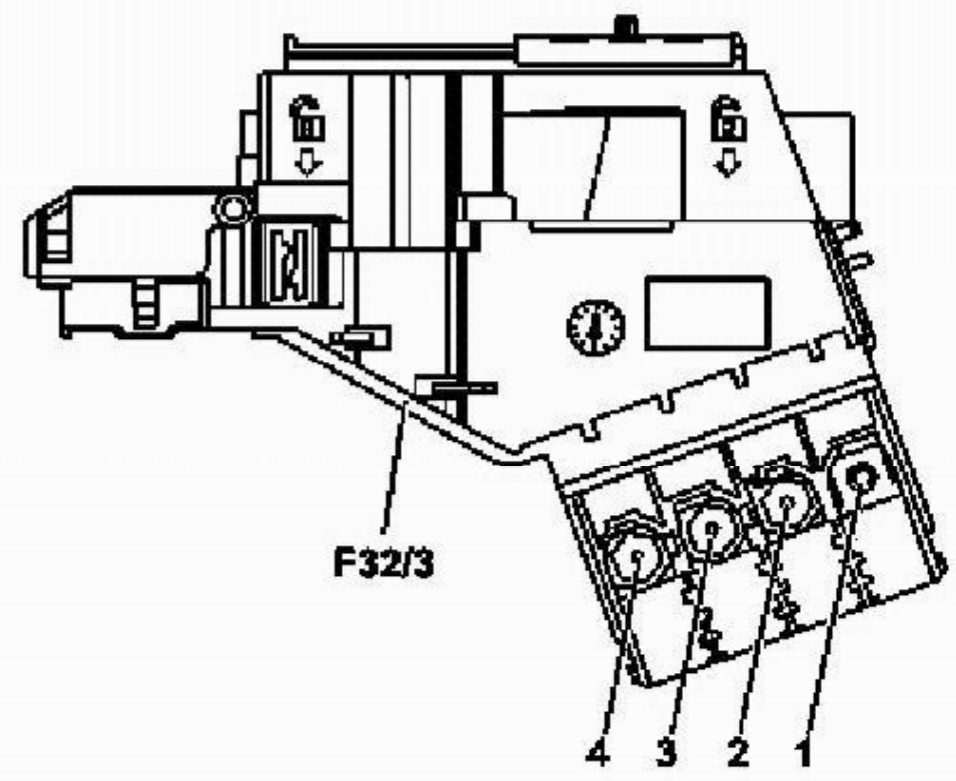


GF54.15-P-1256-07GR Fuse assignment of front prefuse box

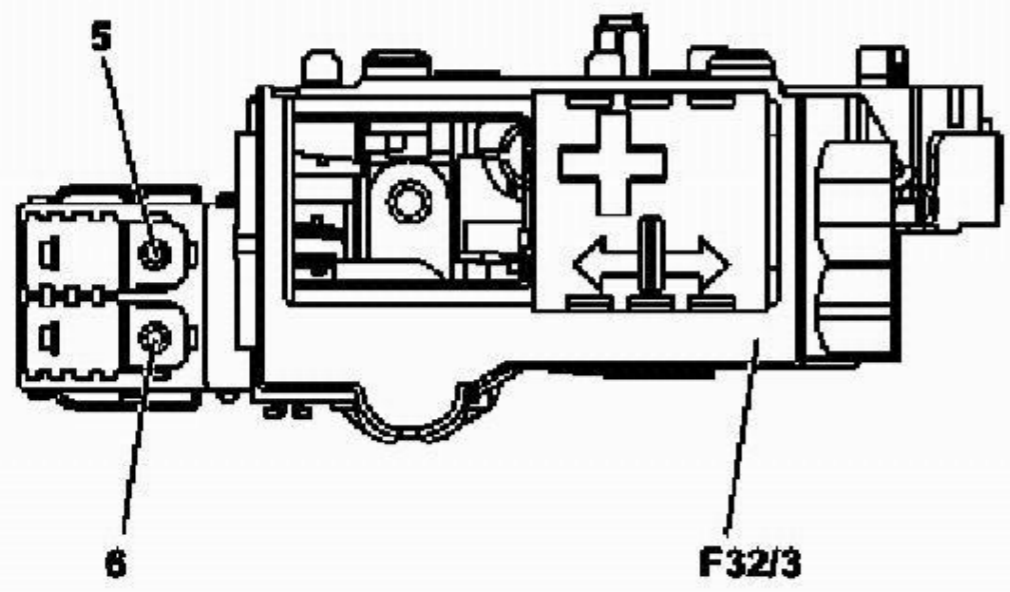

Viewed from top

F32/3 Engine compartment prefuse box

i The designations 1 to 6 relate to the electrical fuses f1 to f6 respectively.

Page view

i The pyrofuse (F32/3f88) is integrated into the engine compartment prefuse box.

Fuse	Circuit	Line ID (line fused)	Fused function	Rating in amperes (A)
f1	30	4.0 RDWH	● Electronic Stability Program control unit (N30/4)	40
f2	30	-	● Spare	-
f3	30	2.5 RDWH	Valid for code (B03) ECO start/stop function: ● Engine compartment fuse and relay module (F58)	30
f4	30	-	● Spare	-
f5	30	16.0 RD	● Engine compartment fuse and relay module (F58)	150
f6	30	12.0 RD	● Fan motor (M4/7)	125
f7	30	35.0 RD	● Interior prefuse box (F32/4)	400
f8	30	12.0 RD	● Electrical power steering control unit (N68)	100

i The electrical fuses f7 and f8 are located inside the plastic housing.