






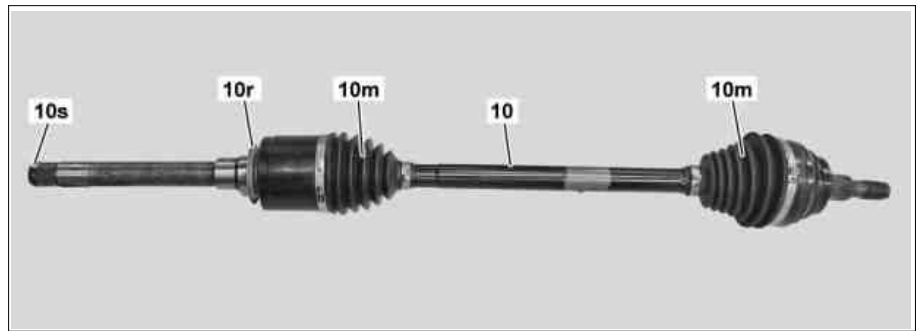

 
Model 166 (except 166.006), 292

10 Front axle shaft
 10m Boot
 10r Protective ring
 10s Retaining ring



P33.30-2151-04

 	Remove/install		
1	Remove steering knuckle		AR33.25-P-0400GZ
2	Detach suspension strut from lower transverse control arm	<p> Installation: Only tighten threaded connections of suspension components when in ready-to-drive condition!</p> <p> Self-locking nut, shock absorber to wishbone</p>	*BA32.25-P-1002-01O
3	Pull front axle shaft (10) out of front axle transmission and remove	<p> Do not damage boots (10m) and protective ring (10r) of front axle shaft (10) and radial shaft sealing ring in the front axle transmission!</p> <p> Installation: Replace retaining ring (10s).</p>	
4	Install in the reverse order		

 Front axle shock absorber

Number	Designation			Model 166	Model 292
BA32.25-P-1002-01O	Self-locking nut, shock absorber to wishbone	Stage 1	Nm	100	100
		Stage 2	°	180	180