


Model 167, 213, 238, 253.99, 257, 290, 293  
 Model 205  
 as of model year 2019  
 Model 222  
 as of model year 2018

Shown on model 213.0


- 2 "Back" button
- 3 Finger navigation pad
- 4 Multifunction display

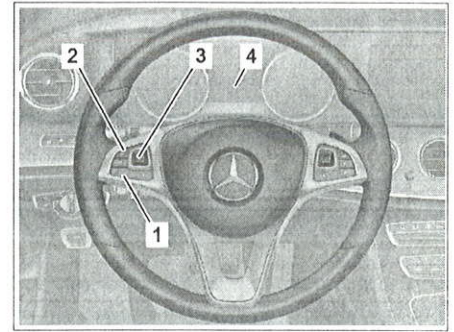

P00.20-2891-01

Shown on model 222.0 as of model year 2018

- 2 "Back" button
- 3 Finger navigation pad
- 4 Multifunction display

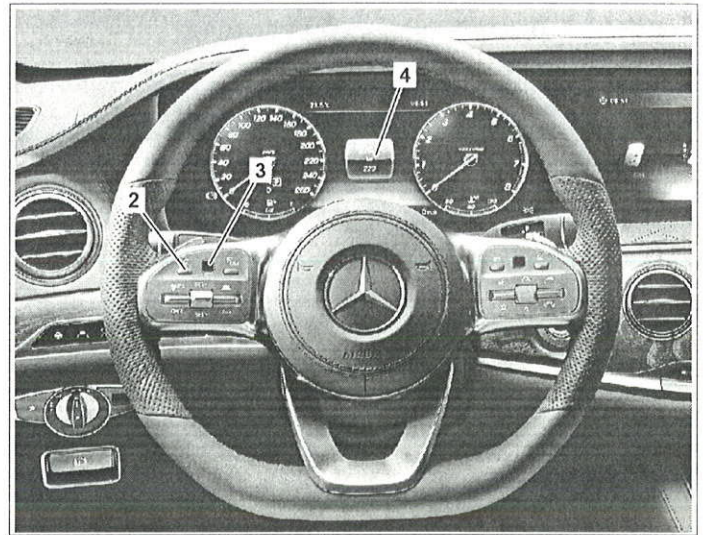

P00.20-2941-11

	<b>Preparatory activity</b>		
1	Switch electronic ignition lock control unit to position "1" (circuit 15R).	<b>i</b> There must be no fault messages shown on the multifunction display (4).	
	<b>Open workshop level</b>		
2	Use swipe movements on the finger navigation pad (3) to select the "Trip" menu item in the multifunction display (4).		
3	Use swipe movements on the finger navigation pad (3) in the "Trip" menu to select the standard "Total distance" display in the multifunction display (4).		
4	Press and hold "Back" (2) button for 1.5 s and press on finger navigation pad (3).	<b>i</b> The multifunction display (4) shows the Workshop menu with the tabs: "Vehicle data", "Dynamometer test", "Brakepad change mode" or "Brakepad change", "ASSYST PLUS", "Head-up-display" (depending on equipment installed).	
	<b>Close workshop level</b>		
5	Press "Back" button (2) again until the workshop entry menu is shown on the multifunction display (4).		
6	Use swipe movements on the finger navigation pad (3) to select and confirm the "Trip" menu item.		
	<b>Finishing activity</b>		