


MODEL 204, 207, 212 except CODE (581) Comfort automatic air conditioning

Shown on model 204.0 up to 28.2.2011

- 1 Left floor coverings
- 2 Right floor coverings
- 3 Instrument panel
- 4 Bolts
- 5 Bolts
- 6 Electrical connector
- 7 Electrical connector

- M2/6 Left blend air flap actuator
- M2/7 Right blend air flap actuator

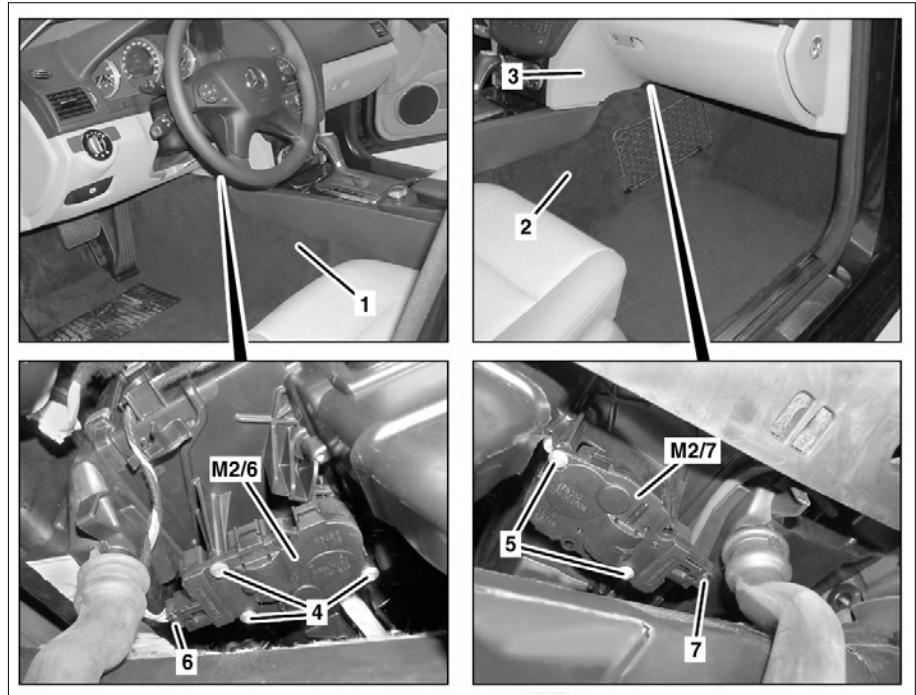

P83.10-2590-06

☒ ☒	Remove/install		
1	Remove cover below instrument panel (3) on left	Model 204.9, 212, when removing left blend air flap actuator motor (M2/6).	
2	Remove cover below instrument panel (3) on right	Model 204.9, 212, when removing right blend air flap actuator motor (M2/7).	AR68.10-P-1520CW
3	Remove left floor covering (1) or right floor covering (2) far enough from instrument panel (3) so that left blend air flap actuator motor (M2/6) or right blend air flap actuator motor (M2/7) can be accessed and removed		
4	Remove screws/bolts (4)	When removing the left blend air flap actuator motor (M2/6). Screwdriver insert for actuator motor	WF58.50-P-8320-01A
5	Remove bolts (5)	When removing the right blend air flap actuator motor (M2/7). Screwdriver insert for actuator motor	WF58.50-P-8320-01A
6	Detach electrical connector (6) and remove left blend air flap actuator motor (M2/6)	When removing the left blend air flap actuator motor (M2/6).	
7	Detach electrical connector (7) and remove right blend air flap actuator motor (M2/7)	When removing the right blend air flap actuator motor (M2/7).	
8	Install in the reverse order		
9	Teach in and normalize the left blend air flap actuator motor (M2/6) or the right blend air flap actuator motor (M2/7) with Star Diagnosis	i Menu item: control unit adaptations, teach in actuator motors, normalize actuator motors.	AD00.00-P-2000-04A