

USA, LLC. Thus, operation at certain locations may not be possible.

Registering satellite radio

Requirements:

- Satellite radio equipment is available.
- Registration with a satellite radio provider has been completed.
- If registration is not included when purchasing the system, your credit card details will be required to activate your account

Multimedia system:

 Home >> Radio >> SiriusXM >> Options


▶ Select **Service Information**.

The service information screen appears showing the radio ID and the current subscription status.

▶ Establish a telephone connection.

▶ Follow the service staff's instructions.

The activation process may take up to ten minutes.

 You can also have the satellite service activated online. To do so, please visit <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).

Switching on satellite radio

Multimedia system:

 Home >> Radio

▶ Select **SiriusXM**.

Overview of the satellite radio



- ① Active frequency band
- ② Logo or album art (if available)
- ③ Channel name
- ④ Track information

- ⑤ Traffic & Weather Now and Sports Flash
- ⑥ Options
- ⑦ Shows or hides playback controls
- ⑧ Stops playback controls

- ⑨ Station list
- ⑩ Search

Selecting a satellite radio category

Multimedia system:

Radio >> SiriusXM

Select

- Select **Category**.
- Select a category.

Selecting a satellite radio channel

Multimedia system:

Radio >> SiriusXM

Select

- Select a channel.

Saving or deleting a satellite radio channel

Multimedia system:

Radio >> SiriusXM

Storing the current channel

- Press and hold the logo of the current station until the Options menu appears.
- Select **Add to Presets**.

Moving a channel

- Press and hold a channel in the presets until the Options menu appears.
- Select **Move Highlighted Station**.
- Move the channel to a new position.

Deleting a channel

- Press and hold a channel in the presets until the Options menu appears.
- Select **Delete Highlighted Station**.

Displaying EPG information for the current channel

Multimedia system:

Radio >> SiriusXM
>>

- Select **Electr. Program Guide**.

Setting parental control for radio

Multimedia system:

Radio >> SiriusXM
>>

- Select **Parental Control**.

- Determine a four-digit character sequence and select **ok**.
All channels with adult content are locked.

Unlocking a channel

- Enter the four-digit character sequence and select **ok**.
All channels with adult content are unlocked.

Music and sport alerts function

This function enables you to program an alert for your favorite artists, tracks or sporting events. Music alerts can be saved whilst a track is being played and sport alerts can be saved during a live game. You can also specify sport alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a stored alert, you will be informed.

Setting music and sport alerts

Multimedia system:

Radio >> SiriusXM
>> >> Alerts

Activating the music information function

- Activate **Music Alerts** .

Setting a music alert

- ▶ Select [Add Alert](#).
- ▶ Select [Artists](#) or [Song](#) in the dialog window. The alert is set for the current artist or track. If a match is found, a prompt appears asking whether you wish to change to the station.

Activating sports information

- ▶ Activate [Activate Sports Alerts](#) .

Setting a sport alert

- ▶ Select [Add Alert](#).
- ▶ Select the team name or league in the dialog window.

Deleting individual sports and music alerts

- ▶ Select [Manage Music Alerts](#).

or

- ▶ Select [Manage Sports Alerts](#).
- ▶ Select an artist or track.

or

- ▶ Select a team.
- ▶ Select [Delete Selected Entries](#). All highlighted alerts are deleted.

Deleting all sports and music alerts

- ▶ Select [Manage Music Alerts](#).

or

- ▶ Select [Manage Sports Alerts](#).
- ▶ Select [Delete All Entries](#). All alerts are deleted.

Information about Smart Favorites and TuneStart

From the station presets you can set up to eight stations as Smart Favorites. Smart Favorites stations are automatically saved to temporary storage in the background. If you change to a Smart Favorites station, you can replay, pause or actively skip forward or back to broadcasts which you have missed. If Tune Start is activated and you change to another Smart Favorites station, the music track currently playing on the station is automatically restarted from the beginning of the track.

Adding a channel to Smart Favorites

Multimedia system:

▶  ▶  ▶ [Radio](#) ▶ [SiriusXM](#)


- ▶ Press and hold on the station logo until the Options menu appears.
- ▶ **To add a channel:** select [Add to Smart Favorites](#) in the menu.
- ▶ **To remove a channel:** select [Delete from Smart Favorites](#) in the menu.

Creating a TuneMix list

Multimedia system:

▶  ▶  [Radio](#) ▶ [SiriusXM](#)
▶  ▶ [TuneMix Lists](#)

In order to listen to seamless music, you can put together a TuneMix list from various stations.

- ▶ Select [Create TuneMix List](#).
- ▶ If necessary, limit the number of stations shown using the [Category](#) entry.
- ▶ Select the station shown .
- ▶ Press  to confirm. A TuneMix station logo is created in the radio menu.

Activating/deactivating TuneStart

Multimedia system:

▶ Switch **TuneStart** on or off.**Switching on satellite radio playback control**

Multimedia system:



You can pause the playback of the current station or skip forward or backward in the timeline. This leaves live mode to access the internal temporary storage.

▶ **To show the timeline:** press .

▶ **To fast forward/rewind:** tap anywhere on the timeline.

▶ **To pause playback:** select .

▶ **To return to live mode:** navigate to the end of the timeline.

Displaying satellite radio service information

Multimedia system:

▶ Select **Service Information**.**Sound****Tone settings****Information about the sound system**

The sound system has a total output of 125 W and is equipped with seven speakers. It is available for all functions in the radio and media modes.

Calling up the sound menu

Multimedia system:



The following functions are available:

- **Equalizer**
- **Balance and Fader**
- **Volume**

▶ Select a function.

Adjusting treble, mid-range and bass settings

Multimedia system:

▶ Set **TREBLE**, **MID** or **BASS**.**Activating/deactivating automatic volume adjustment**

Multimedia system:



Automatic volume adjustment compensates for differing volumes when changing between audio sources and within an audio source.

▶ Switch **Automatic Adjustment** on or off.