

For further information on energy consumption, see the vehicle Operator's Manual.

Displaying the fuel consumption

A bar graph displays the fuel consumption.


- ▶ Call up **Vehicle Settings** (▷ page 54).
- ▶ To select **Consumption**: turn and press the controller.
The fuel consumption for the last 15 minutes of the journey is shown.

Switching the ionization on/off

The ionization has a cleansing effect on the air in the vehicle interior. You can find further information on the ionization in the vehicle Operator's Manual.

- ▶ Call up **Vehicle Settings** (▷ page 54).
- ▶ To select **Ionization**: turn and press the controller.
The ionization is switched on or off, depending on the previous status: press and turn the controller.

Exiting a menu

- ▶ Press the  button.

Seats

 
Overview

You can configure the following seat functions in the menu:

- Backrest side bolsters
- Lumbar
- Seat cushion
- Massage
- Dynamics
- Seat heating balance

i There may be fewer settings or none depending on your vehicle's equipment.




Selecting the adjustment function and seat

- ▶ Press the  button on the COMAND control panel.

or


- ▶ To select **Vehicle** from the main function bar: turn and press the controller.
The vehicle menu is displayed.
- ▶ To select **Seat Settings**: turn and press the controller.
The seat settings menu is shown.

or

- ▶ Press the  button on the controller.
The seat settings menu is shown.
- ▶ To select the required seat function: turn and press the controller.
- ▶ To switch between **Driver** and **Front Passenger**: slide   the controller.

Adjustment functions

 
 

Adjusting the backrest side bolsters

- ▶ Call up the seat functions (▷ page 56).
- ▶ To select **Backrest Sides**: turn and press the controller.
- ▶ To change the setting: turn the controller.
You will see the changes you have made in the settings display.
- ▶ **To exit the menu**: press the  button.



Adjusting the seat contour in the lumbar region of the seat backrest

This function allows you to adjust the air cushions in the lumbar region of the backrest (4-way lumbar support).


- ▶ Call up the seat functions (▷ page 56).
- ▶ To select **Lumbar**: turn and press the controller.
- ▶ To activate the setting element: press the controller.

- ▶ To change the setting: slide  or  the controller. The change will be visible in the setting element.
- ▶ **To exit the menu:** press the  button.

 
Adjusting the seat cushion

- ▶ Call up the seat functions (▷ page 56).
- ▶ To select **Seat Surface**: turn and press the controller.
- ▶ To select a seat: slide  the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.
- ▶ **To exit the menu:** press the  button.

Adjusting the driving dynamics

- ▶ Call up the seat functions (▷ page 56).
- ▶ To select a seat: slide  the controller.
- ▶ To select **Dynamic Multicontour Seat**: turn and press the controller.

You can select:

- **0**: Off
- **1**: Level 1 (weak)
- **2**: Level 2 (strong)
- ▶ To select the setting: turn the controller.
- ▶ **To exit the menu:** press the  button.

Message programs

Overview

You can select the following message programs:

- **Relaxing Massage**
Massage the entire back, rising waves, soothing downward movements
- **Activating Massage**
Mobilizing massage and rising and descending dynamic waves

 
 
- **Classic Massage**

Single and twin waves moving upwards across the entire back

- **Mobilizing Massage**

Mobilization via stronger single and twin waves moving upwards across the entire back


Selecting a message program

- ▶ Call up the seat functions (▷ page 56).
- ▶ To select **Message**: turn and press the controller.
- ▶ To select a seat: slide  the controller.
- ▶ To select message programs: turn and press the controller. The message program runs for approximately 15 to 25 minutes, depending on the setting.
- ▶ **To exit the menu:** press the  button.

 
Seat heating balance

The balance function controls the distribution of heat on the seat backrest and cushion.

The balance function influences the currently set heating level of the seat heating (see the vehicle Operator's Manual).

- ▶ Call up the seat functions (▷ page 56).
- ▶ To select **Seat Heating Balance**: turn and press the controller.
- ▶ To select a seat: slide  the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.

The settings represent the following:

- **0** – the backrest and seat cushion are evenly heated according to the setting selected with the seat heating button.
- **1 to 3** – the heat output to the seat cushion is reduced one level at a time.
- **-1 to -3** – the heat output to the backrest is reduced one level at a time.
- ▶ **To exit the menu:** press the  button.