


Engine 256.9 in model 167, 213, 222, 238, 257, 290

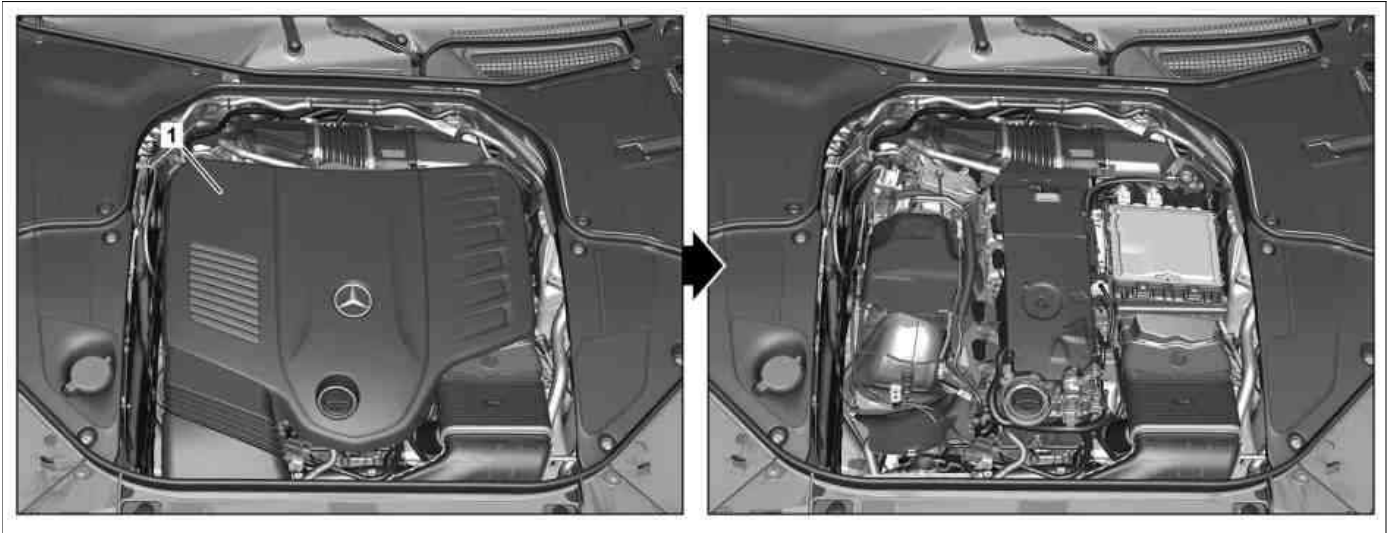


P09.10-2410-08

Shown on engine 256.9 in model 222.159


1 Engine cover

Shown on engine 256.9 in model 222.159

2 Clips

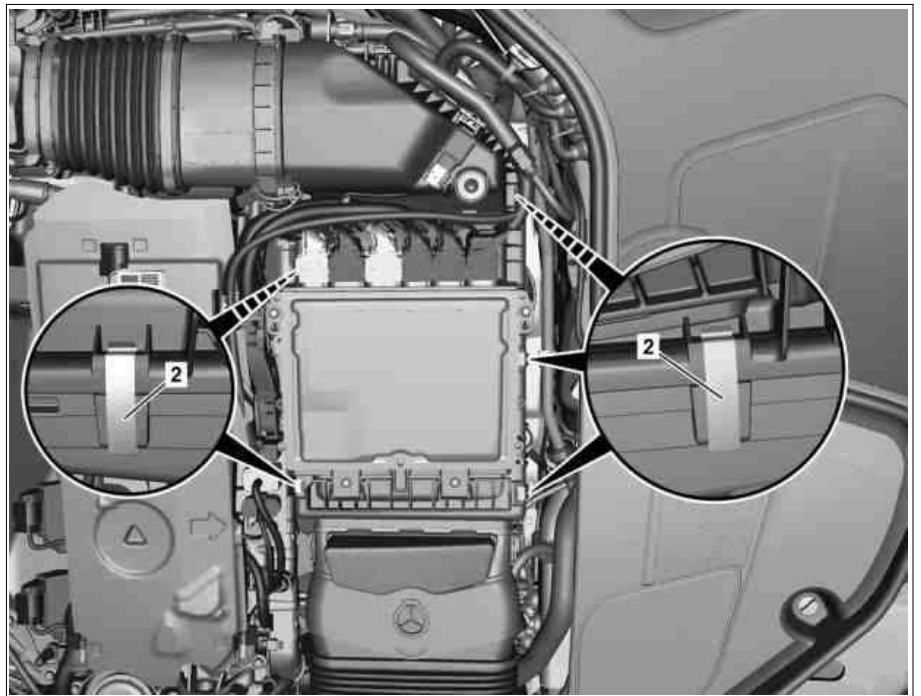

P09.10-2414-06

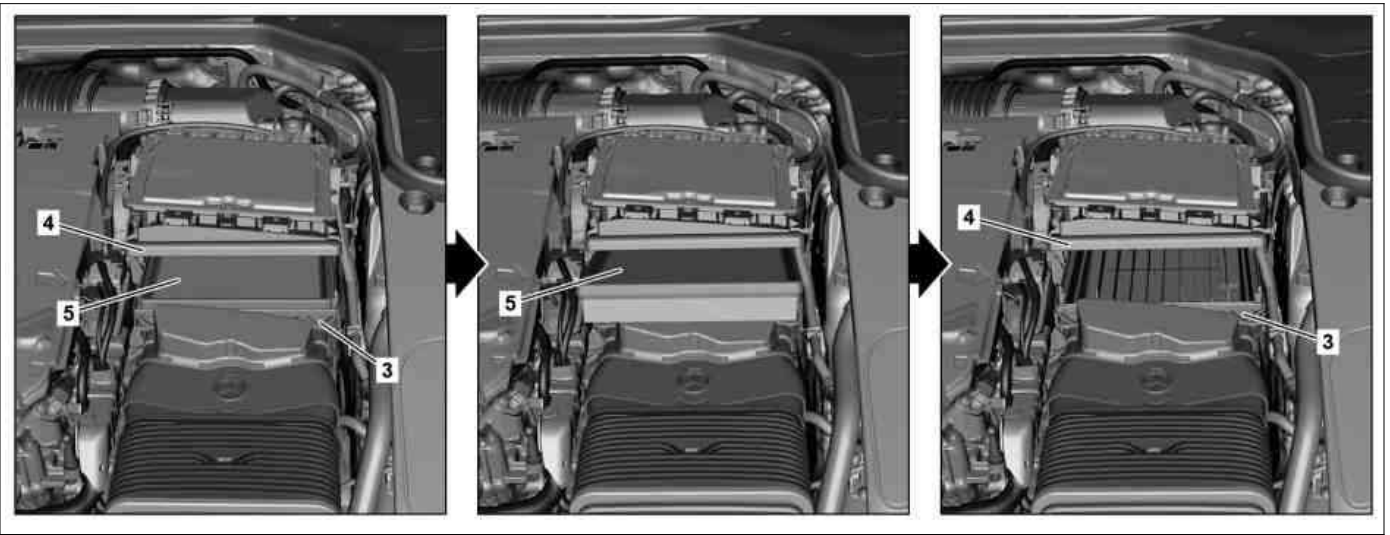

P09.10-2415-08

Shown on engine 256.9 in model 222.159

3 Air cleaner housing
4 Air filter housing cover

5 Air filter element

	Warning	Risk of injury. Skin or eye injuries may result when handling hot or glowing objects.	Wear protective gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
		Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
		Remove		
1		Remove engine cover (1).	Engine 256.9 in model 167 Engine 256.9 in model 222 Engine 256.9 in model 213, 238, 257, 290	AR01.10-P-2405MSC AR01.10-P-2405MRT AR01.10-P-2405MSA
	AR	2	Release clamps (2).	
	AR	3	Lift air filter housing cover (4).	
	AR	4	Remove air filter element (5).	
			Clean	
5		Clean inside of air filter housing (3) and air filter housing cover (4).		
			Install	
6		Insert new air filter element (5) into air filter housing (3).		
7		Fit air filter housing cover (4) and secure with clamps (2).	Ensure that air filter housing cover (4) is seated correctly on the air filter housing (3). Damage can otherwise occur.	
8		Install engine cover (1).	Engine 256.9 in model 167 Engine 256.9 in model 222 Engine 256.9 in model 213, 238, 257, 290	AR01.10-P-2405MSC AR01.10-P-2405MRT AR01.10-P-2405MSA
	AR			
	AR			
	AR			