


**MODEL 166, 172, 176, 231, 242, 246**

**Shown on model 172.457**

- A1p13 Multifunction display  
 S110s1 Scroll forward/back button  
 S110s3 System selection button  
 S110s4 "Back" and voice control system OFF button  
 S110s6 OK button  
 S111s3 Accept/terminate phone call button

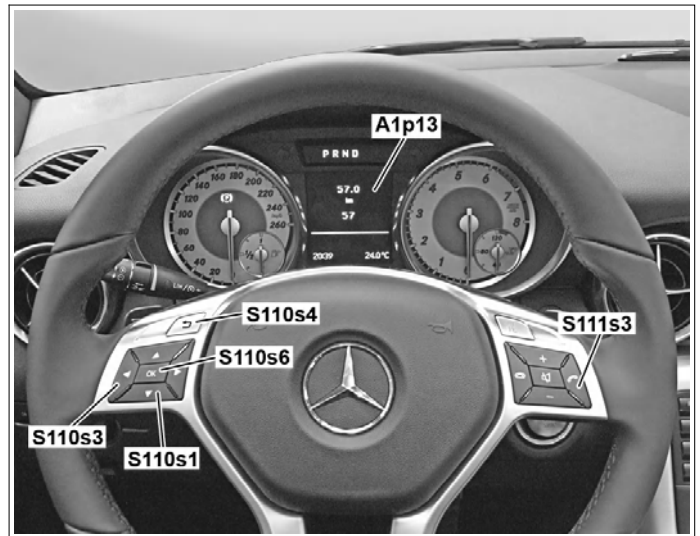

P54.32-9043-11

	Reset service indicator		
1	Close engine hood, doors and trunk lid		
2	Turn transmitter key in electronic ignition lock control unit to position "1"	<b>i</b> The standard display (total distance) must appear in the multifunction display (A1p13), if necessary repeatedly press the scroll forward/back button (S110s1).	
3	Repeatedly press system selection button (S110s3) until the "Trip" menu item is highlighted in the multifunction display (A1p13).	<b>i</b> "Trip" remains selected for approx. 5 s. Operation step 4 must be carried out within this time.	
4	First press and hold the Accept/Terminate phone call button (S111s3), then - within 1 s, press the OK(S110s6) button.	<b>i</b> Press and hold Accept/Terminate phone call button (S111s3) and OK button (S110s6) for approx. 5 s: The multifunction display (A1p13) then shows the Workshop menu with the "Vehicle data", "Dynamometer test", "Brake pad replacement" and "ASSYST PLUS" tabs.	
5	Press scroll forwards and backwards button (S110s1) repeatedly, until "ASSYST PLUS" is highlighted and confirm selection with the OK (S110s6) button	<b>i</b> The multifunction display (A1p13) shows the "Service Data" and "Full Service" tabs.	
6	Press scroll forwards and backwards button (S110s1) until "Full Service" is highlighted and confirm selection with OK (S110s6) button	<b>i</b> The multifunction display (A1p13) shows the current service items, e.g. "Service 1" and "Service 3", as well as "Confirm Service".	
7	Press scroll forwards and backwards button (S110s1) repeatedly until "Confirm service" is highlighted and confirm selection with the (S110s6) button	<b>i</b> The multifunction display (A1p13) shows the engine oil selection, e.g. "Oil Quality 229.3" or "Oil Quality 229.5".	
8	Select specification for engine oil used with scroll forwards and backwards button (S110s1) and confirm selection with the OK(S110s6) button	<b>i</b> The multifunction display (A1p13) then shows the selected oil quality and "Service performed?".  <b>i</b> Engine 270, 271, 276 To achieve the maximum service interval, engine oil which complies with the Specifications for Operating Fluids, Sheet 229.5 must be used and confirmed!	
9	Press scroll forwards and backwards button (S110s1) repeatedly until "Yes" is highlighted and confirm selection with the OK (S110s6) button	<b>i</b> The multifunction display (A1p13) then shows "Take-back not possible", "Cancel" and "Confirmation".	
10	Press scroll forwards and backwards button (S110s1) repeatedly until "Confirmation" is highlighted and confirm selection with the OK (S110s6) button	<b>i</b> The multifunction display (A1p13) shows "Full Service Performed".	

11	Press and hold OK button (S110s6) and repeatedly press "Back" and VCS Off (S110s4) button until the multifunction display (A1p13) shows the standard display (total distance)		
12	Turn transmitter key in electronic ignition lock control unit to position "0"		