


Model 164, 166, 292

Shown on model 164

- 1 Outside temperature indicator electrical connector  
 2 Outside temperature indicator temperature sensor

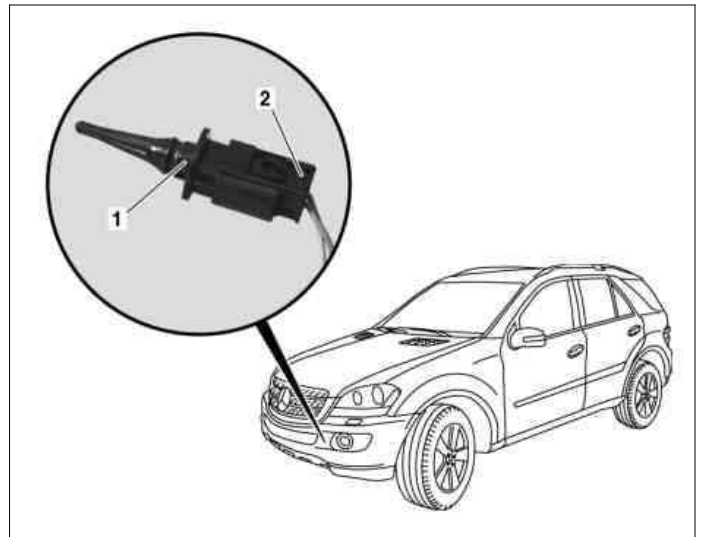

P54.30-8251-11

☒ ☒	Remove/install		
1	Switch off ignition and keep transmitter key at a location beyond transmitter range (at least 2 m)		
2.1	Remove radiator grille	Model 164, 166 Model 164.1 as of model year 2009 Model 164.1 up to model year 2008 Model 164.8 up to model year 2009 Model 164.8 as of model year 2010 Model 166.0	AR88.40-P-4001GZA  AR88.40-P-4001GZ  AR88.40-P-4001GY  <b>AR88.40-P-4001GQ</b>
2.2	Remove front bumper	Model 292	AR88.20-P-2000GQC
3	Pull outside temperature indicator temperature sensor (2) out of bracket in bumper	<b>i</b> <b>Installation:</b> Insert the temperature sensor into the bracket in the bumper until it engages.	
4	Disconnect outside temperature indicator electrical connector (1) and remove outside temperature indicator temperature sensor (2)		
5	Install in the reverse order		
6	Perform function test		