Model 166


60% rear seat

Modification notes

29.01.2019	Special tools, added.	Operation steps 4, 5.	
31.01.2019	Operation step added.	Operation step 4.	


Shown on model 166 with code 282 (Through-loading feature)

- 3 Covers
- 4 Rear backrest trim, 60%
- 5 Flap
- 6 Mounting clip
- 7 Cover for through-loading feature

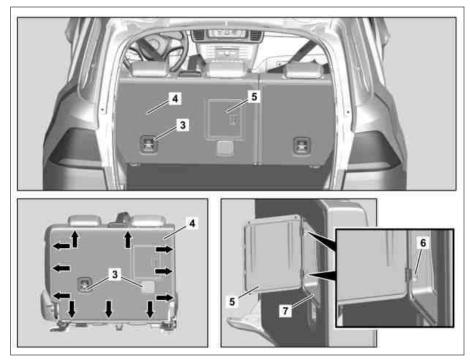

P91.12-4131-06

- 4 Rear backrest trim, 60%
- 7 Cover for through-loading feature
- 8 Retaining clips

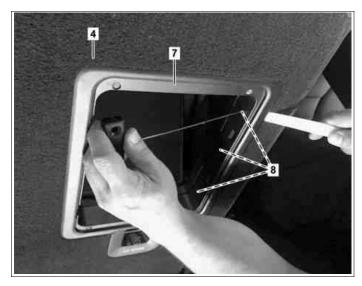


P91.12-A013-11

XX	Remove/install		
1	Fold 60 % rear seat backrest forward.		
2	Unclip covers (3) of 60 % rear seat backrest.	S Long wedge	*115589035900
3	Remove flap (5) from through-loading feature cover (7).	Model 166 with code 282 (Through-loading feature)60% rear seat	
4		Removal: Guide extraction hook through hole openings and release the catch tab positioned behind it.	

5	Unclip remaining retaining clips (6) and remove through-loading feature cover (7) from guide.	rear seat Installation:	*115589035900 *140589023300
		Extend foldable armrests and open hatch. This allows the frame to be inserted correctly when it engages.	
		S Long wedge Extraction hook	*115589035900 *140589023300
6	Pull out rear backrest cover side lip (arrows) on back of 60 % rear seat backrest trim (4).	S Long wedge	*115589035900
7	Remove 60 % rear seat backrest trim (4).		
8	Install in the reverse order		



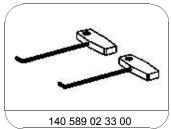

Extraction hook