Model 166


as of model year 2016

Model 292


Shows model 166.0

F32/3 Engine compartment prefuse box F58 Engine compartment fuse and

relay module

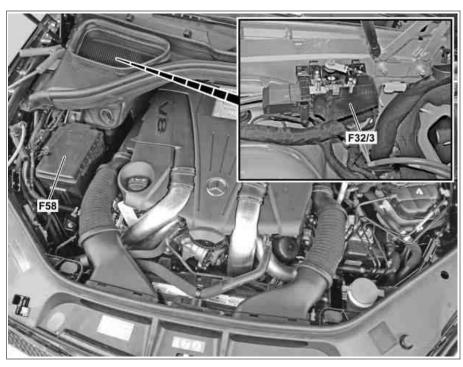

P54.15-3721-06

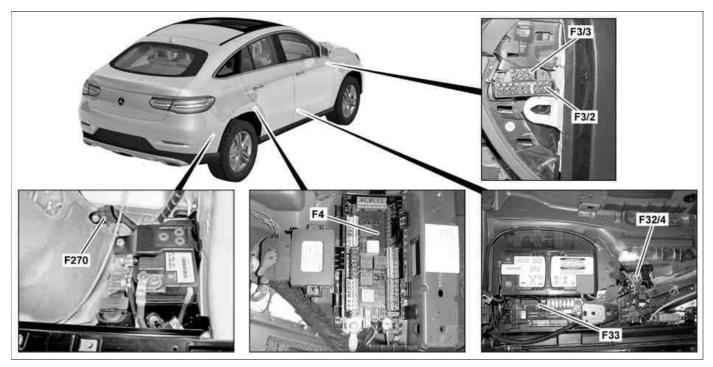

P54.15-3723-09

Shown on model 292

F3/2 Cockpit circuit 30 fuse box F32/4 Interior prefuse box

F3/3 Cockpit circuit 30g fuse box F33 Battery compartment prefuse box

F4 Rear fuse box F270 Buffer battery protection (on model 166.063)

i The rear fuse box is located under the right rear seat and under the left rear seat.

ATO and maxi fuses may only be replaced by fuses that meet the Mercedes-Benz standard: MBN10153-2. ATO and MAXI fuses are installed in the engine compartment fuse and relay module, in the rear fuse box, and in the interior prefuse box.

Shown on right-hand drive vehicle

F17 Electronic Toll Collection preinstallation electrical fuse (with CODE 498 (Japan version) and CODE 531 (COMAND APS))



P54.15-3722-05

i The Electronic Toll Collection preinstallation electrical fuse is inserted in the Japanese "vehicle preparation center".

Shown on model 292

K129 Spray nozzle hose heaters relay



P54.15-3855-06

i The spray nozzle hose heater relay is located at the right in front of the windshield below the water drain.

Fuse assignment in cockpit fuse box	F3/2, F3/3	GF54.15-P-1256-22GN
Assignment of rear fuse and relay module	F4	GF54.15-P-1256-30GN
Fuse assignment of prefuse box in engine compartment	F32/3	GF54.15-P-1256-25GN
Fuse assignment of fuse box in interior compartment on passenger's side	F32/4	GF54.15-P-1256-11GN
Fuse assignment of battery compartment prefuse box	F33	GF54.15-P-1256-15GN
Assignment of engine compartment fuse relay module	and F58	GF54.15-P-1256-36GN