


MODEL 166**as of model year 2016****MODEL 292****Fuse assignment of cockpit fuse box**

F3/2 Fuse box, circuit 30 cockpit (electrical fuses f10 – f18)

F3/3 Fuse box, circuit 30g cockpit (electrical fuses f19 – f22)

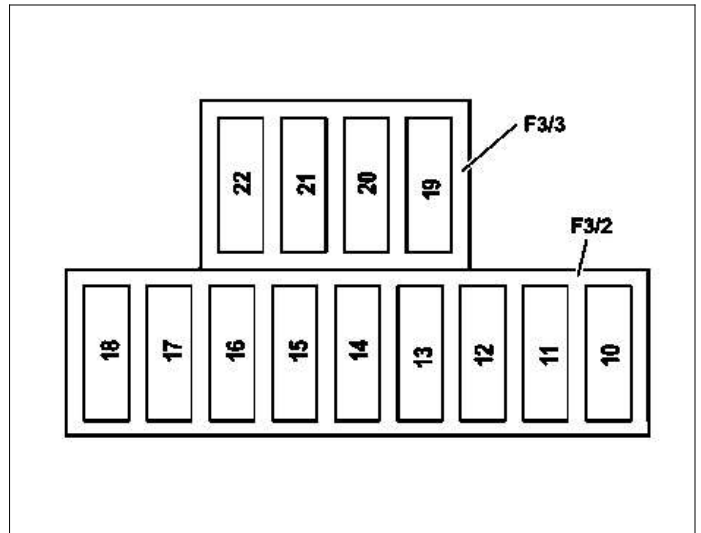

P54.15-3412-11

i The designations 10 to 22 correspond to the following fuses f10 to f22.

Fuse	Terminal	Line ID (line fused)	Fused function	Rating in amperes (A)
f10	30	0.5 RDWH	Electronic ignition lock control unit (N73)	7.5
f11	30	0.75 RDWH	Steering column tube module control unit (N80) (with CODE 238 (Active Lane Keeping Assist), CODE 443 (Steering wheel heater) or CODE 476 (Lane Keeping Assist))	10
f12	30	0.5 RDWH	Instrument cluster (A1)	5
f13	30	1.0 RDWH	Booster blower electronic blower regulator (N29/8) (with CODE 581 (Automatic air conditioning))	15
f14	30	0.5 RDWH	Diagnostic connector (X11/4)	5
f15	30	0.5 RDWH	Upper control panel control unit (N72/1)	5
f16 – f18	30	–	Spare	–
f19	30g	1.5 RDBK	AAC control and operating unit (N22/7) (with CODE 580 (A/C system) or CODE 581 (Automatic air conditioning system))	15
f20	30g	0.5 RDBK	Steering column tube module control unit (N80)	5
f21	30g	0.5 RDBK	Audio/COMAND display (A40/8)	5
f22	30g	–	Spare	–